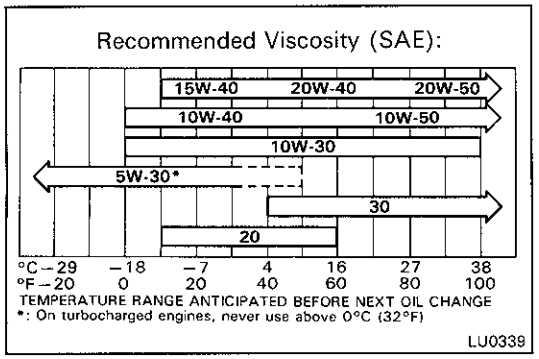


OIL PRESSURE CHECK


1. **CHECK ENGINE OIL QUALITY**

   Check the oil for deterioration, entry of water, discoloring or thinning.

   If the quality is poor, replace the oil.

   Use API grade CD or better and recommended viscosity oil. (Europe)

   Use API grade CC, CD or better and recommended viscosity oil. (Others)

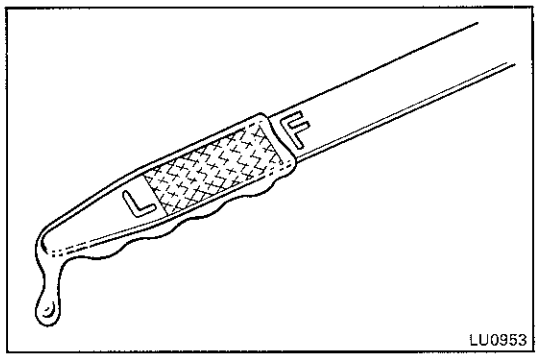


2. **CHECK ENGINE OIL LEVEL**

   The oil level should be between the "L" and "F" marks on the dipstick.

   If low, check for leakage and add oil up to "F" mark.

   NOTICE: Do not fill with engine oil above the "F" mark.

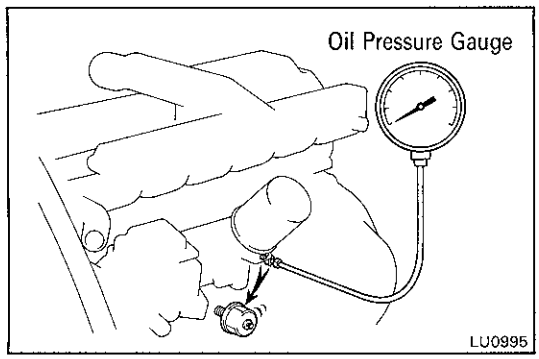

3. **REMOVE OIL PRESSURE SENDER GAUGE**

4. **INSTALL OIL PRESSURE GAUGE**

5. **WARM UP ENGINE**

   Allow the engine to reach normal operating temperature.

6. **CHECK OIL PRESSURE**

   Oil pressure:

At idling	**0.3 kg/cm^2 (4.3 psi, 29 kPa) or more**
At 3,000 rpm	**2.5 kg/cm^2 (36 psi, 245 kPa) or more**

7. **REMOVE OIL PRESSURE GAUGE**

8. **REINSTALL OIL PRESSURE SENDER GAUGE**

9. **START ENGINE AND CHECK FOR LEAKS**