
Discharging of Refrigerant in Refrigeration System

(See Air Conditioning Fundamentals and Repairs Pub. No.36950E)

Evacuating of Air in Refrigeration System and Charging with Refrigerant

(See Air Conditioning Fundamentals and Repairs Pub. No.36950E)

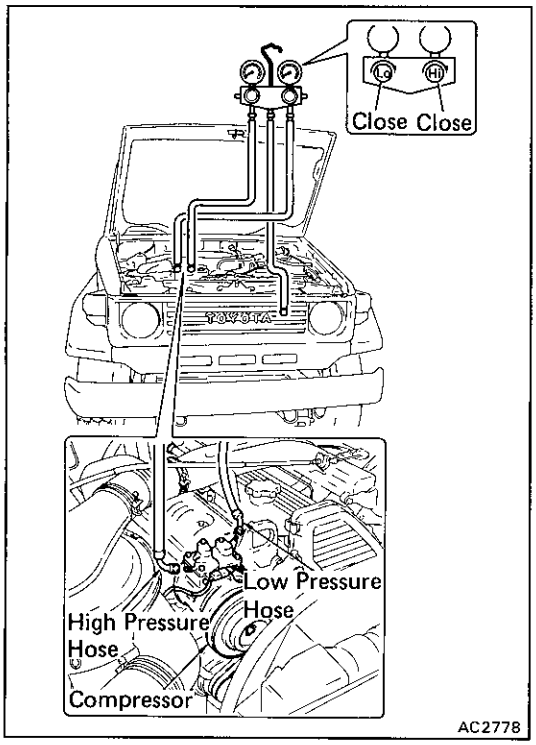

COOLING SYSTEM

Installation of Manifold Gauge Set

1. **CLOSE BOTH HIGH AND LOW HAND VALVES**

2. **CONNECT CHARGING HOSES TO CHARGING VALVES**

   (a) Connect the low pressure hose to the low pressure charging valve and the high pressure hose to the high pressure charging valve.

   (b) Tighten the hose nuts by hand.

   NOTICE: Do not apply compressor oil to the seats of the connection.