
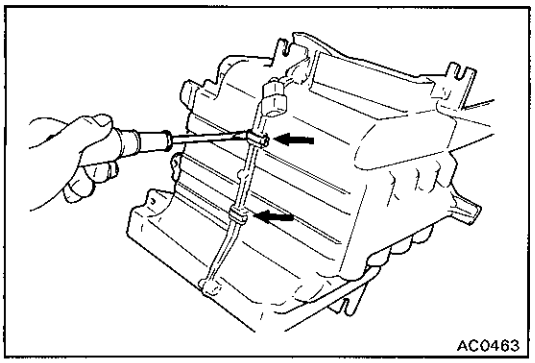


DISASSEMBLY OF COOLING UNIT

(See page AC-39)


1. **REMOVE LOWER AND UPPER CASE FROM EVAPORATOR**

   Using a screwdriver, remove the two clamps and four screws.

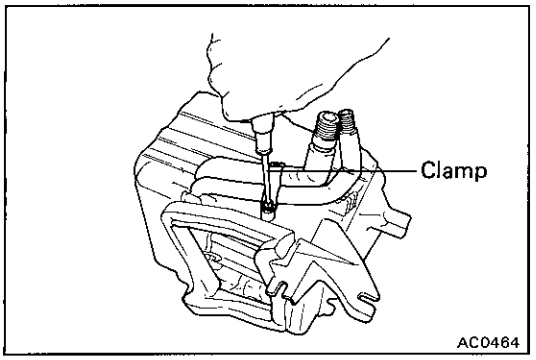

2. **REMOVE CLAMP**

   Remove two screws.

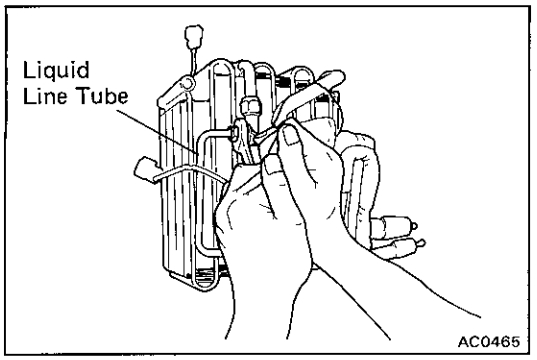

3. **REMOVE COMPONENTS FROM EVAPORATOR**

   (a) Remove the heat insulator.

   (b) Disconnect the liquid line tube from inlet fitting of the expansion valve.

   (c) Disconnect the expansion valve from the inlet fitting of the evaporator.

   (d) Remove the pressure switch, if necessary.

Evaporator

INSPECTION OF EVAPORATOR

1. **CHECK EVAPORATOR FINS FOR BLOCKAGE**

   If the fins are clogged, clean them with compressed air.

   NOTICE: Never use water to clean the evaporator.

2. **CHECK FITTINGS FOR CRACKS OR SCRATCHES**

   Repair as necessary.