


# REMOVAL AND INSTALLATION OF TRANSMISSION

Remove and install the parts as shown.

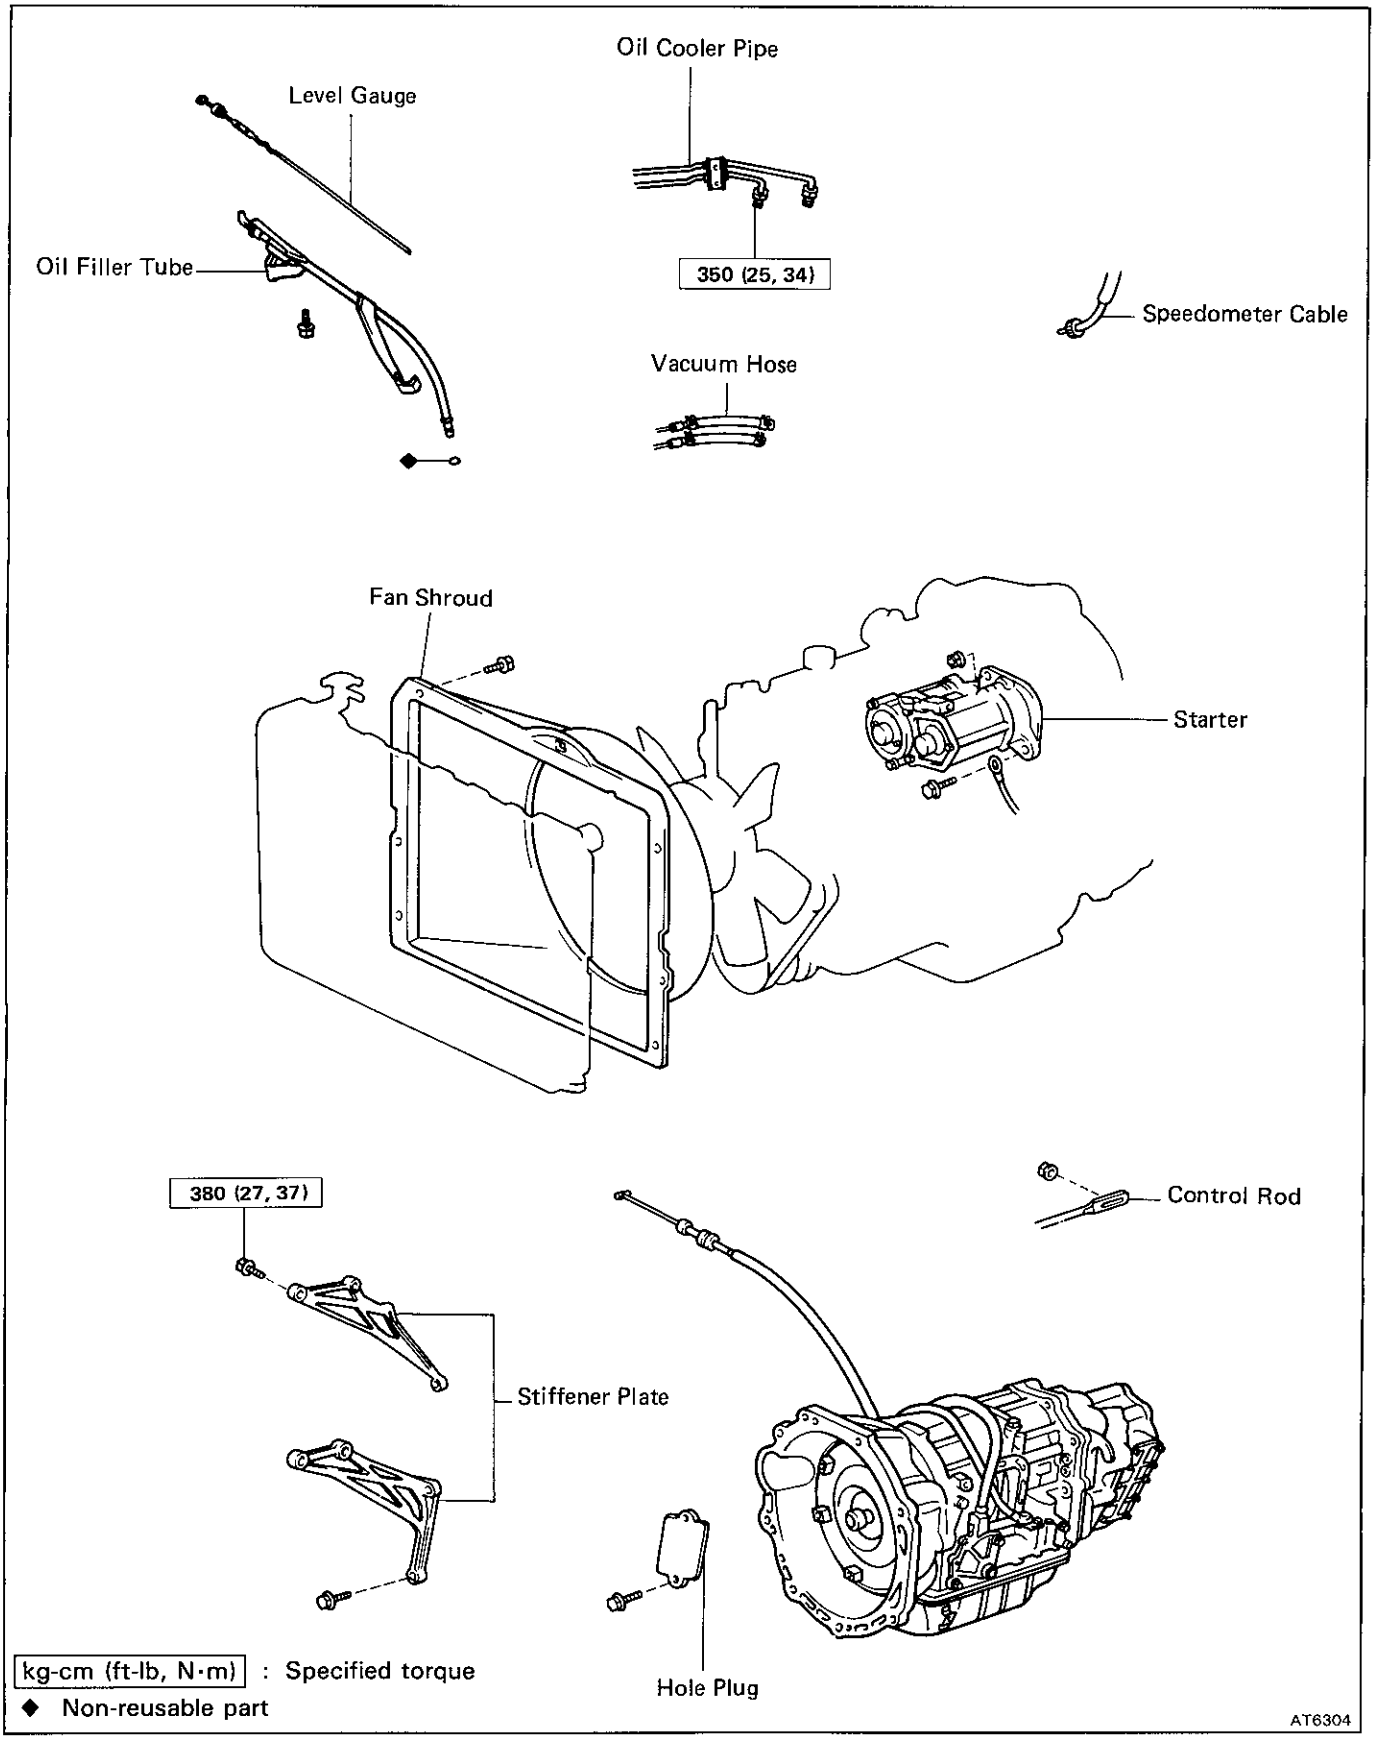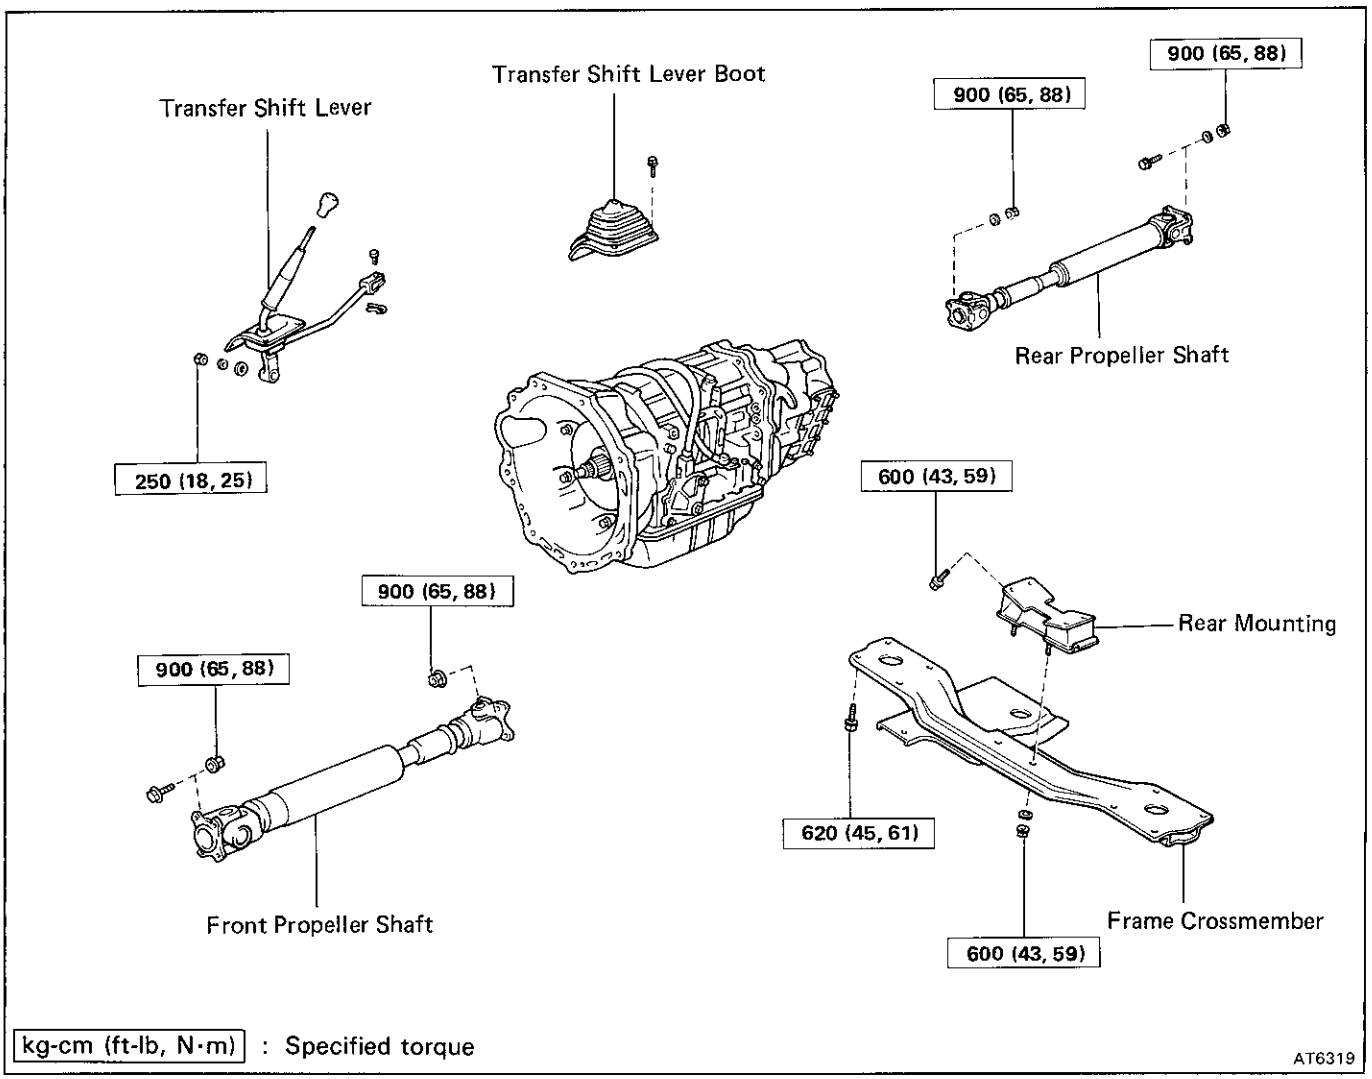

# (Cont'd)

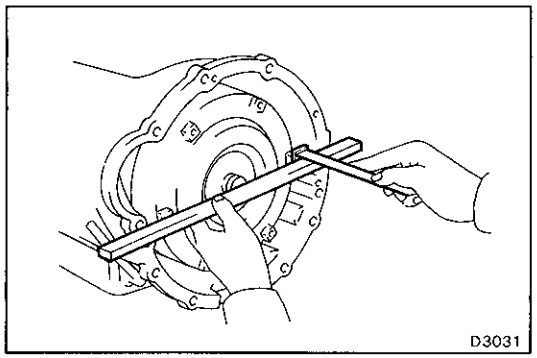


## (MAIN POINT OF INSTALLATION)

### CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure from the installed surface of the torque converter to the front surface of the transmission housing.

**Correct distance:**

**3F engine 15.7 mm (0.618 in.) or more**
**1HZ engine 43.8 mm (1.724 in.) or more**

**NOTICE: Install the converter horizontally to prevent oil seal from damage.**

If the distance is less than the standard, check for an improper installation.