

MOULDING

Windshield Moulding

COMPONENTS

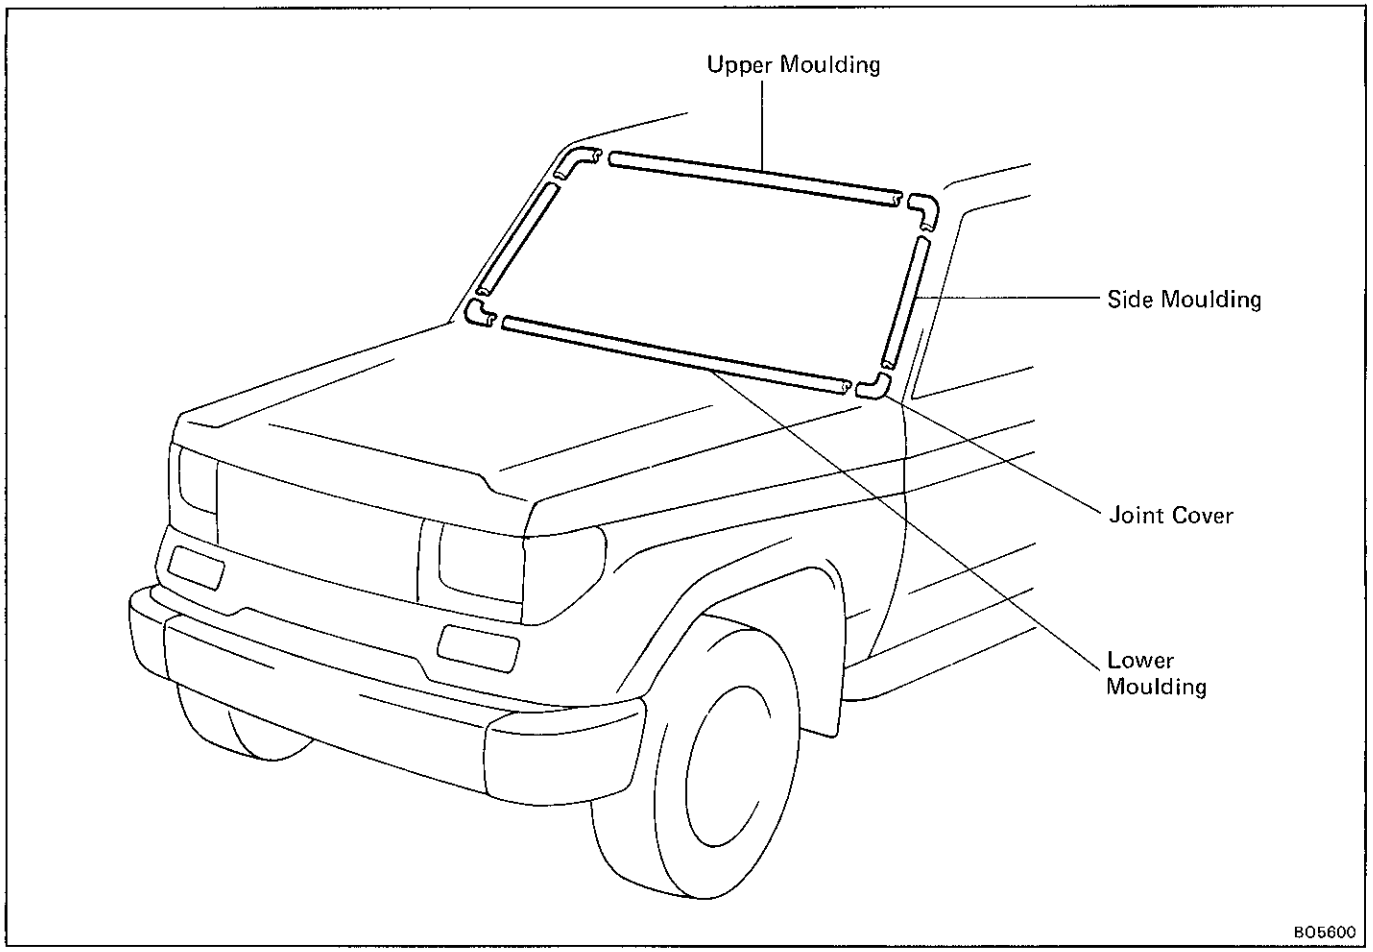

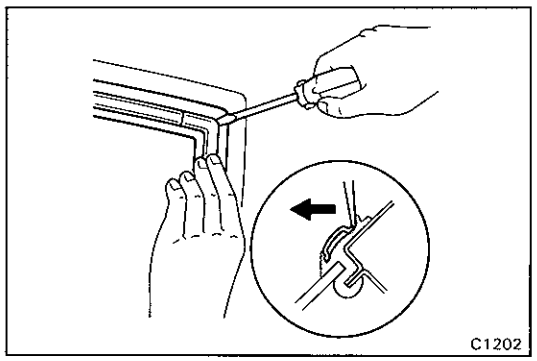

REMOVAL OF WINDSHIELD MOULDING


REMOVE JOINT COVER AND MOULDING

(a) Insert a screwdriver between the weatherstrip and joint cover to pry it out.

HINT: Tape the screwdriver tip before use.

(b) Remove the moulding from the end with a screwdriver or similar tool.

(c) Pull the windshield moulding with your hand.

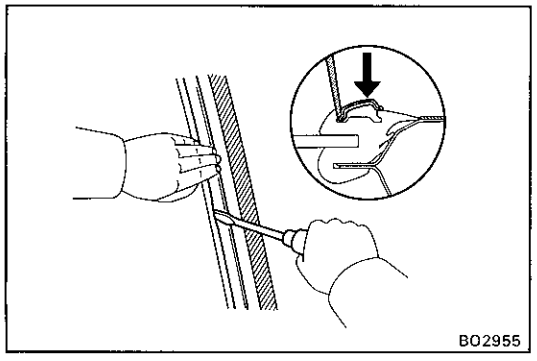

INSTALLATION OF WINDSHIELD MOULDING

INSTALL MOULDING AND JOINT COVER

(a) Apply the soapy water to the weatherstrip and the moulding.

(b) Insert oneside of the moulding rip onto the weatherstrip.

(c) Using a screwdriver, install the moulding and the joint cover.

HINT: Tape the screwdriver tip before use.