


BACK WINDOW GLASS

COMPONENTS

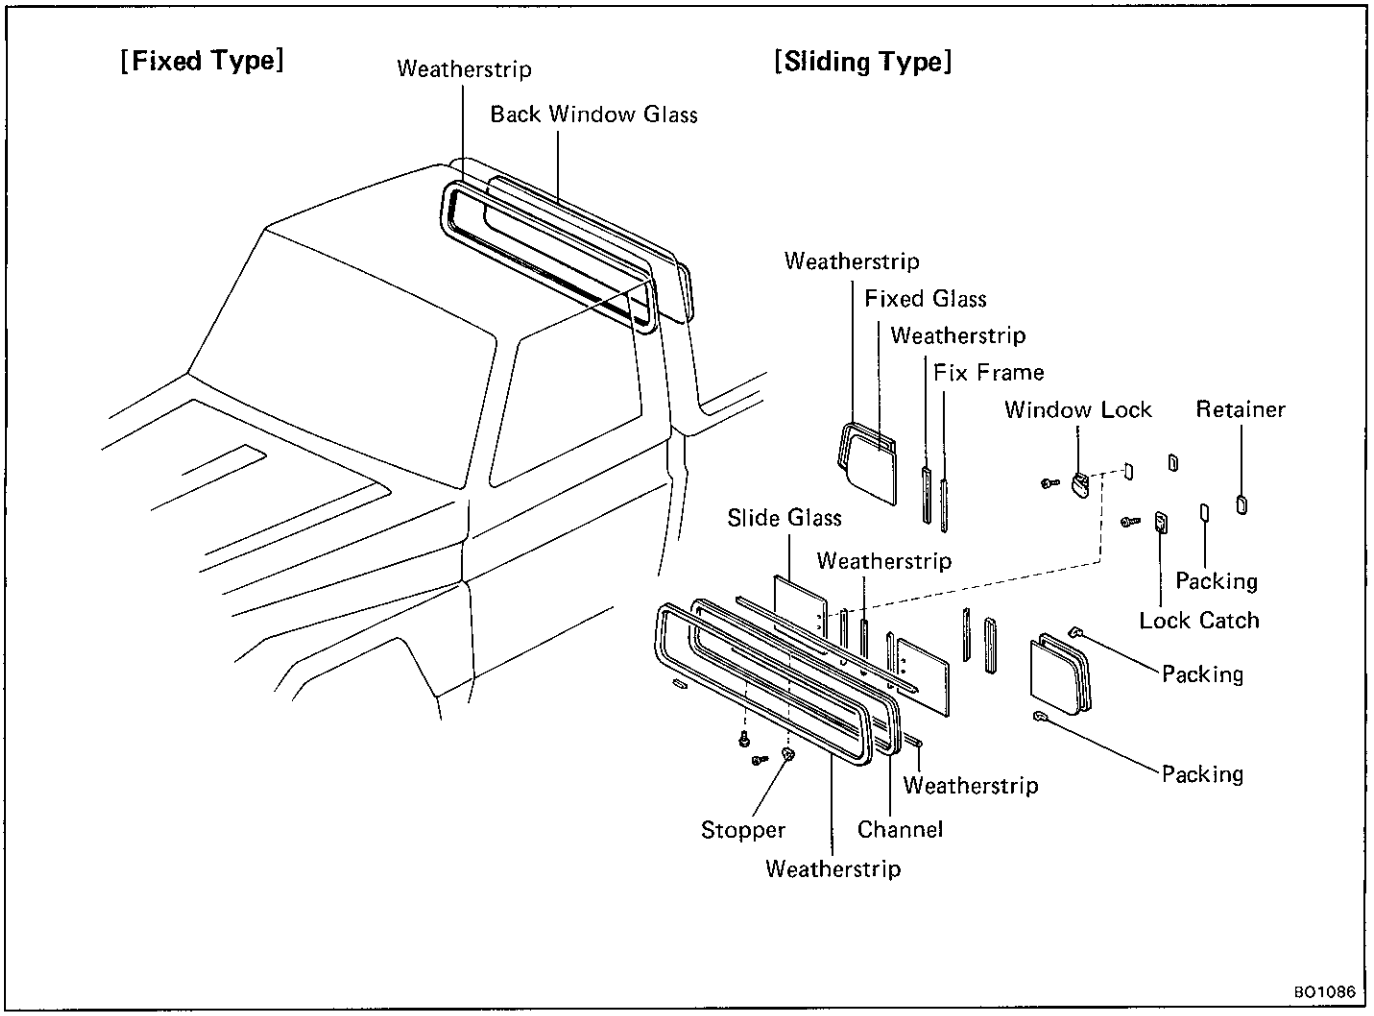

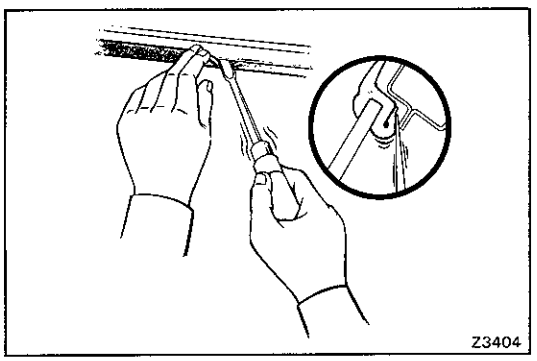

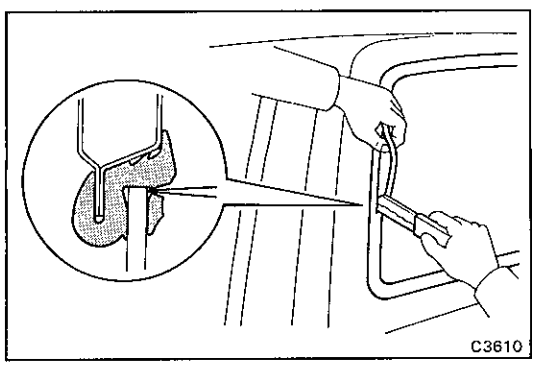

REMOVAL OF BACK WINDOW GLASS

REMOVE BACK WINDOW GLASS

Reusing the weatherstrip:


(a) From inside of vehicle, stuff lip of weatherstrip under flange with screwdriver.

(b) Push the glass out to remove.

Using a new weatherstrip:

(a) From the outside of the vehicle, cut off the weatherstrip lip with a knife.

(b) Push the back window outwards and remove the back window and weatherstrip.

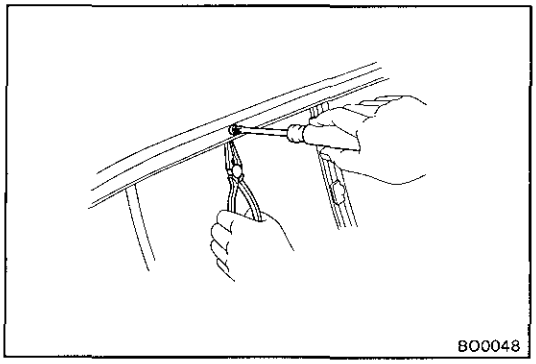


DISASSEMBLY OF BACK WINDOW GLASS (Sliding Type)

(See page BO-38)


1. **REMOVE SLIDE GLASS STOPPER**

   Remove the screw and stopper.

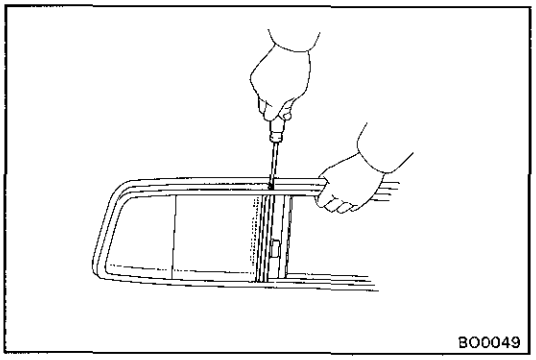


2. **REMOVE FOUR FIX FRAME SCREWS**

   Remove the four screws holding the two fix frames.

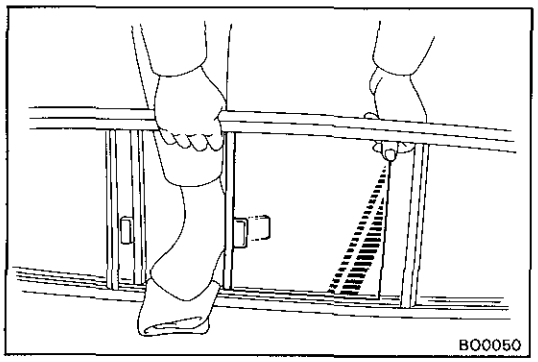

3. **REMOVE SLIDE GLASS**


   Pull apart the channels and remove the two slide glass panes at the center of the glass channel.

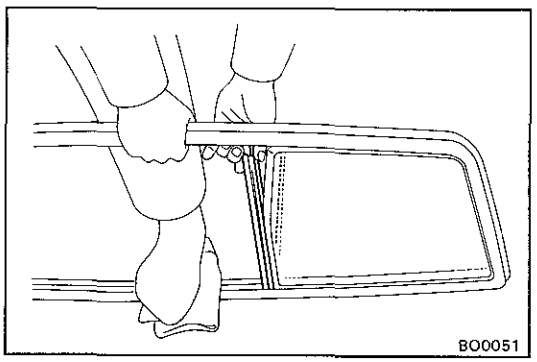

4. **REMOVE FIX FRAME**

   (a) Remove the four packings.


   (b) Pull apart the channels and remove the two fix frames as shown.

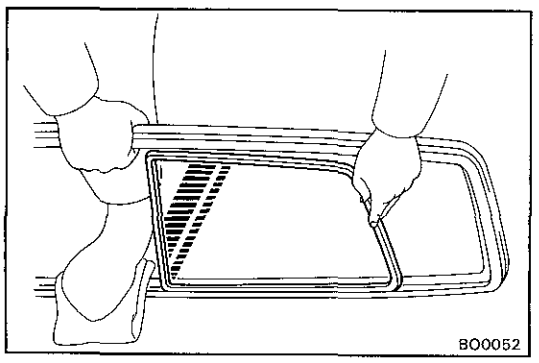

5. **REMOVE FIXED GLASS**

   Pull apart the channels and remove the two fixed glass panes with the weatherstrip as shown.

6. **REMOVE WEATHERSTRIP**

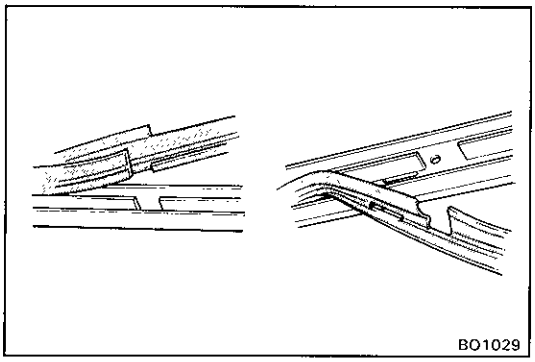


ASSEMBLY OF BACK WINDOW GLASS (Sliding Type)

(See page BO-38)

1. INSTALL WEATHERSTRIP


Align the grooves on the channel and weatherstrip and install.

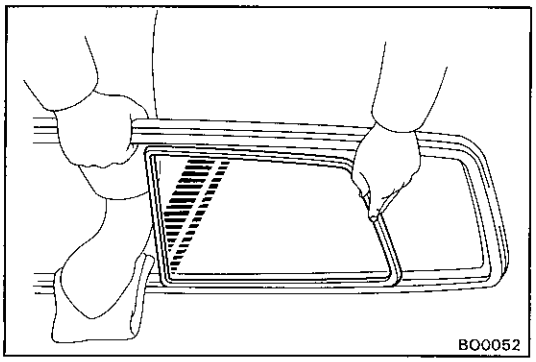

2. INSTALL FIXED GLASS

(a) Apply soapy water to the contact face of the weatherstrip and to the glass channel flange.


(b) Pull apart the channels and install the two fixed glass panes with the weatherstrip.

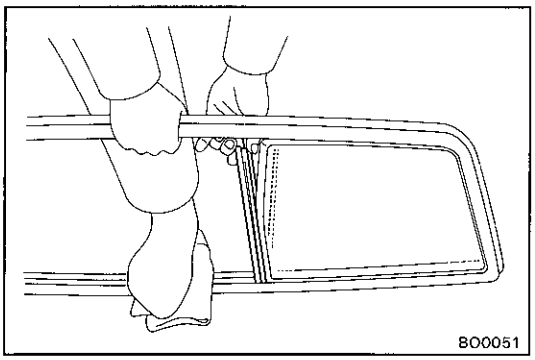

3. INSTALL FIX FRAMES


(a) Apply soapy water to the contact face of the weatherstrip and to the fix frames.

(b) Pull apart the channels and install the two fixed frames as shown.

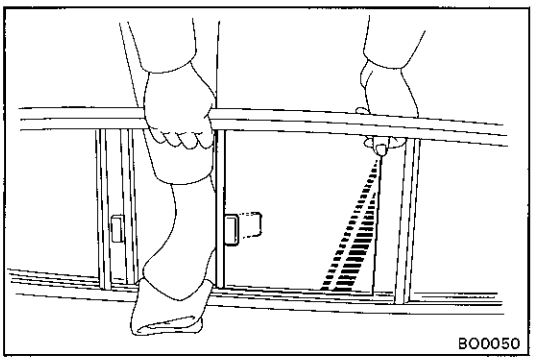


4. INSTALL SLIDE GLASS

Pull apart the channels and install the slide glass in the center of the glass channel.

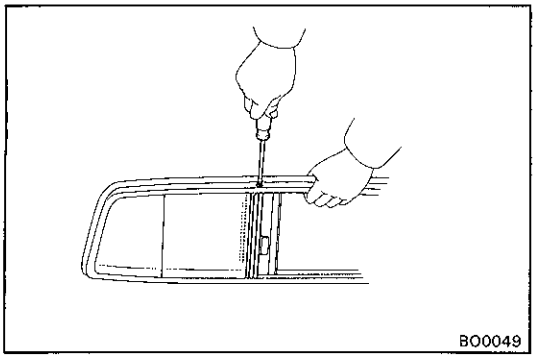


5. INSTALL FOUR FIX FRAME SCREWS AND FOUR PACKINGS

(a) Install the four screws holding the two fix frames.

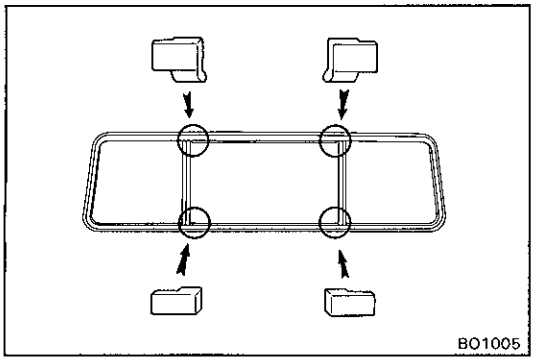


(b) Install packing (four pieces).

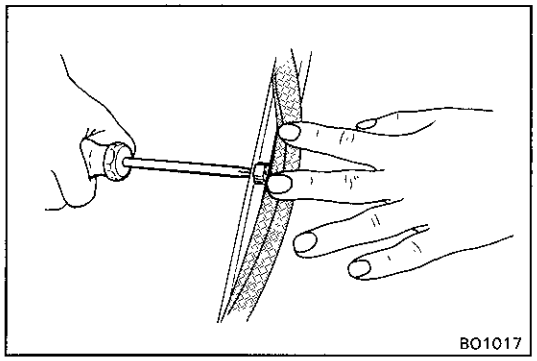

6. INSTALL SLIDING GLASS STOPPER

Install the sliding glass stopper with the screw.

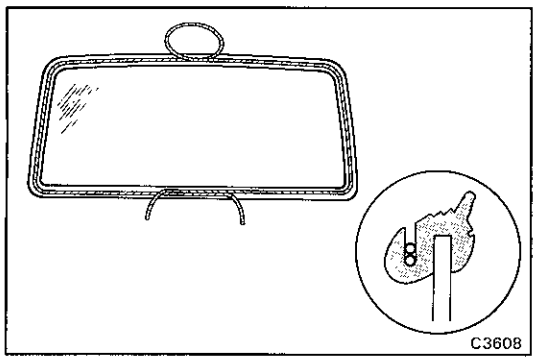

INSTALLATION OF BACK WINDOW GLASS


(See page BO-38)

1. INSTALL WEATHERSTRIP ON BACK WINDOW GLASS

(a) Attach the weatherstrip to the back window glass.


NOTICE: If the weatherstrip has become hard, it may develop leaks. Use a new one if possible.

(b) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

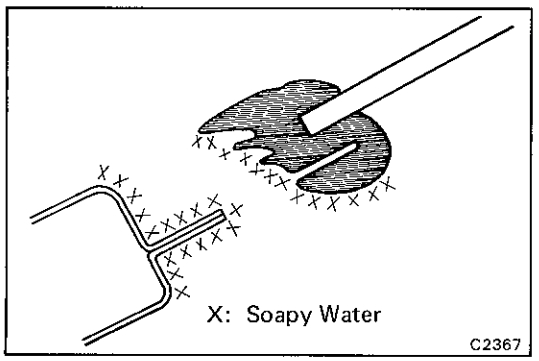


2. INSTALL BACK WINDOW GLASS

(a) Apply soapy water to the contact surface of the weatherstrip lip and to the body flange.

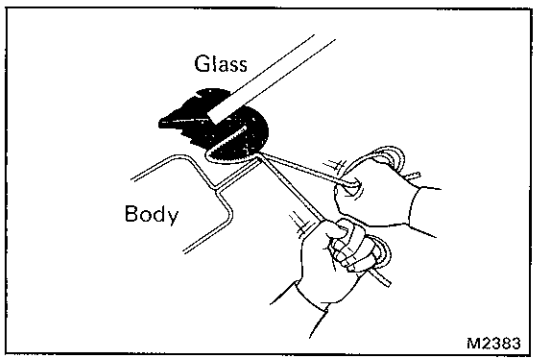


HINT: Begin installation in the middle of the lower part of the glass.

(b) Hold the back window in position on the body.

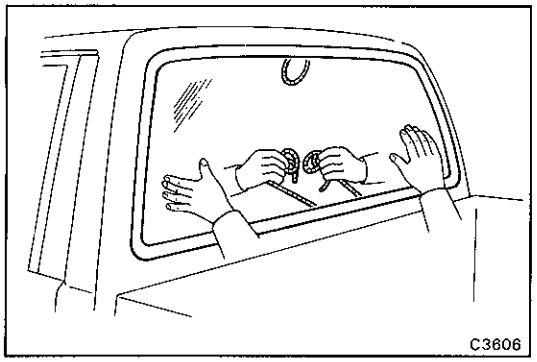

(c) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

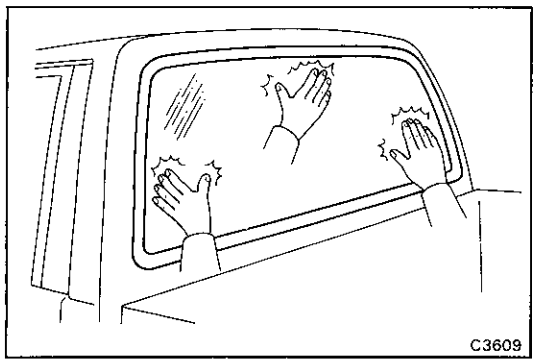

(d) Tap on the outside of the glass until it is securely in place.

3. **INSPECT FOR LEAK AND REPAIR**
(See step 7 on page BO-31)