
SEAT BELTS


COMPONENTS


Front Seat Belt

(ELR type)

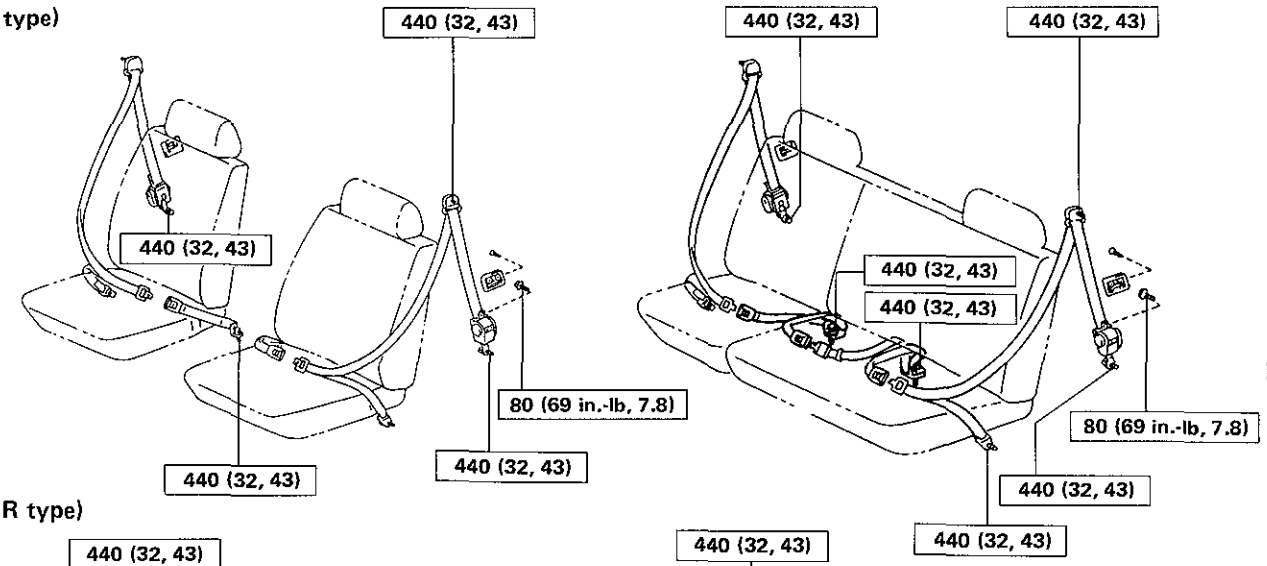

(NR type)

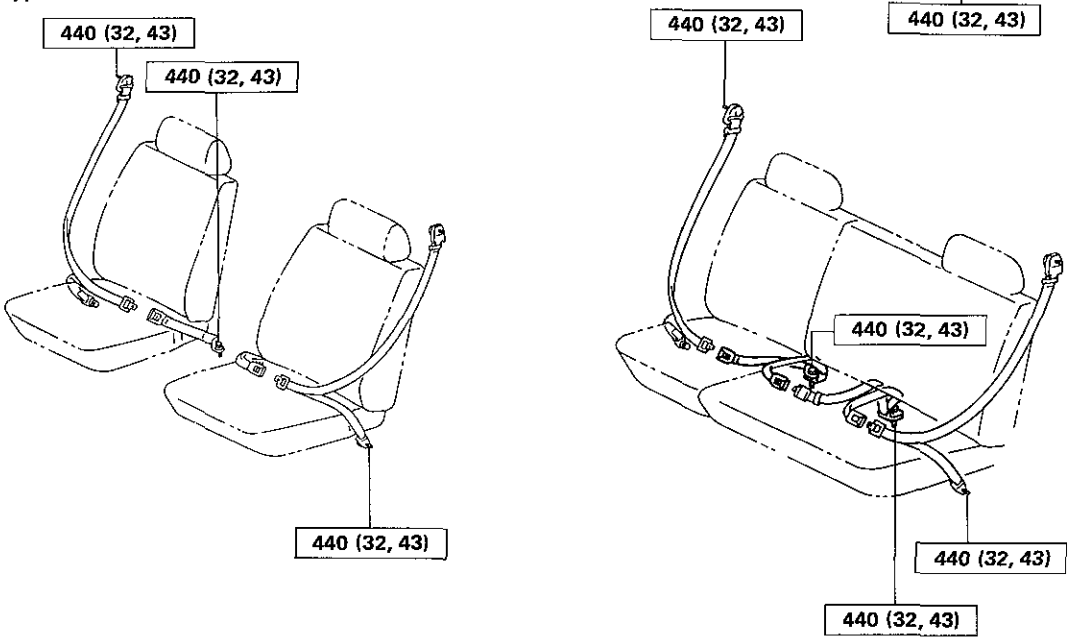

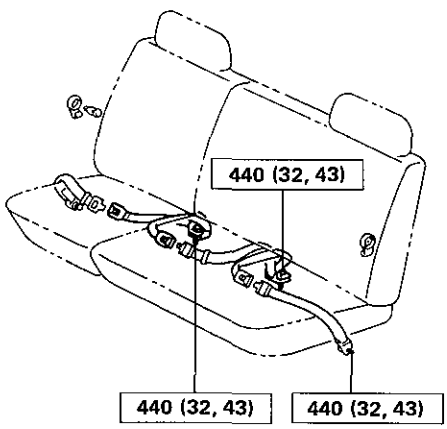


kg-cm (ft-lb, N·m) : Specified torque

BO5698


COMPONENTS (Cont'd)

Rear Seat Belt

(ELR type)

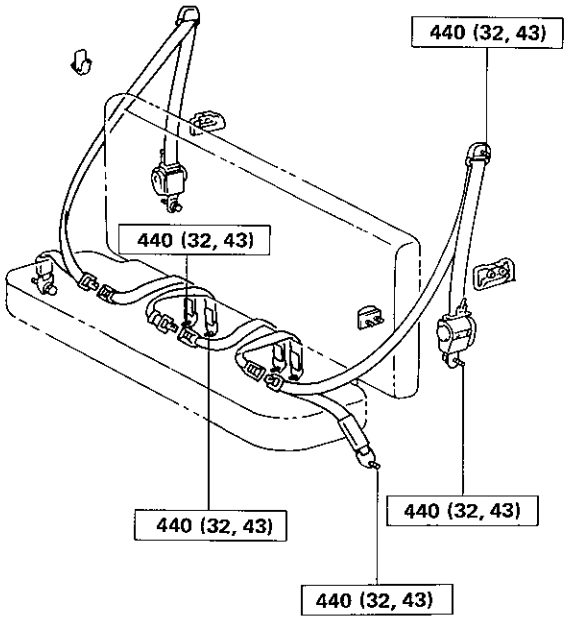


(NR type)

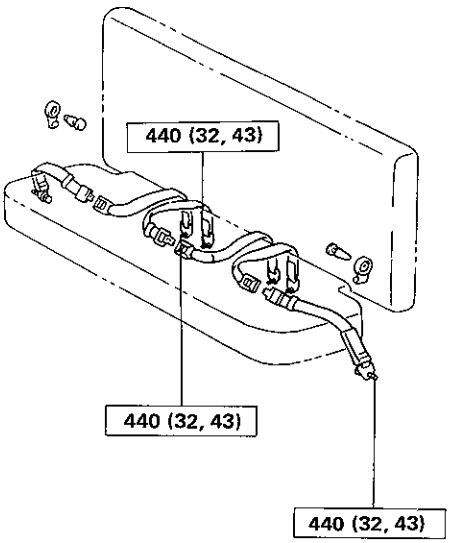


[Parallel Seat]


(NR type)

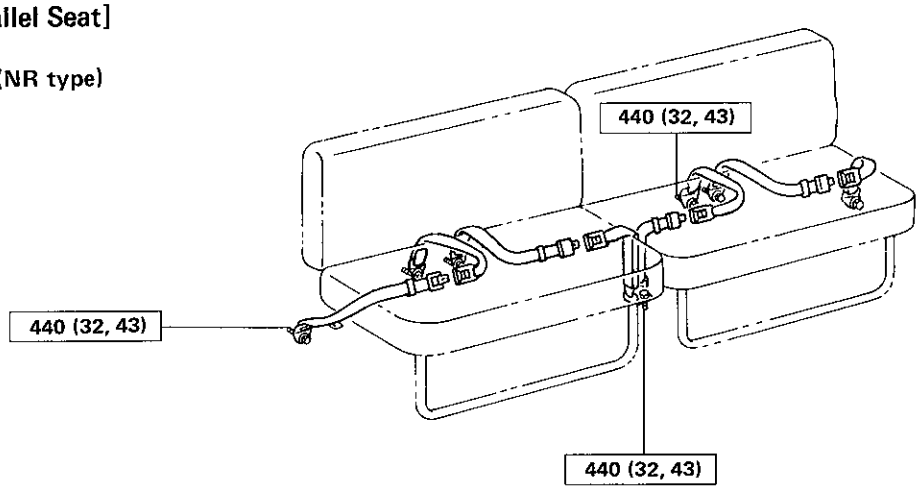


kg-cm (ft-lb, N·m) : Specified torque

BO5701
BO1123

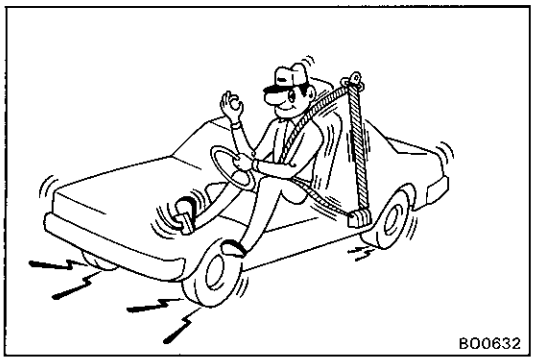
BO0632

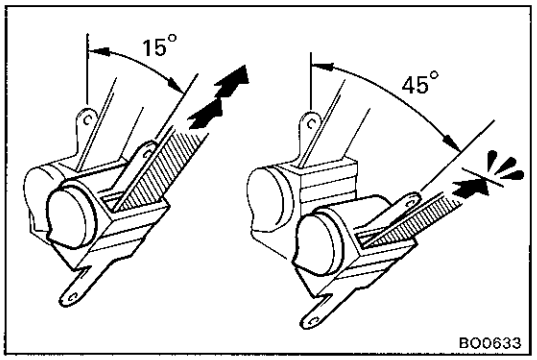

BO0633

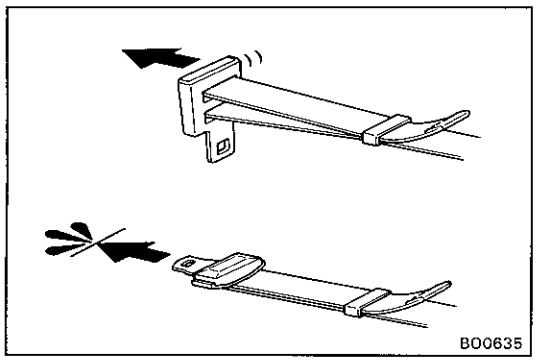
BO0635

SEAT BELTS

[Emergency Locking Retractor (ELR) Type]

1. RUNNING TEST (IN SAFETY AREA)

(a) Fasten the seat belt.

(b) Drive the car at 10 mph (16 km/h) and make a very hard stop.

(c) Check that the seat belt is locked and cannot be extended at this time.

HINT: Conduct this test in safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

2. STATIC TEST

(a) Remove the locking retractor assembly.

(b) Tilt the retractor slowly.

(c) Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.

If a problem is found, replace assembly.

(Manual Type)

TESTING

(a) Adjust the belt to the proper length.

(b) Apply a firm load to the belt.

(c) Verify that the belt does not extend.