
FUEL TANK AND LINE


COMPONENTS

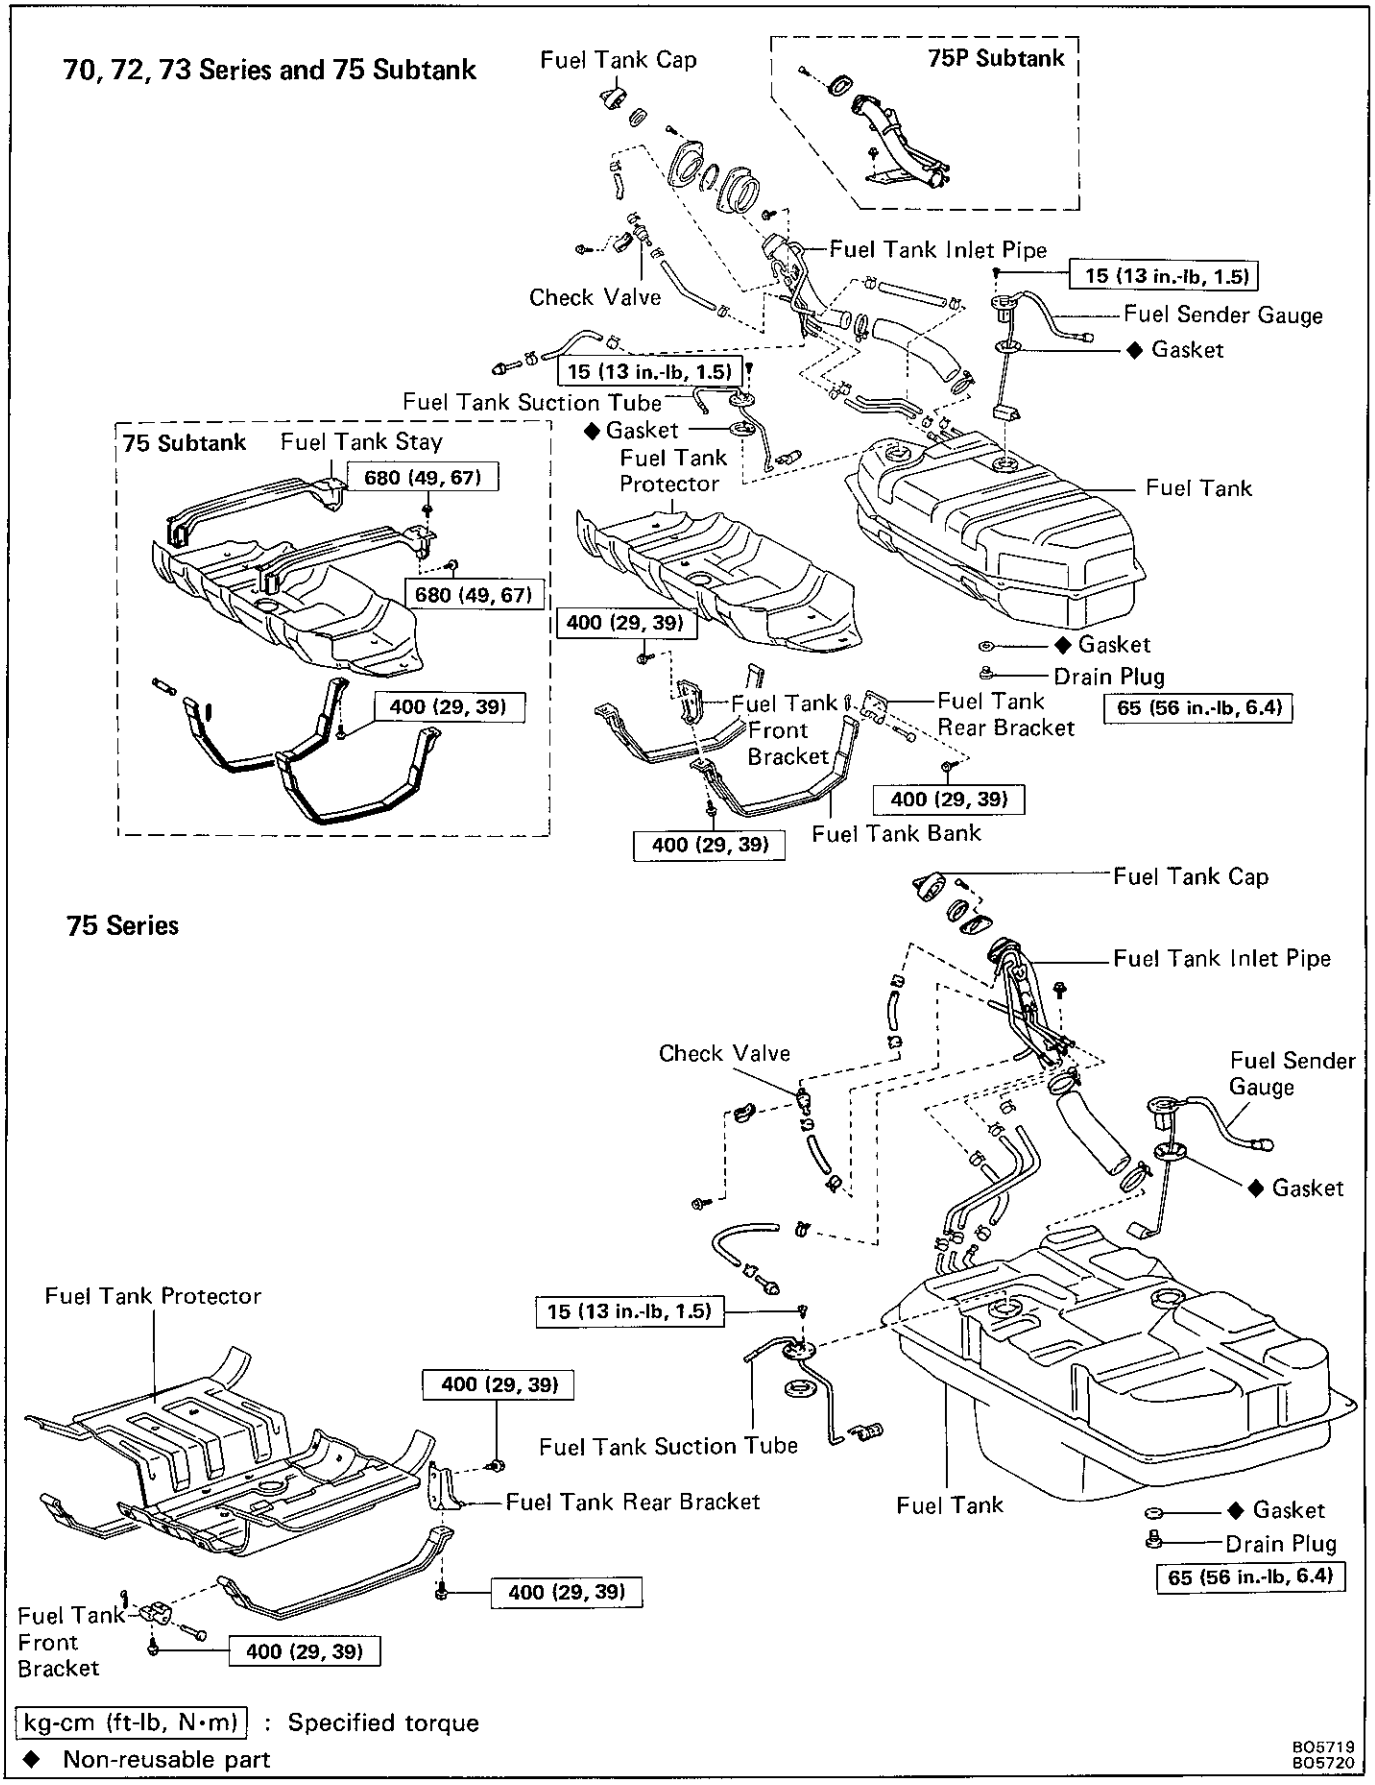

kg-cm (ft-lb, N·m) : Specified torque

◆ Non-reusable part

BO5719
BO5720

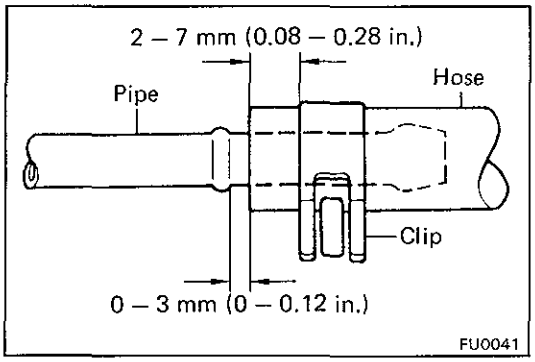

PRECAUTIONS

1. **Always use new gaskets when replacing the fuel tank or component parts.**

2. **Apply the proper torque to all tightening parts.**

INSPECT FUEL LINES AND CONNECTIONS

(a) Inspect the fuel lines and connections for cracks, leakage or deformation.

(b) Inspect the fuel tank vapor vent system hoses and connections for looseness, kinks, or damage.

(c) Inspect the fuel tank for deformation, cracks, fuel leakage or tank mount bolts looseness.

(d) Inspect the filler neck for damage or fuel leakage.

(e) Hose and tube connections are as shown in the illustration.

If problem is found, repair or replace the parts as necessary.