

Front Bearing Retainer

COMPONENTS

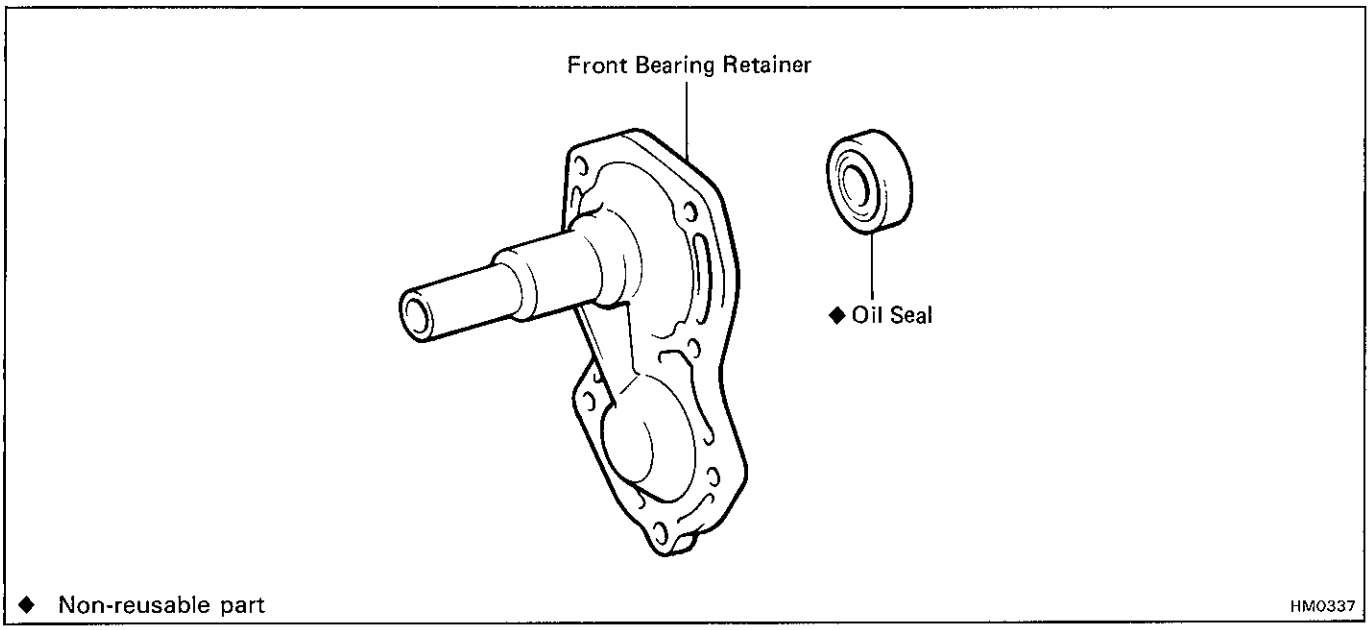


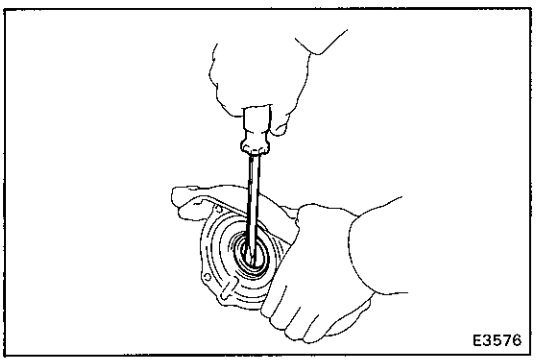

REPLACEMENT OF OIL SEAL

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

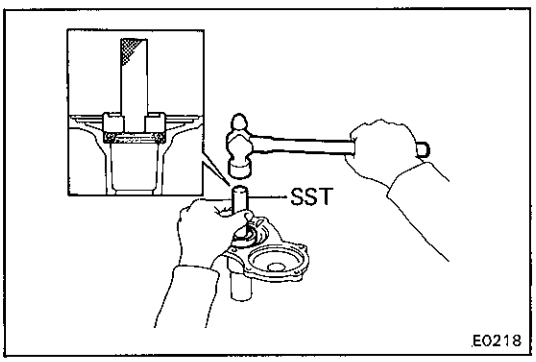

(b) Using SST and a hammer, drive in a new oil seal.

Oil seal drive in depth: 13.5 mm (0.532 in.)

SST 09608-20012 (09608-00030, 09608-03020)