

Front Bearing Retainer

COMPONENTS

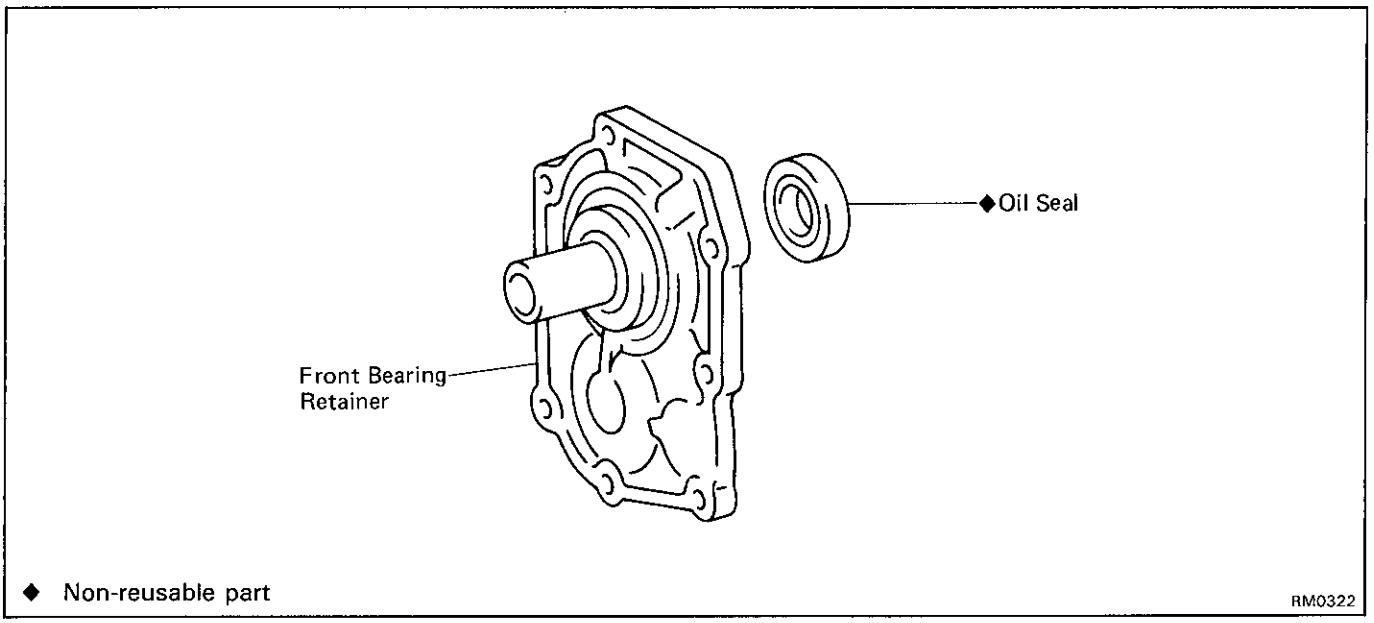


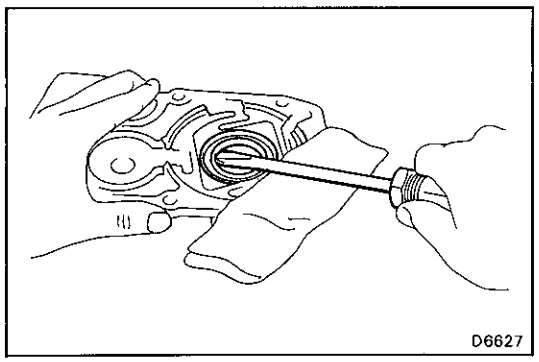

REPLACEMENT OF OIL SEAL

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

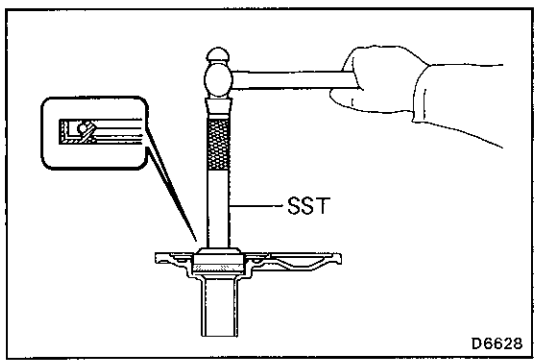

(b) Using SST, drive in a new oil seal.

SST 09608-35014 (09608-06020, 09608-06090)

Drive in depth: 11.2 — 12.2 mm (0.434 — 0.473 in.)
Transmission case installation surface