

STEERING COLUMN

REMOVAL AND INSTALLATION OF STEERING COLUMN

Remove and install the parts as shown.

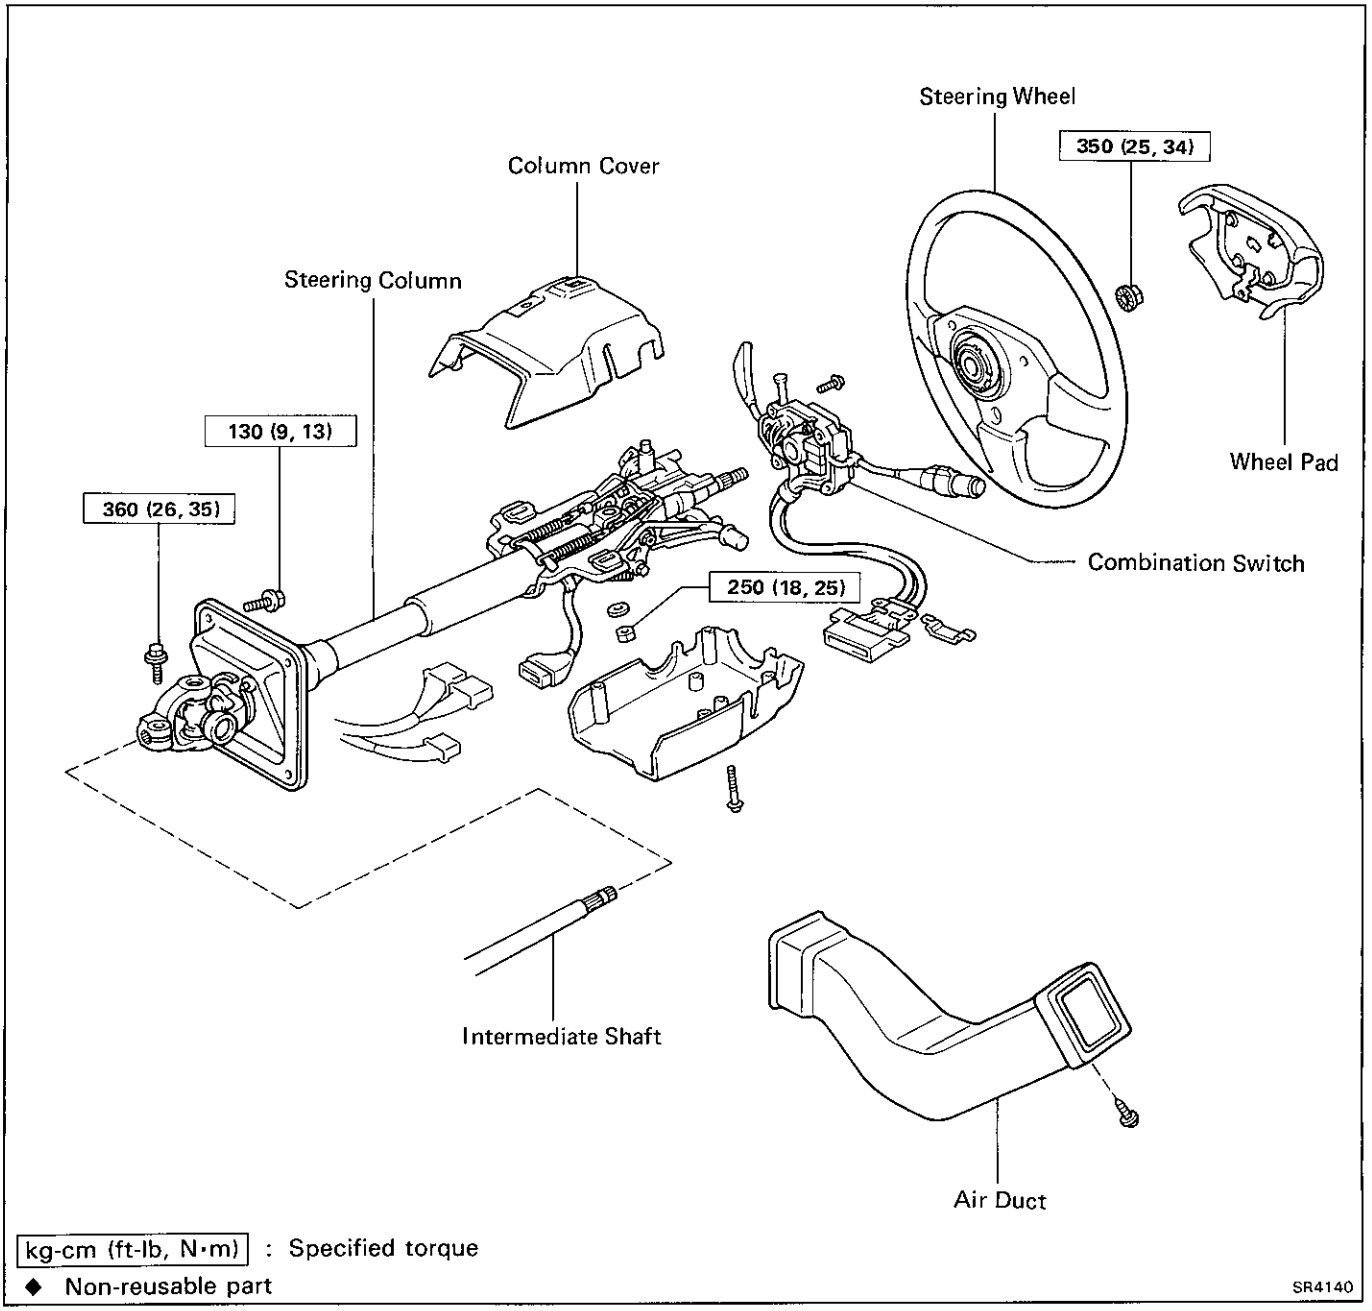

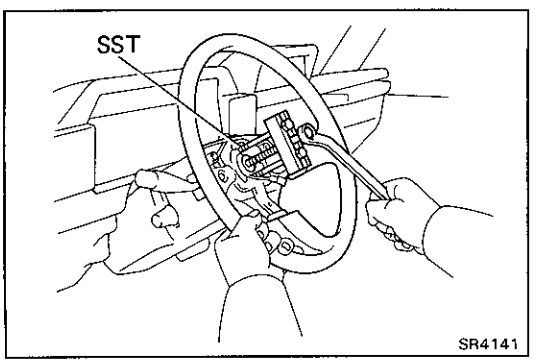


(MAIN POINT OF REMOVAL)

1. **REMOVE STEERING WHEEL**

   Using SST, remove the steering wheel.

   SST 09609-20011

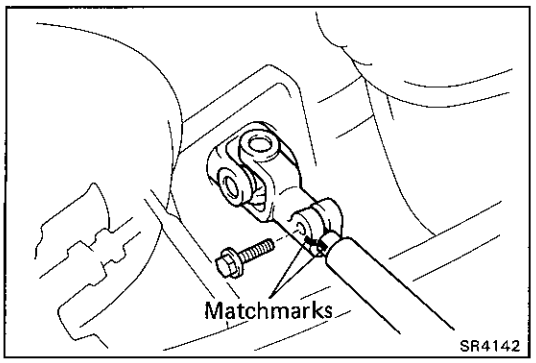

2. DISCONNECT UNIVERSAL JOINT

(a) Place matchmarks on the intermediate shaft and the universal joint.

(b) Disconnect the universal joint from the intermediate shaft.