
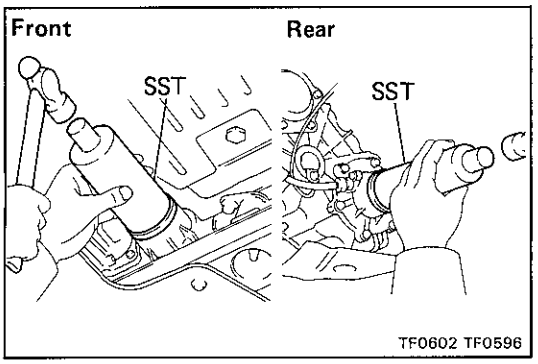


(b) Using SST and hammer, tap in a new oil seal.

SST 09316-60010 (09316-00060)

(c) Apply MP grease to the oil seal lip.

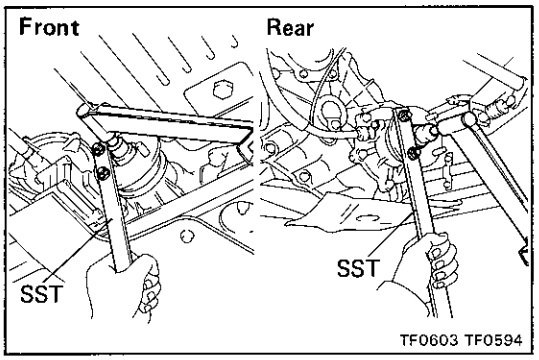


5. INSTALL COMPANION FLANGE

(a) Install the plate washer, companion flange and a new lock nut.

(b) Using SST and two nuts to hold the companion flange, torque the nut.

SST 09330-00021

Torque: 1,300 kg-cm (94 ft-lb, 127 N·m)

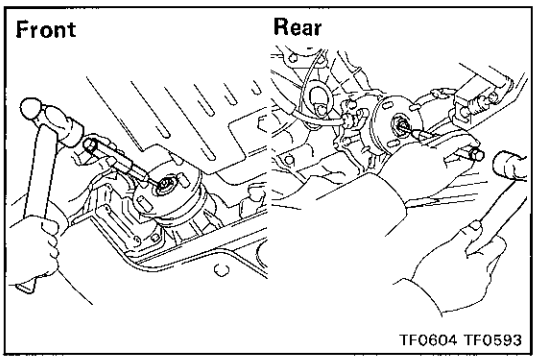

(c) Using a punch and hammer, stake the lock nut.

6. INSTALL FRONT AND REAR PROPELLER SHAFTS
(See page PR-2)

Torque: 900 kg-cm (65 ft-lb, 88 N·m)

7. FILL TRANSFER WITH OIL

Oil grade: API GL-4 or GL-5

Viscosity: SAE 90

Capacity: 2.1 liters (2.2 US qts, 1.8 Imp. qts)

REMOVAL AND INSTALLATION OF TRANSFER

(See page MT-5)