
Removal and Installation of Winch Assembly

Remove and install the parts as shown.

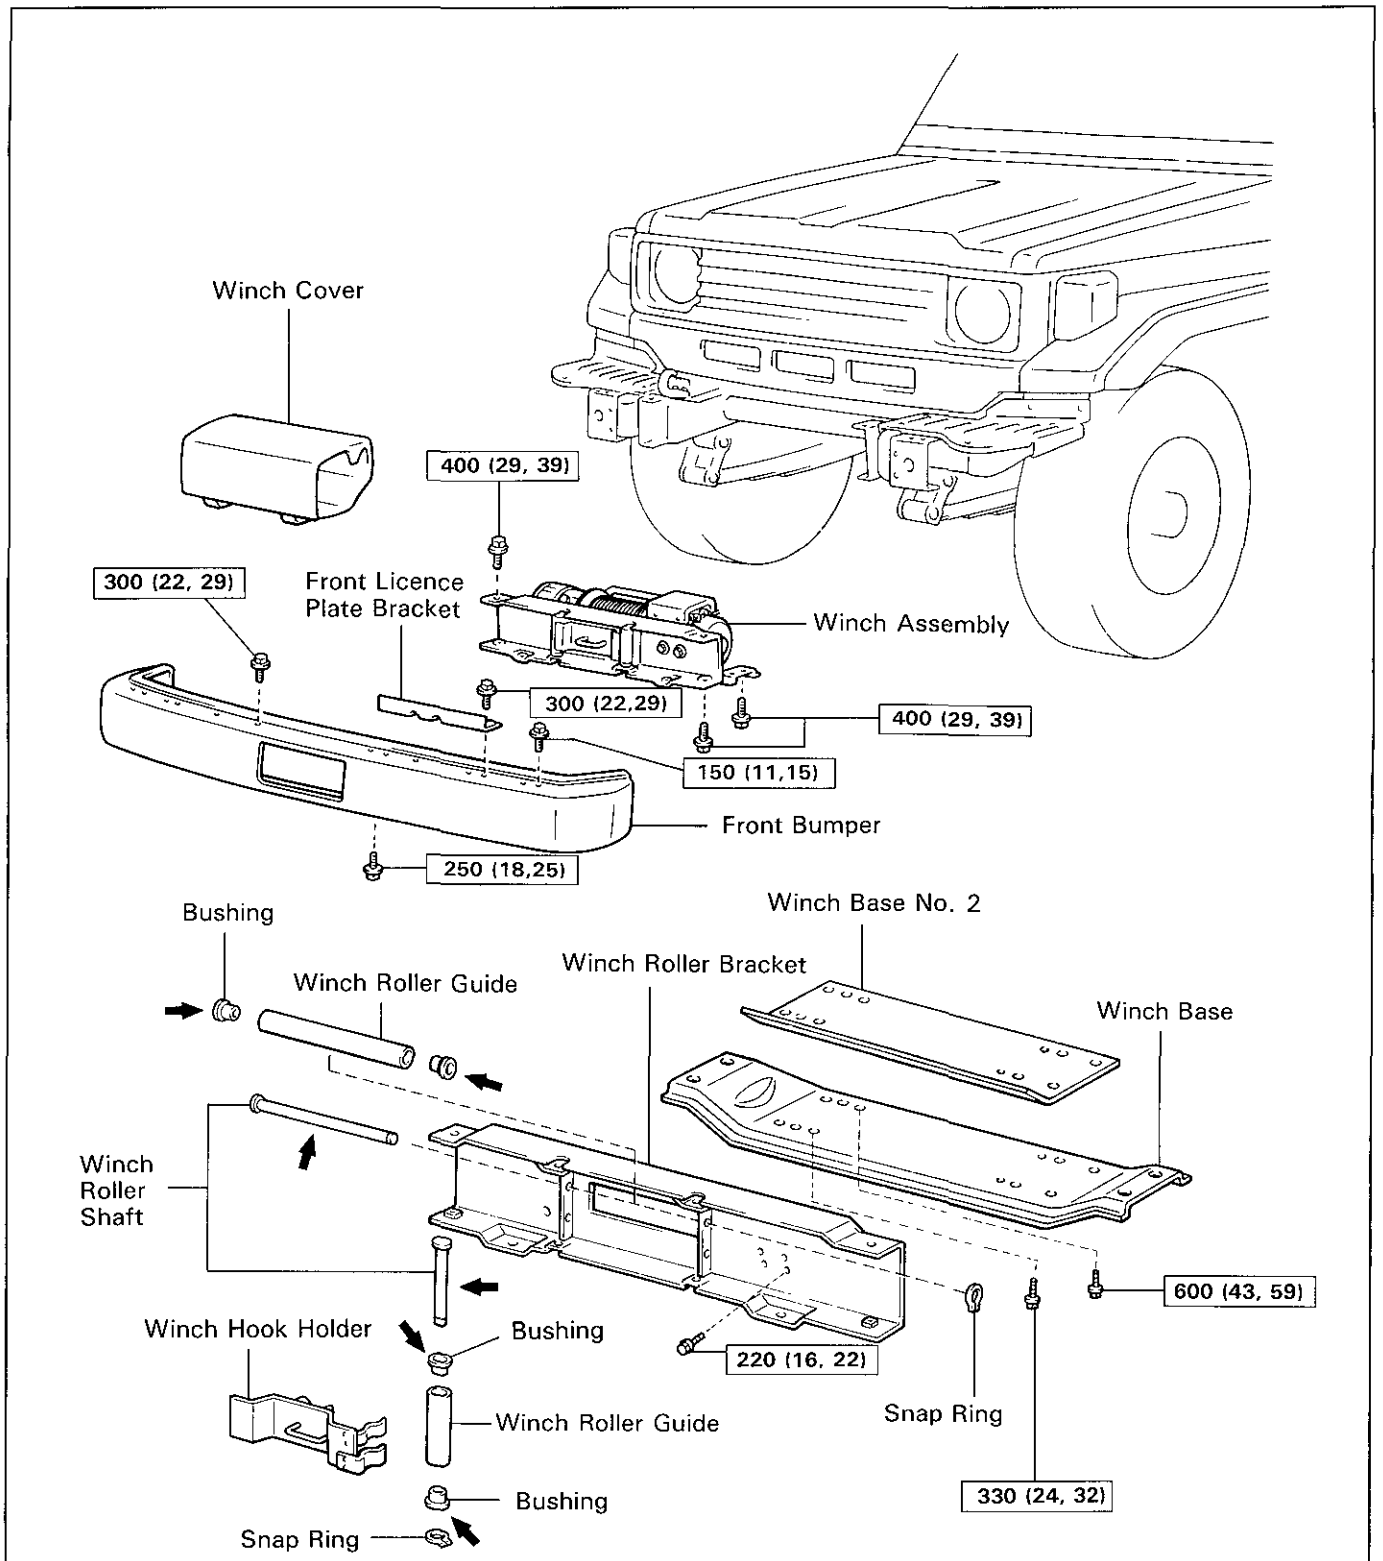

kg-cm (ft-lb, N·m) : Specified torque

➡ MP grease coating portion

WI0166