
FUEL TRANSFER SYSTEM

Parts Inspection

INSPECT ACCESSORY METER (Continuity)

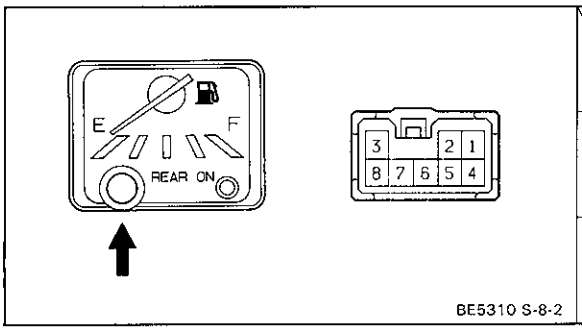

Terminal / Switch position	8	2	Illumination 1	Illumination 3
OFF				
ON	○—○			

If continuity is not as specified, check the bulb or replace the switch.