
FRONT BEARING RETAINER


COMPONENTS

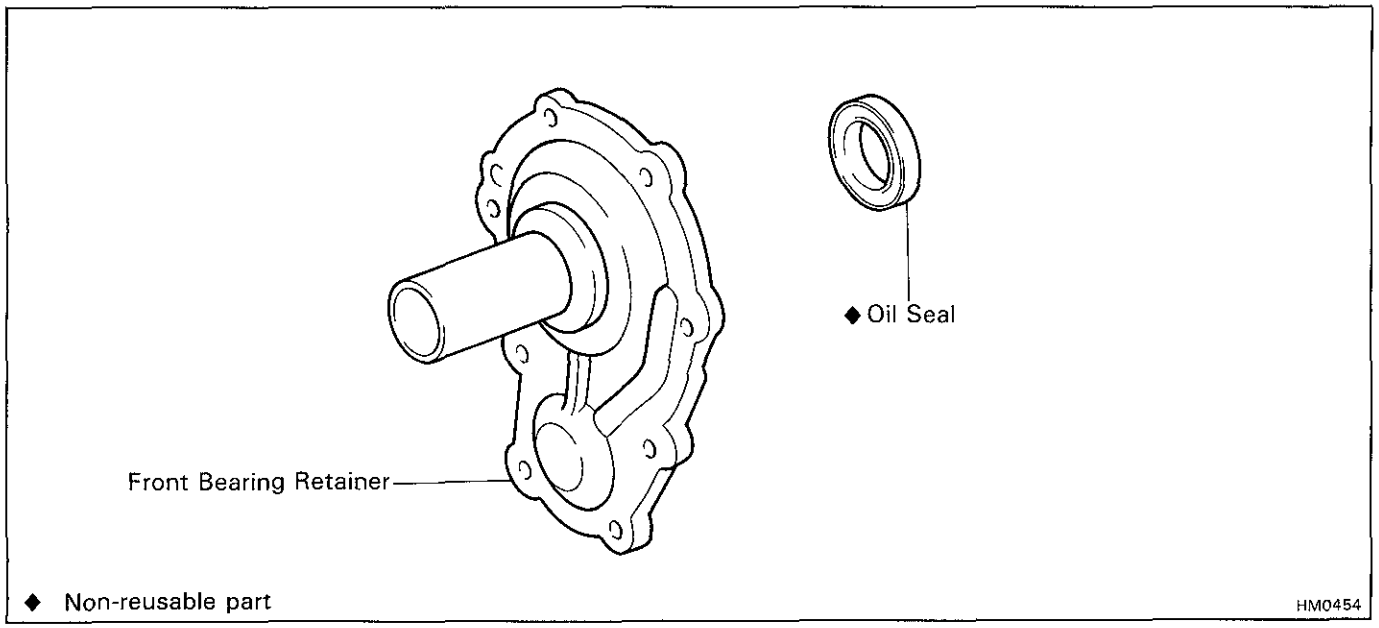

REPLACEMENT OF OIL SEAL

IF NECESSARY REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

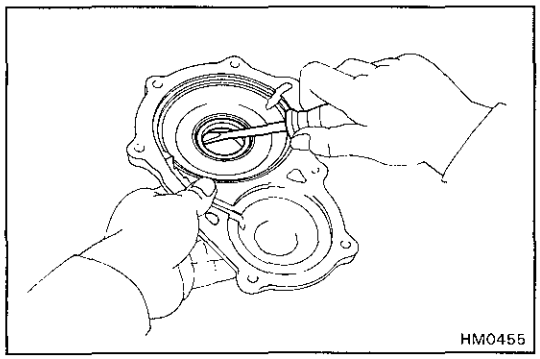

(b) Using SST and a press in a new oil seal.

SST 09608-20012 (09608-03020, 09608-00040)

Oil seal depth: 15.4 — 16.2 mm (0.606 — 0.638 in.)

