

Wiring and Connector Diagrams

RJ, LJ

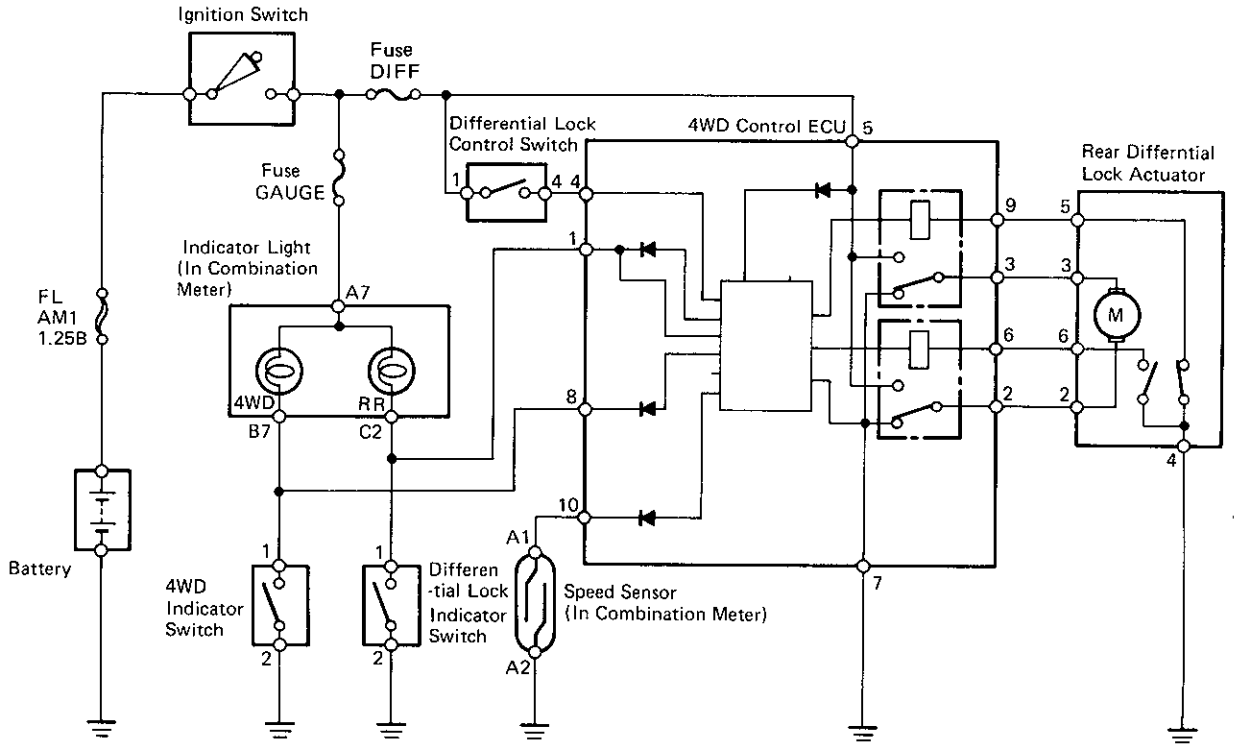

FJ, PZJ, HZJ, FZJ

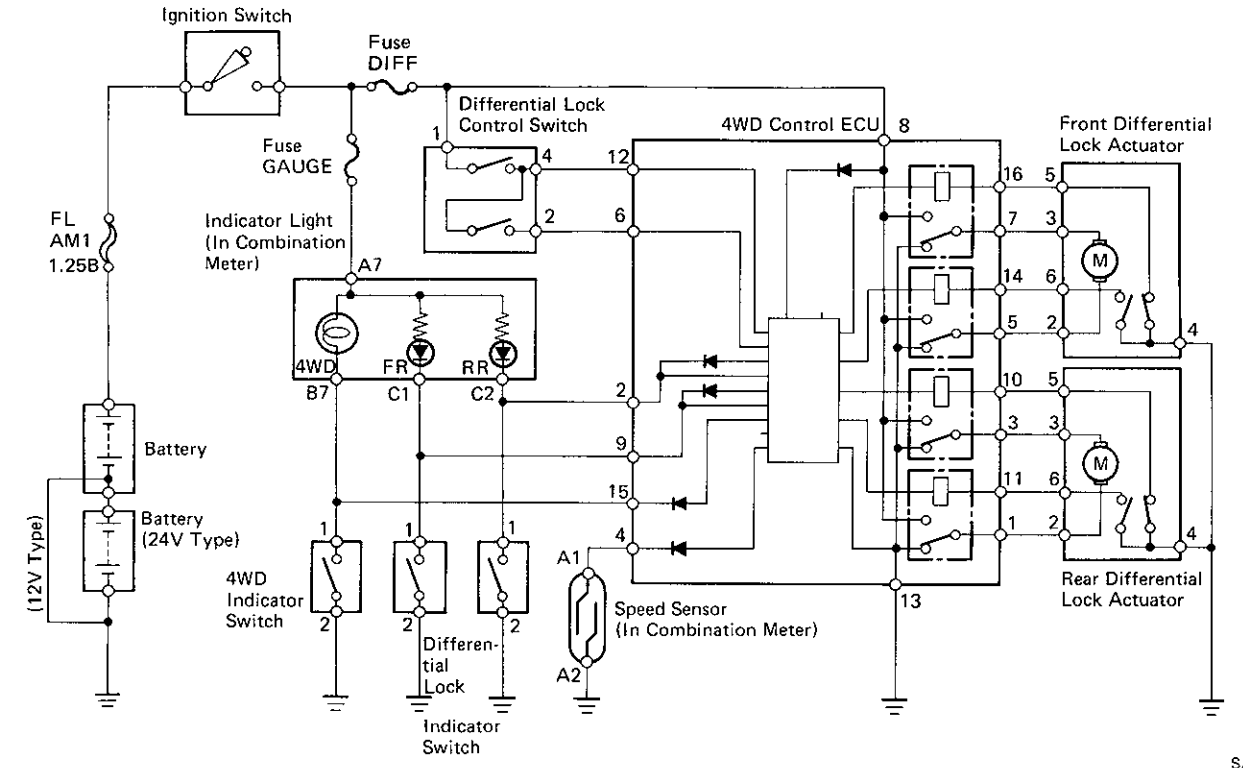


SA2222
SA2223


Wiring and Connector Diagrams (Cont'd)

Differential Lock Control Switch


(RJ, LJ)

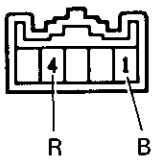


(FJ, PZJ, HZJ, FZJ)

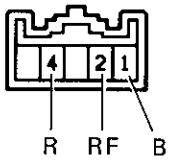


Front Differential Lock Actuator

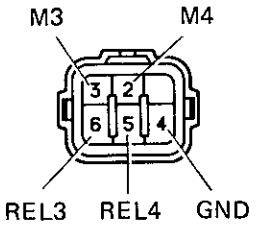

Rear Differential Lock Actuator

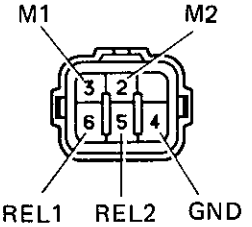


4WD Indicator Switch
Differential Lock Indicator Switch

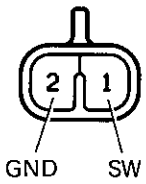


4WD Control ECU

(RJ, LJ)

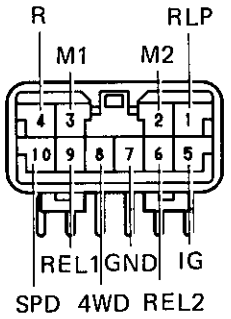


(FJ, PZJ, HZJ, FZJ)

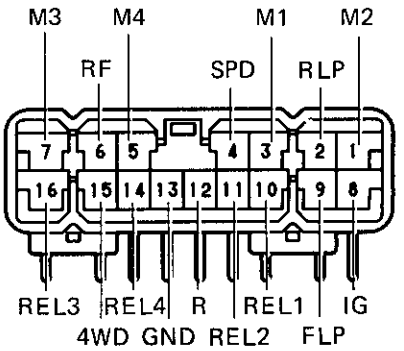


Combination Meter


(w/o Tachometer)

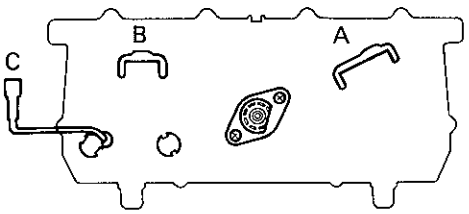


(w/ Tachometer)

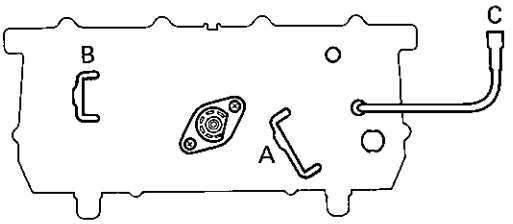

Connector "A"

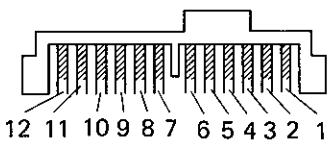

Connector "B"

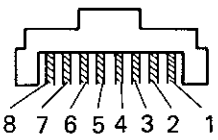

Connector "C"



S-5-2-A S-5-2-A IS-6-2 IS-6-2
IS-2-2-E e-10-2-A e-16-2-A
SA2311
BE1267 BE2639 GA-2-2-C