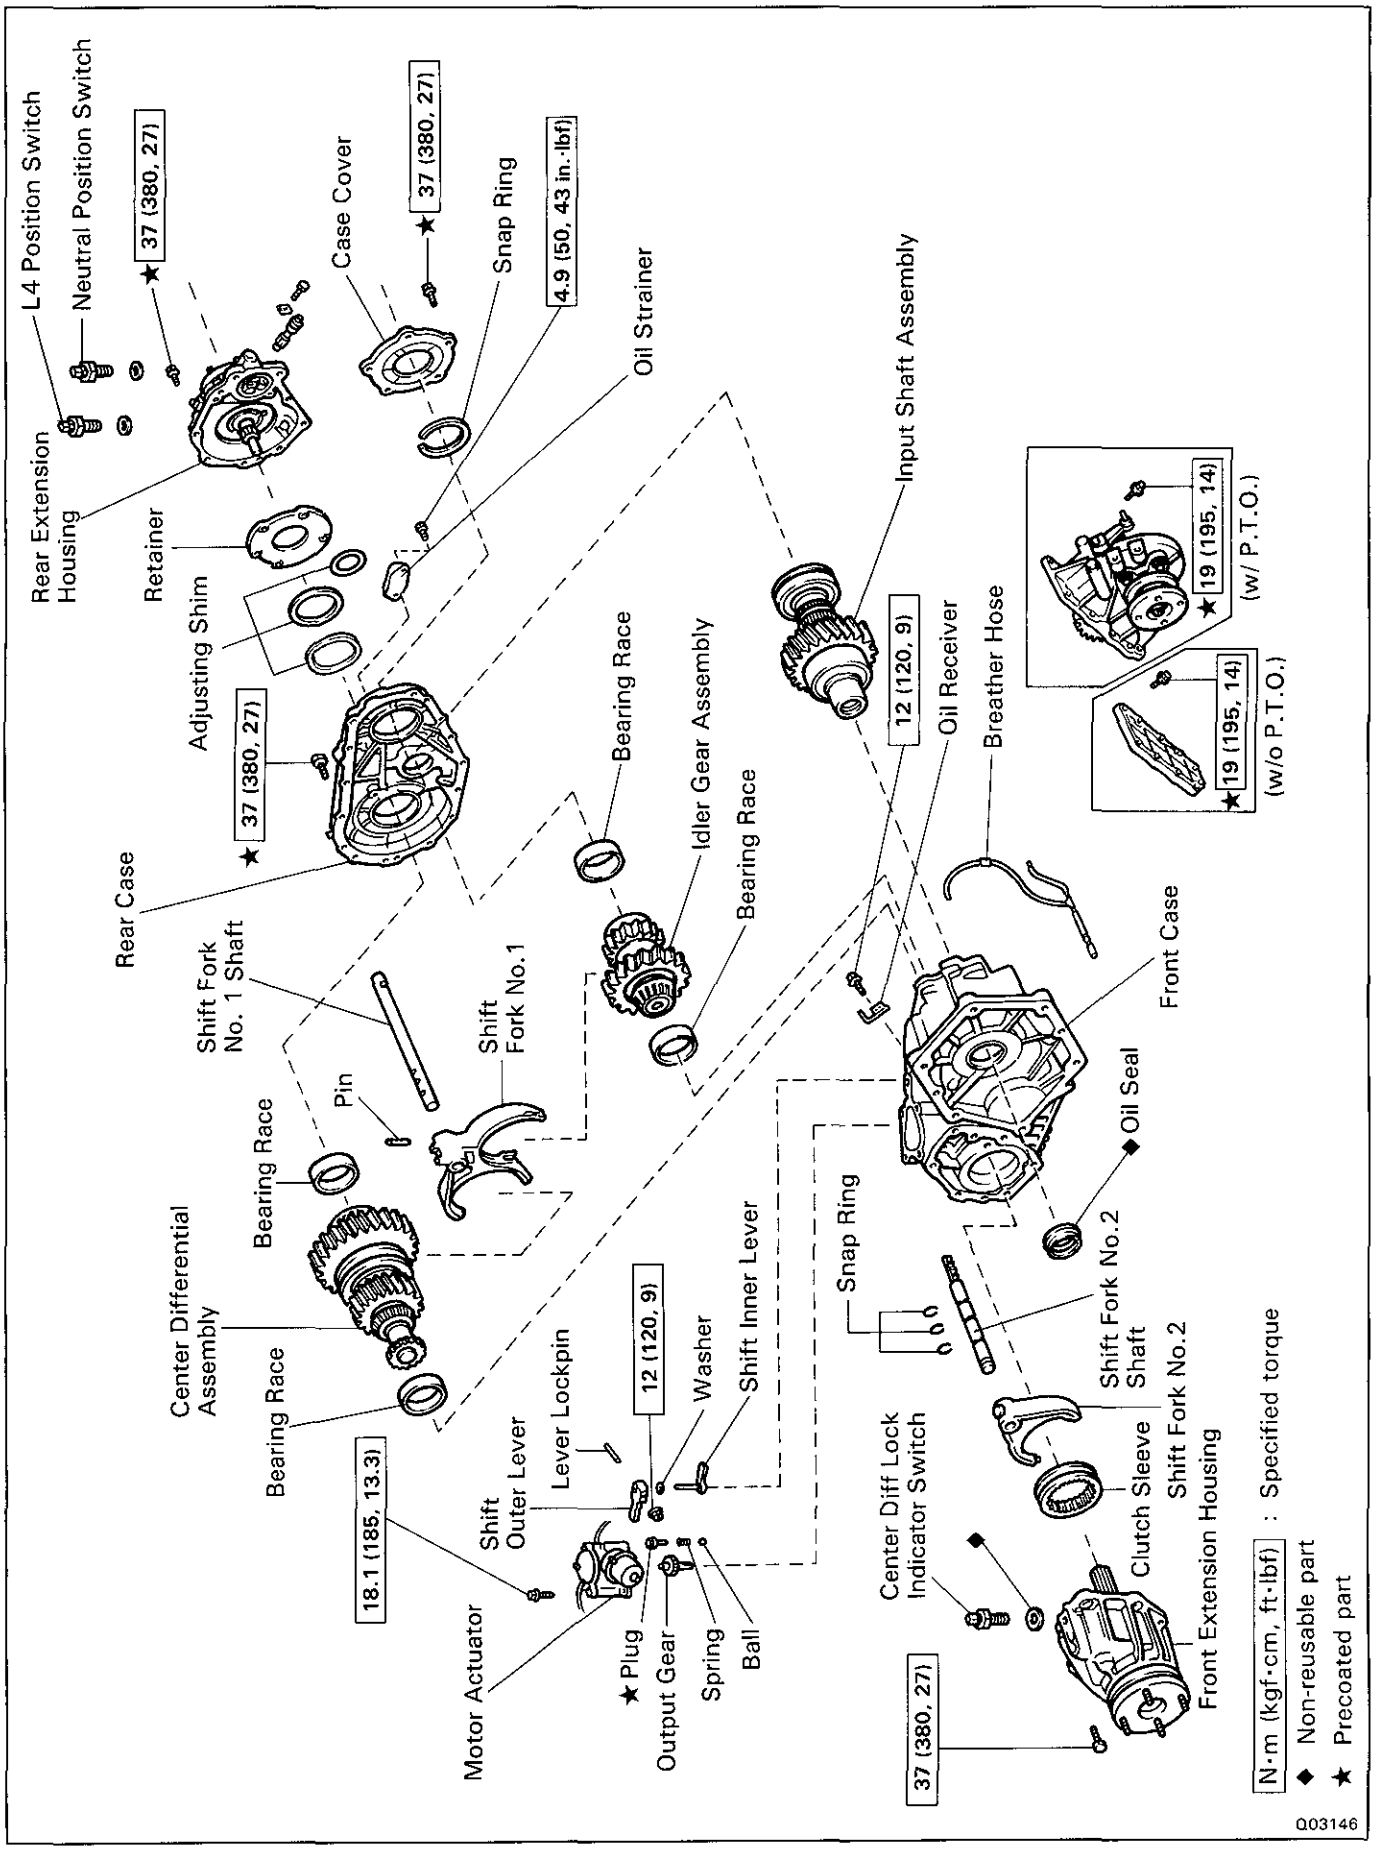
COMPONENTS


L4 Position Switch
Neutral Position Switch
37 (380, 27)
Case Cover
37 (380, 27)
Snap Ring
4.9 (50, 43 in.·lbf)
Oil Strainer
Rear Extension Housing
Retainer
Adjusting Shim
37 (380, 27)
Rear Case
Input Shaft Assembly
12 (120, 9)
Oil Receiver
Breather Hose
19 (195, 14)
(w/ P.T.O.)
19 (195, 14)
(w/o P.T.O.)
Bearing Race
Idler Gear Assembly
Bearing Race
Shift Fork No. 1 Shaft
Pin
Shift Fork No.1
Front Case
Oil Seal
Bearing Race
Center Differential Assembly
Bearing Race
Snap Ring
Shift Fork No.2
Shift Fork No.2 Shaft
Shift Inner Lever
Washer
12 (120, 9)
Lever Lockpin
Shift Outer Lever
18.1 (185, 13.3)
Center Diff Lock Indicator Switch
Clutch Sleeve
Front Extension Housing
Motor Actuator
★ Plug
Output Gear
Spring
Ball
37 (380, 27)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
★ Precoated part
Q03146