
ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI3U6–01

Troubleshoot in accordance with the procedure on the following page.

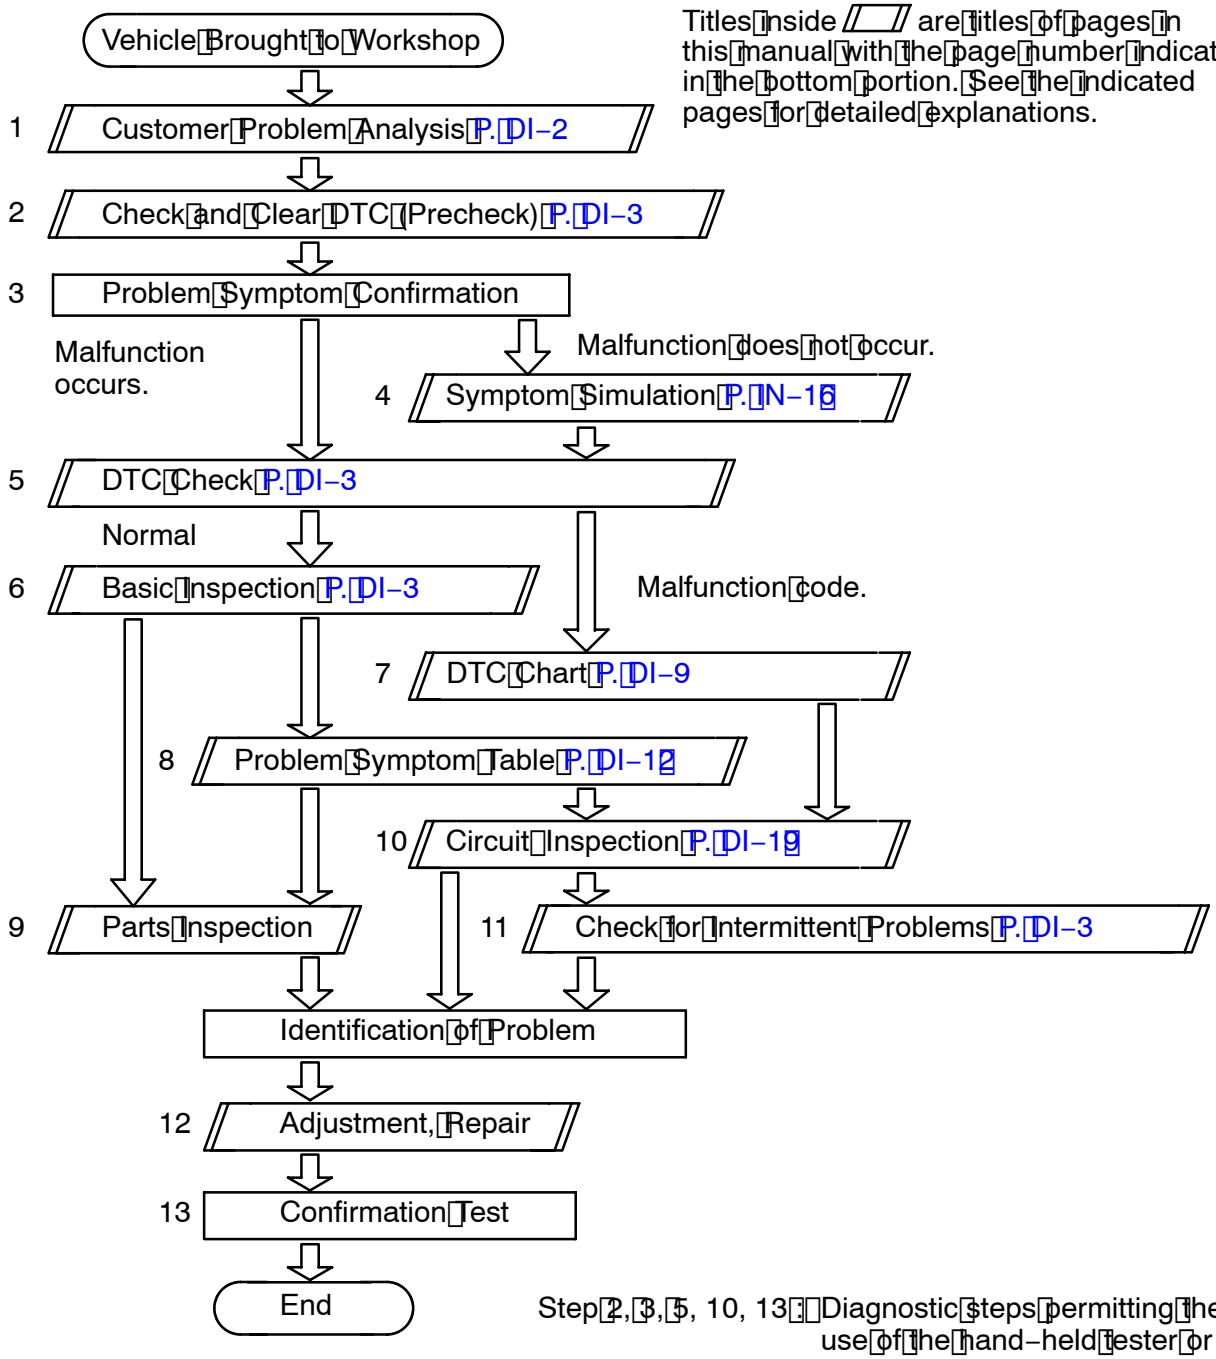

Titles inside // // are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

Step 2, 3, 5, 10, 13: Diagnostic steps permitting the use of the hand–held tester or break–out box.