
INJECTION PUMP


COMPONENTS

FU05T–01

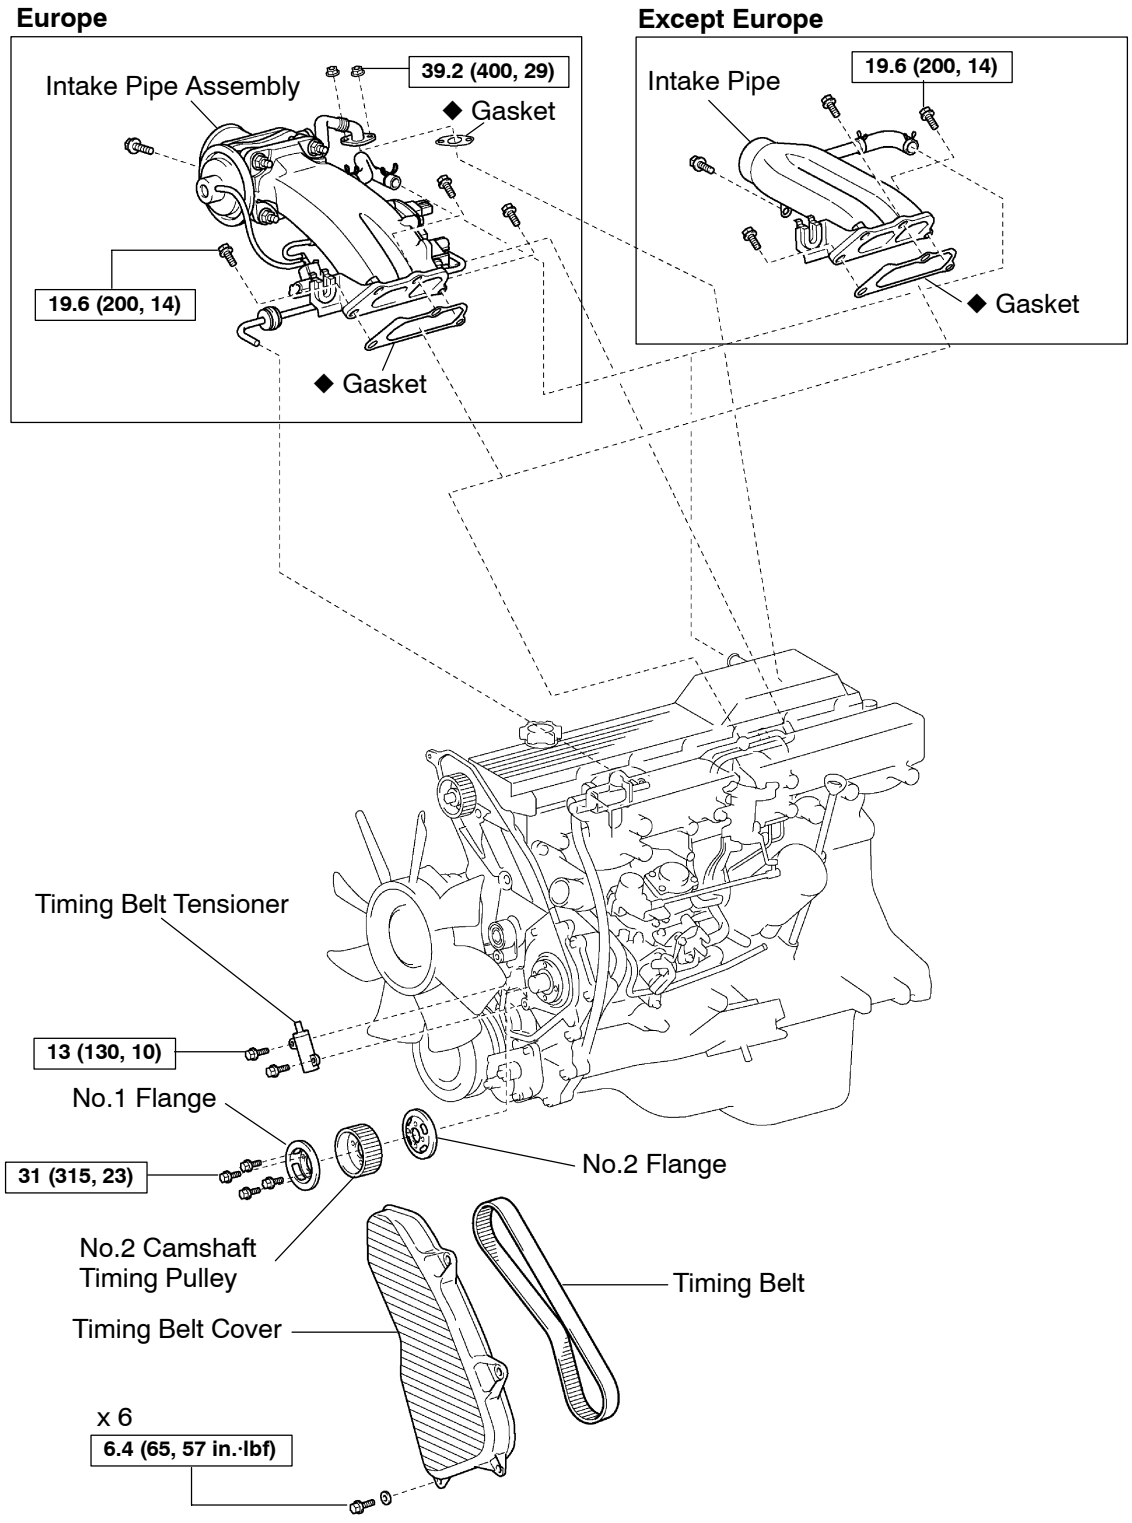


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part


B06022

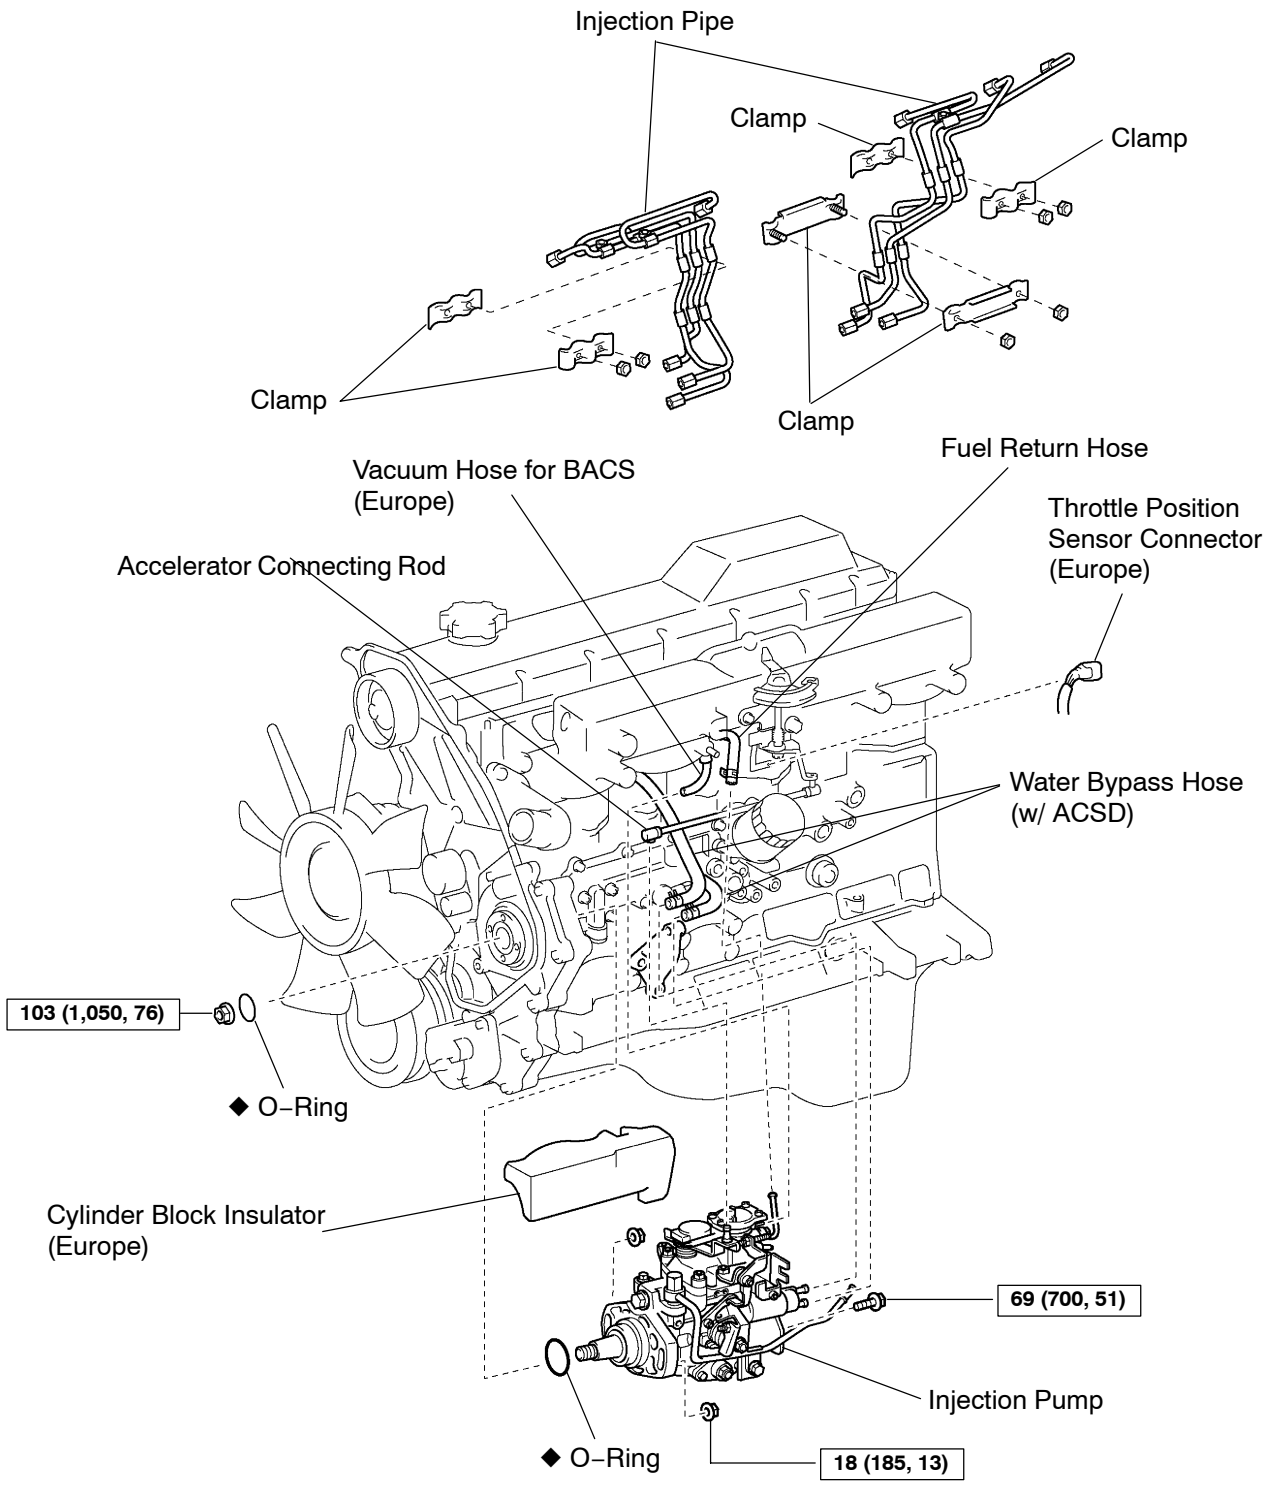

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part


B06023

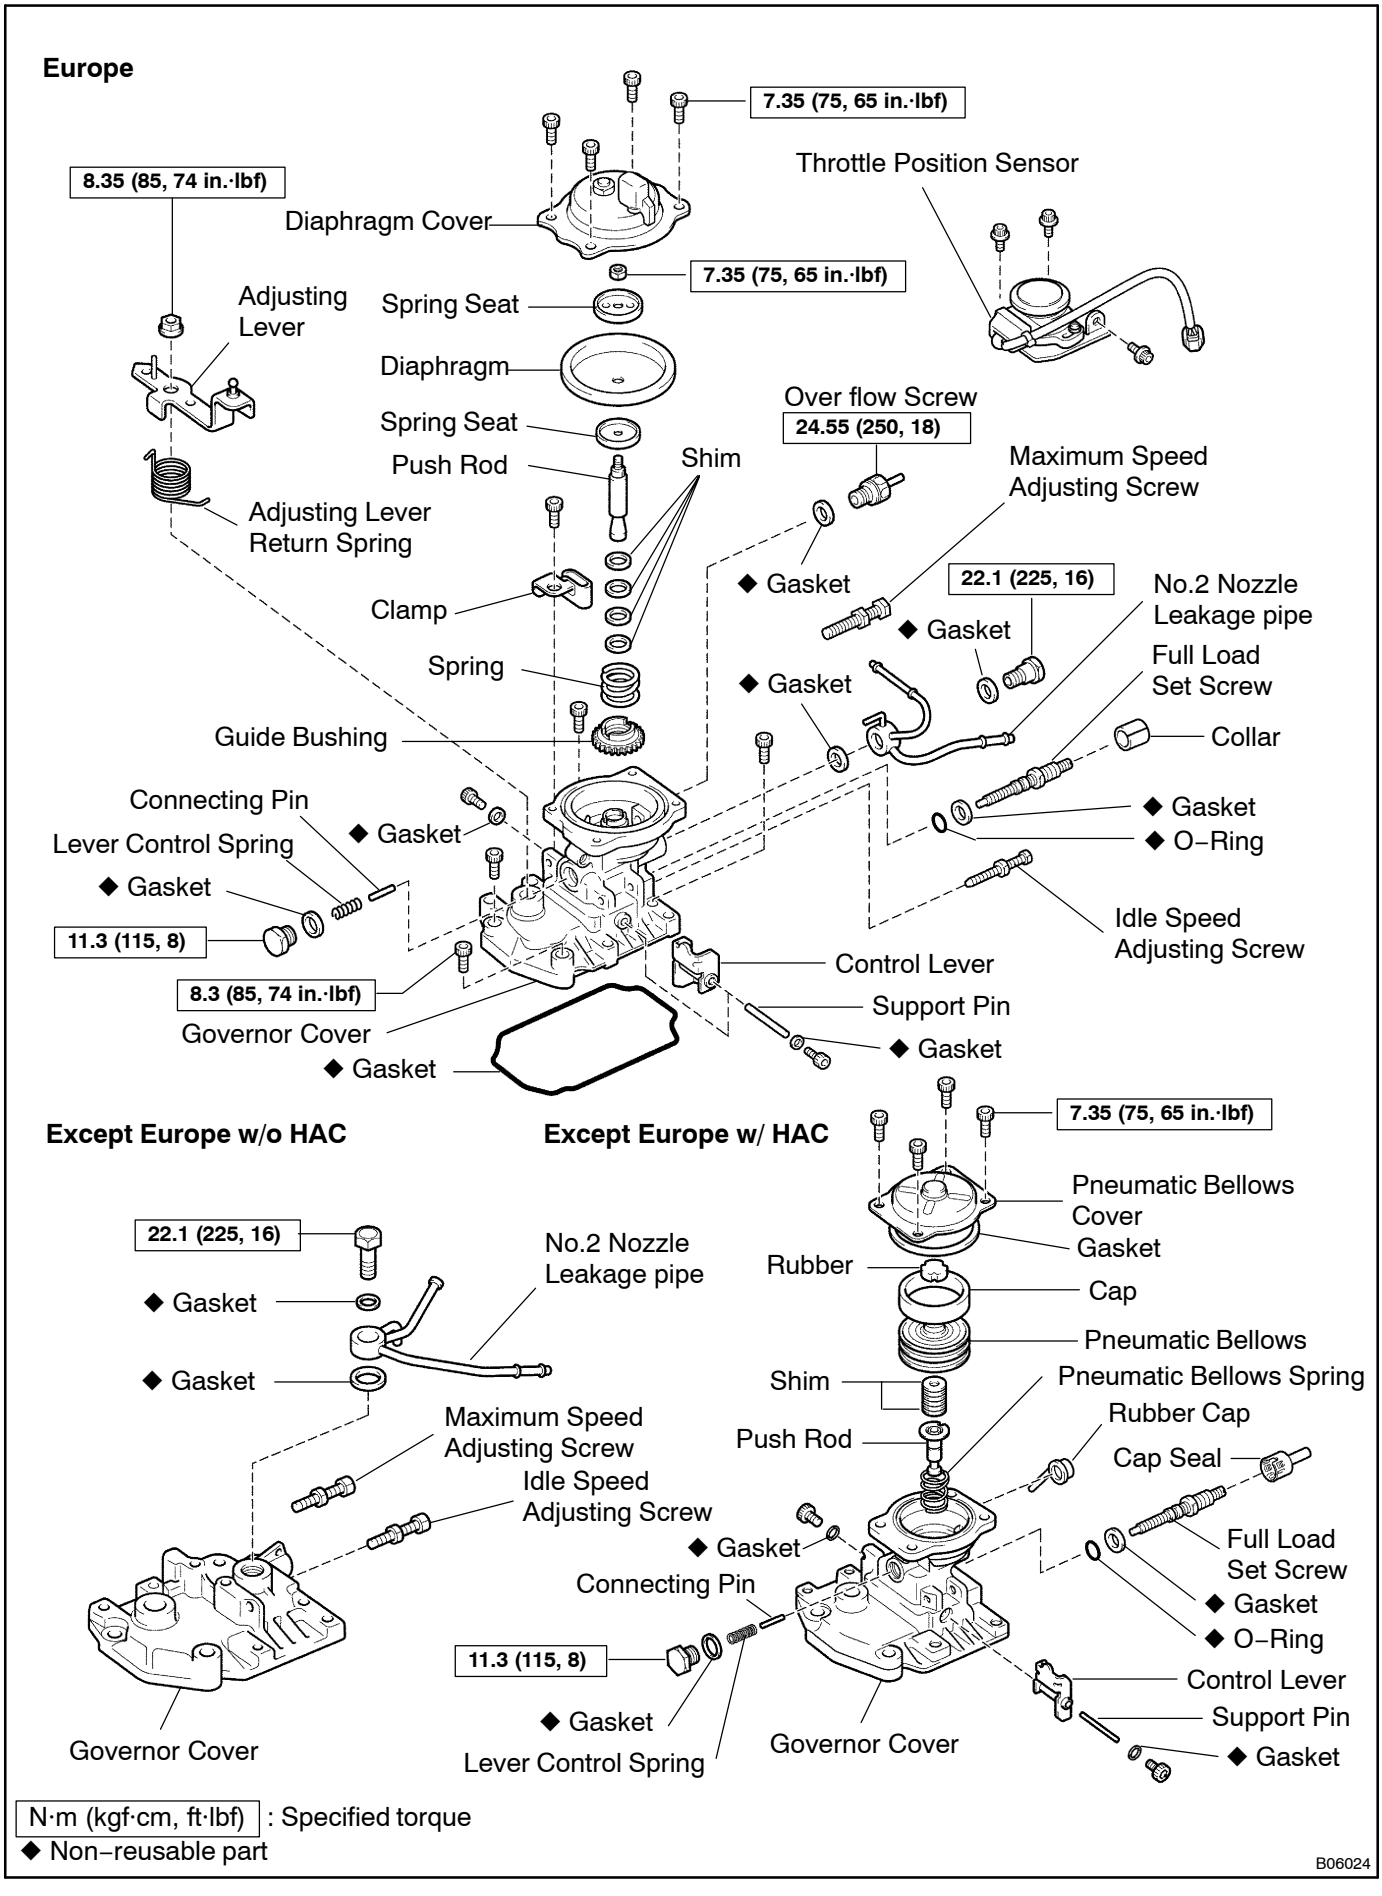
Europe
7.35 (75, 65 in.·lbf)
Throttle Position Sensor
8.35 (85, 74 in.·lbf)
Diaphragm Cover
7.35 (75, 65 in.·lbf)
Adjusting Lever
Spring Seat
Diaphragm
Over flow Screw
24.55 (250, 18)
Spring Seat
Push Rod
Shim
Maximum Speed Adjusting Screw
Adjusting Lever Return Spring
◆ Gasket
22.1 (225, 16)
No.2 Nozzle Leakage pipe
Clamp
◆ Gasket
Full Load Set Screw
Spring
◆ Gasket
Collar
Guide Bushing
Connecting Pin
◆ Gasket
◆ Gasket
◆ O–Ring
Lever Control Spring
◆ Gasket
Idle Speed Adjusting Screw
11.3 (115, 8)
Control Lever
8.3 (85, 74 in.·lbf)
Support Pin
Governor Cover
◆ Gasket
◆ Gasket
Except Europe w/o HAC
Except Europe w/ HAC
7.35 (75, 65 in.·lbf)
Pneumatic Bellows Cover
Gasket
22.1 (225, 16)
No.2 Nozzle Leakage pipe
Rubber
Cap
◆ Gasket
Pneumatic Bellows
◆ Gasket
Shim
Pneumatic Bellows Spring
Maximum Speed Adjusting Screw
Rubber Cap
Push Rod
Cap Seal
Idle Speed Adjusting Screw
◆ Gasket
Full Load Set Screw
Connecting Pin
◆ Gasket
◆ O–Ring
11.3 (115, 8)
Control Lever
◆ Gasket
Support Pin
Governor Cover
Governor Cover
Lever Control Spring
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B06024

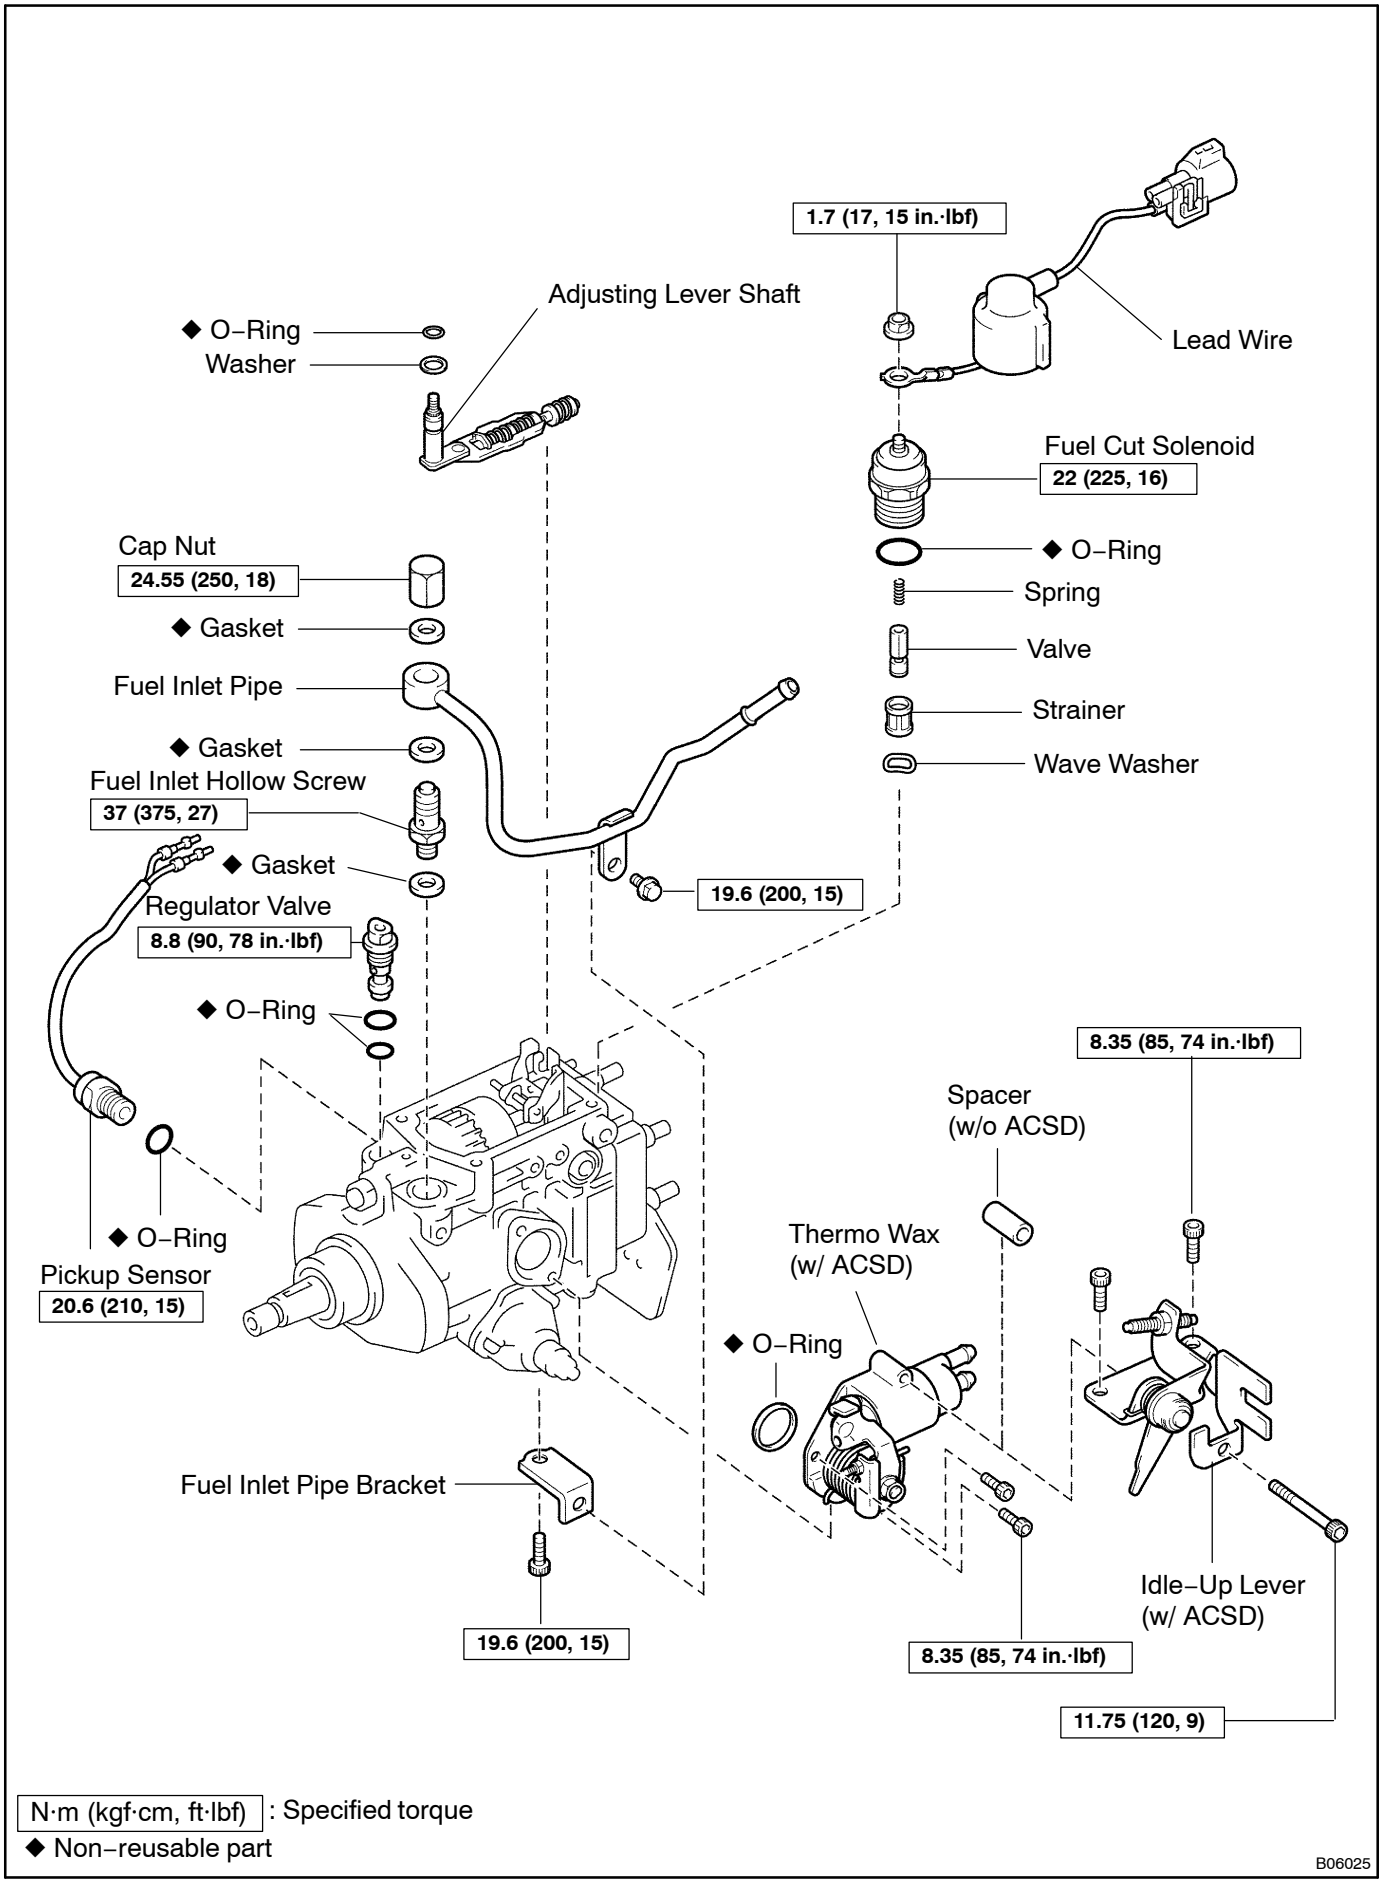

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part

B06025

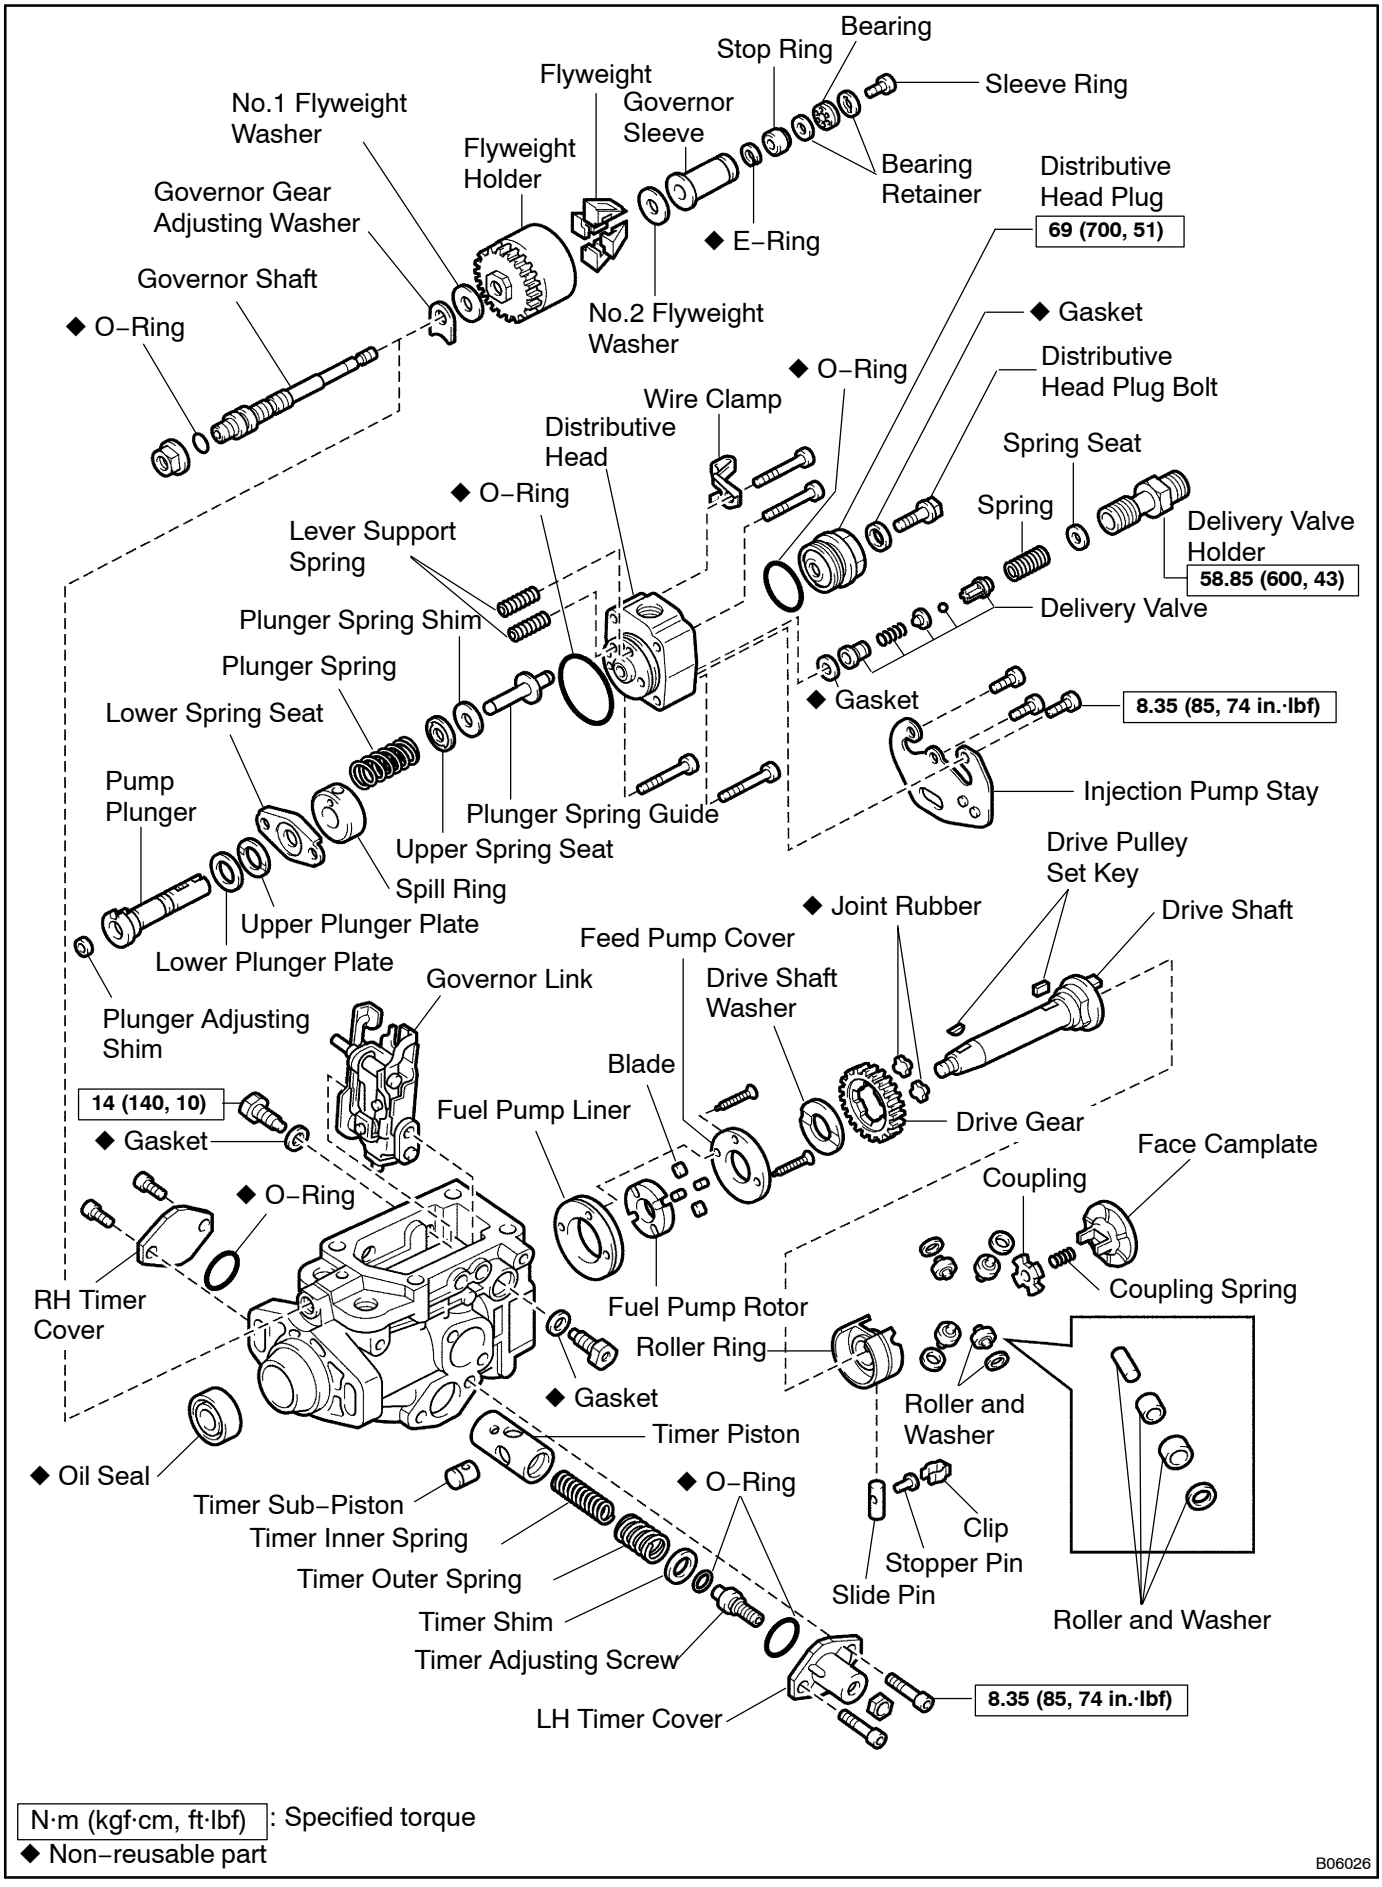

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B06026