
STARTER RELAY

ST0FU–01

INSPECTION

1. REMOVE STARTER RELAY

LOCATION: See relay location in Electrical Wiring Diagram.

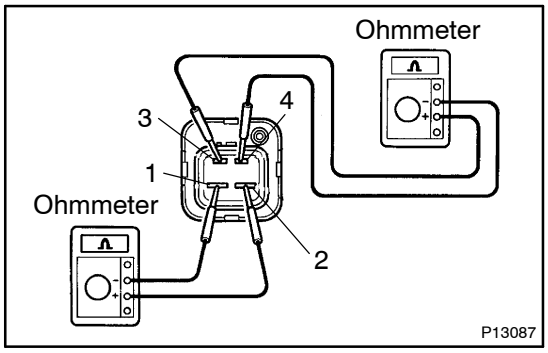


2. INSPECT RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

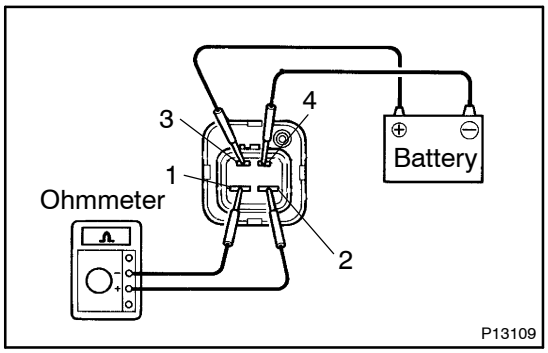

3. INSPECT RELAY OPERATION

(a) Apply battery voltage across the terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

4. REINSTALL STARTER RELAY