

BE1H5–01

CIRCUIT

w/o Tachometer:

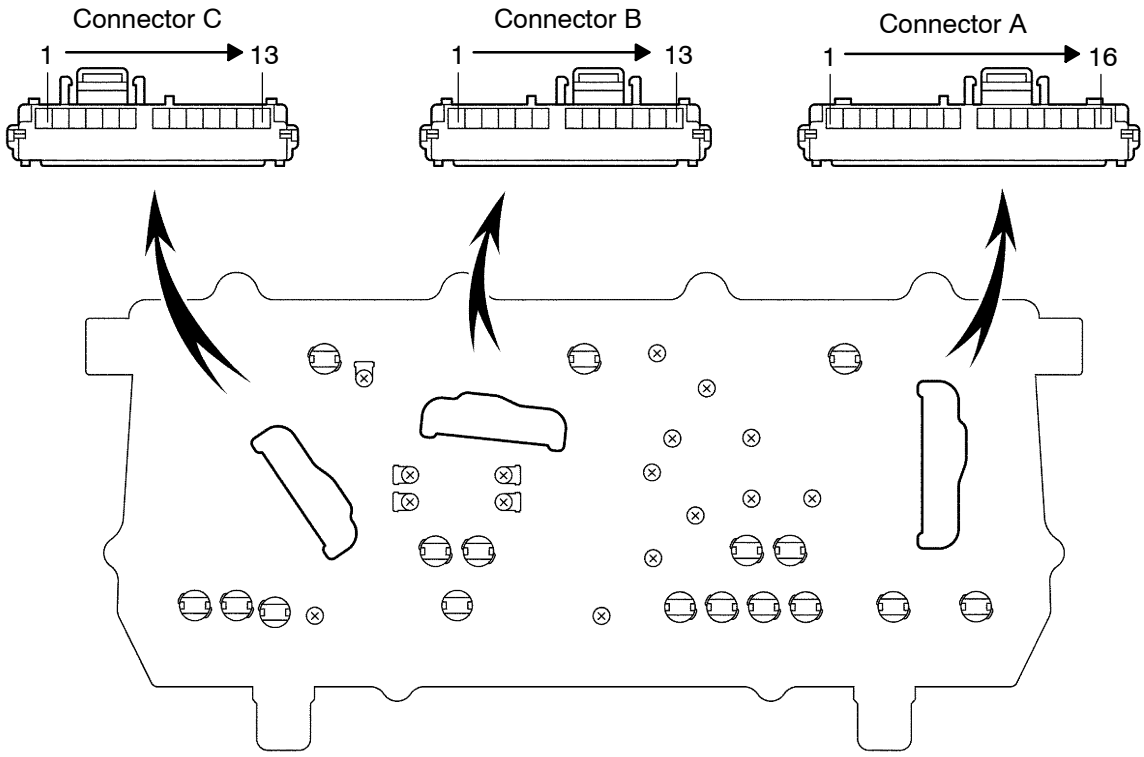


w/ Tachometer:

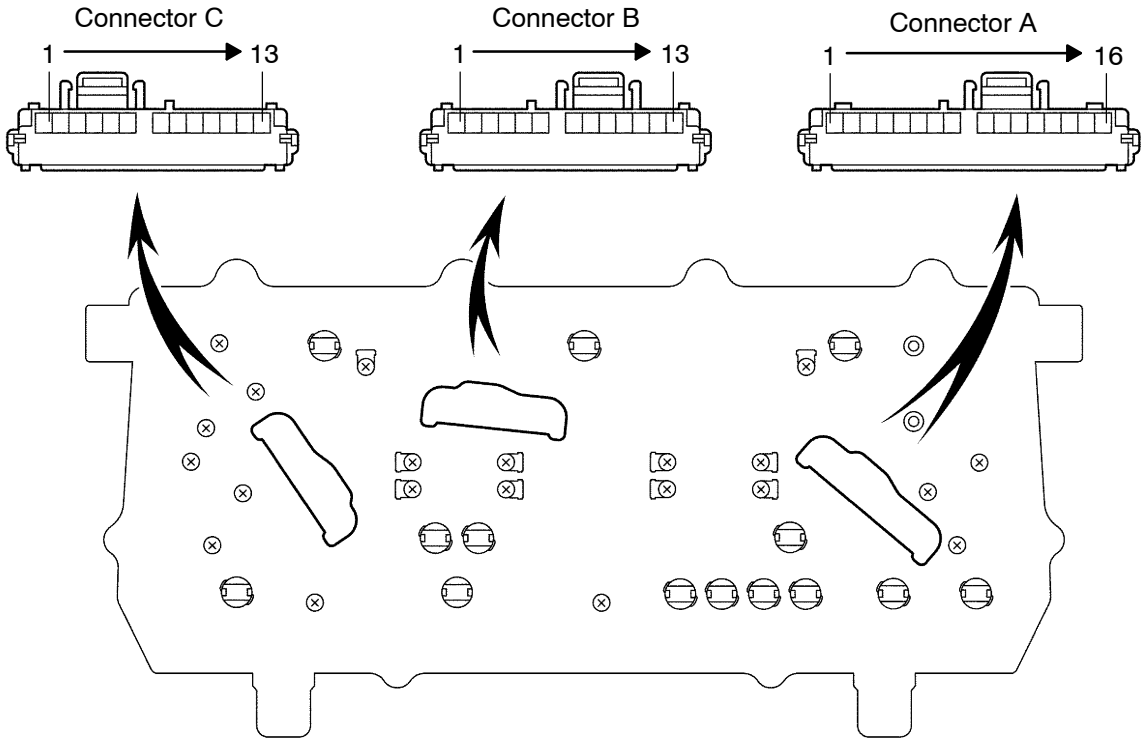

P

I14937

w/o Tachometer:

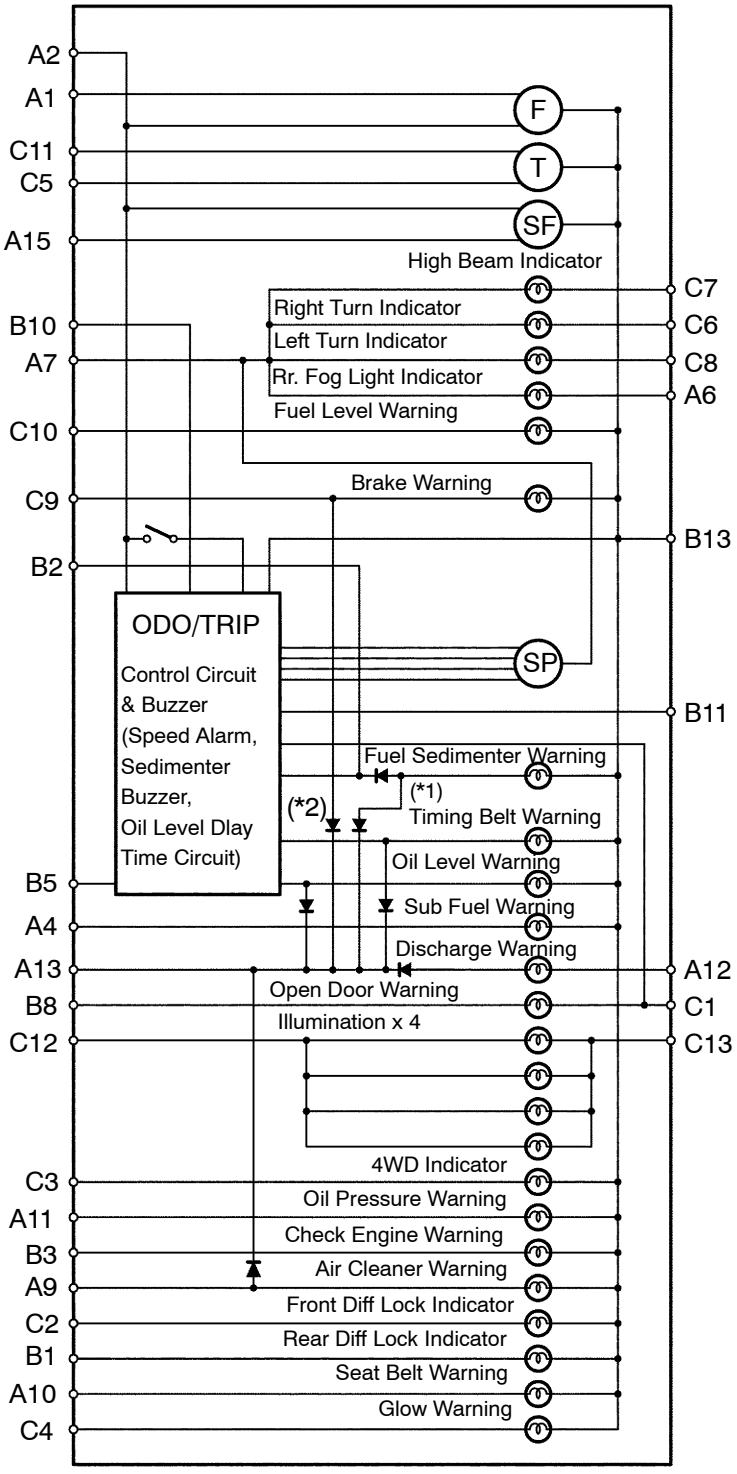


No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Ground
	4	Sub Fuel Changeover Switch
	6	Rear Fog Light Switch
	7	Ground
	9	Air Cleaner Warning Switch (*2)
	10	Seat Belt Buckle Switch
	11	Engine Oil Level Switch
	12	IGN Fuse
	13	Alternator L Terminal
	14	Oil Pressure Switch
	15	Sub Fuel Sender Gauge
	16	Oil Temperature Sender Gauge
B	1	Rear Diff Lock Switch
	2	Fuel Sedimenter
	3	Engine ECU
	5	Engine Oil Level Switch
	8	Door Courtesy Switch
	10	Speed Sensor
	11	Speed Control Unit
	13	GAUGE Fuse
C	1	DOME Fuse
	2	Front Diff Lock Switch
	3	4WD Switch
	4	Pre–Heating Timer (*2)
	5	Ground (Engine)
	6	Turn Signal Switch (Right)
	7	Headlight Dimmer Switch
	8	Turn Signal Switch (Left)
	9	Brake Fluid Level Warning Switch
	10	Fuel Level Warning Switch
	11	Water Temperature Sender Gauge
	12	Light Control Rheostat or Illumination Ground
	13	TAIL Fuse

(F) : Fuel Receiver Gauge
(T) : Water Temp. Receiver Gauge
(SF) : Sub Fuel Receiver Gauge
(SP) : Speedometer

(*1): Diesel Engine
(*2): Europe only

I14935

w/ Tachometer:

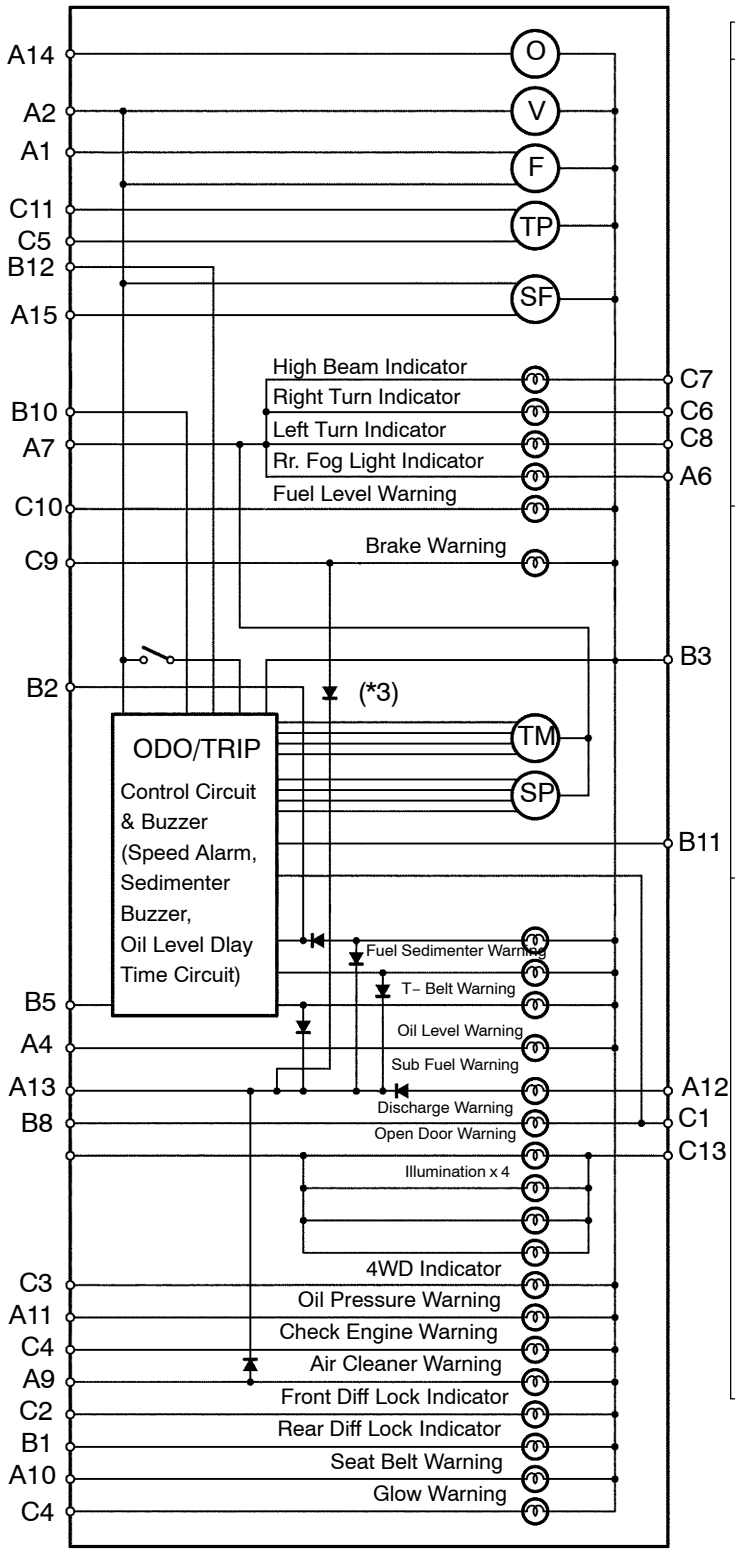

No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Ground
	4	Sub Fuel Changeover Switch
	6	Rear Fog Light Switch
	7	Ground
	9	Air Cleaner Warning Switch (*2)
	10	Seat Belt Buckle Switch
	11	Engine Oil Level Switch
	12	IGN Fuse
	13	Alternator L Terminal
	14	Oil Pressure Snder Gauge
	15	Sub Fuel Sender Gauge
B	1	Rear Diff Lock Switch
	2	Fuel Sedimenter (*2)
	5	Engine Oil Level Switch
	8	Door Courtesy Switch
	10	Speed Sensor
	11	Speed Control Unit
	12	Ignition Coil (*1)
		Tacho Pick–Switcup Sensor or EGR ECU(*2)
	13	GAUGE Fuse
C	1	DOME Fuse
	2	Front Diff Lock Switch
	3	4WD Switch
	4	Glow Plug (*2)
	5	Ground (Engine)
	6	Turn Signal Switch (Right)
	7	Headlight Dimmer Switch
	8	Turn Signal Switch (Left)
	9	Brake Fluid Level Warning Switch
	10	Fuel Level Warning Switch
	11	Water Temperature Sender Gauge
	12	Light Control Rheostat or Illumination Ground
	13	TAIL Fuse

(*1): Gasoline Engine
(*2): Diesel Engine
(*3): Europe and Australia

(O) : Oil Pressure Gauge
(V) : Volt Gauge
(F) : Fuel Receiver Gauge
(TP) : Water Temp. Gauge
(SF) : Sub Fuel Receiver Gauge
(TM) : Tachometer
(SP) : Speedometer

I14934