

BO301–01

# REASSEMBLY

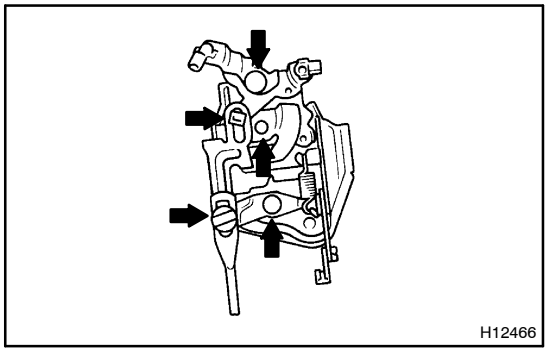


**1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE**

Apply MP grease to the sliding surface of the door lock.

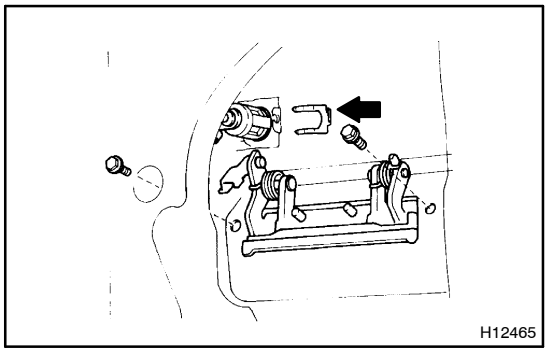



**2. INSTALL OUTSIDE HANDLE**

Install the outside handle with 2 bolts.

**3. INSTALL DOOR LOCK CYLINDER**

Install the lock cylinder with the retainer.

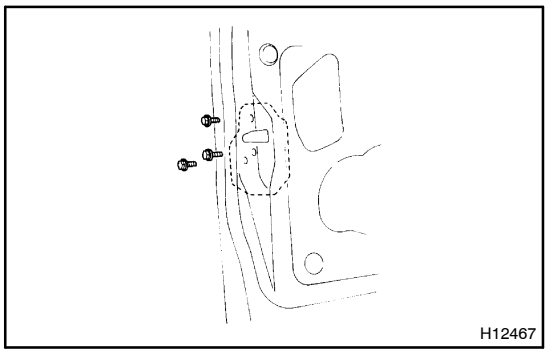



**4. INSTALL DOOR LOCK**

(a) Install the door lock with 3 screws.

(b) w/ Power Door Lock:
Connect the connector.

(c) Connect the links to the outside handle and the lock cylinder.

(d) Install the lock knob.

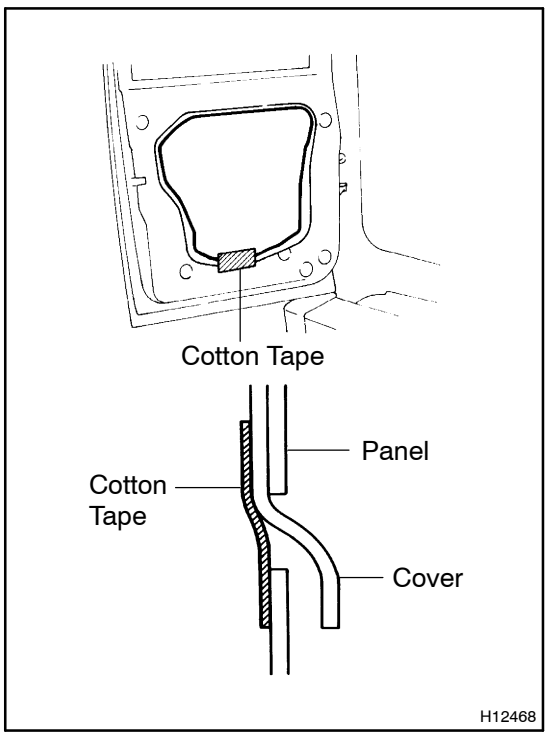


**5. INSTALL SERVICE HOLE COVER**


(a) Install the service hole cover with adhesive.

(b) Insert the lower edge of the service hole cover into the panel slit.

(c) Seal the panel slit with the cotton tape.

**NOTICE:**

**Do not block the trim clip sealing with the tape.**

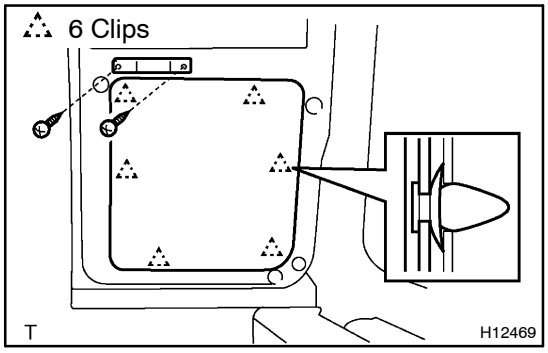



**6. INSTALL DOOR TRIM**

Install the door trim with retainer to the inside panel by tapping.

**7. INSTALL PULL HANDLE**

Install the pull handle with 2 screws.

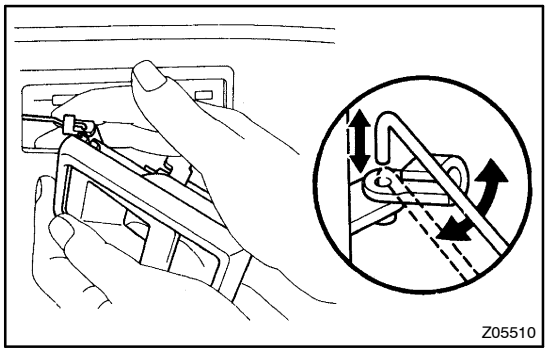


**8. INSTALL DOOR INSIDE HANDLE**

(a) Connect the inside handle to the control link.

(b) Push the inside handle in the door panel and slide it rearward.

(c) Install the screw.