
MANUAL TRANSMISSION ASSEMBLY


COMPONENTS

MT04Q–03

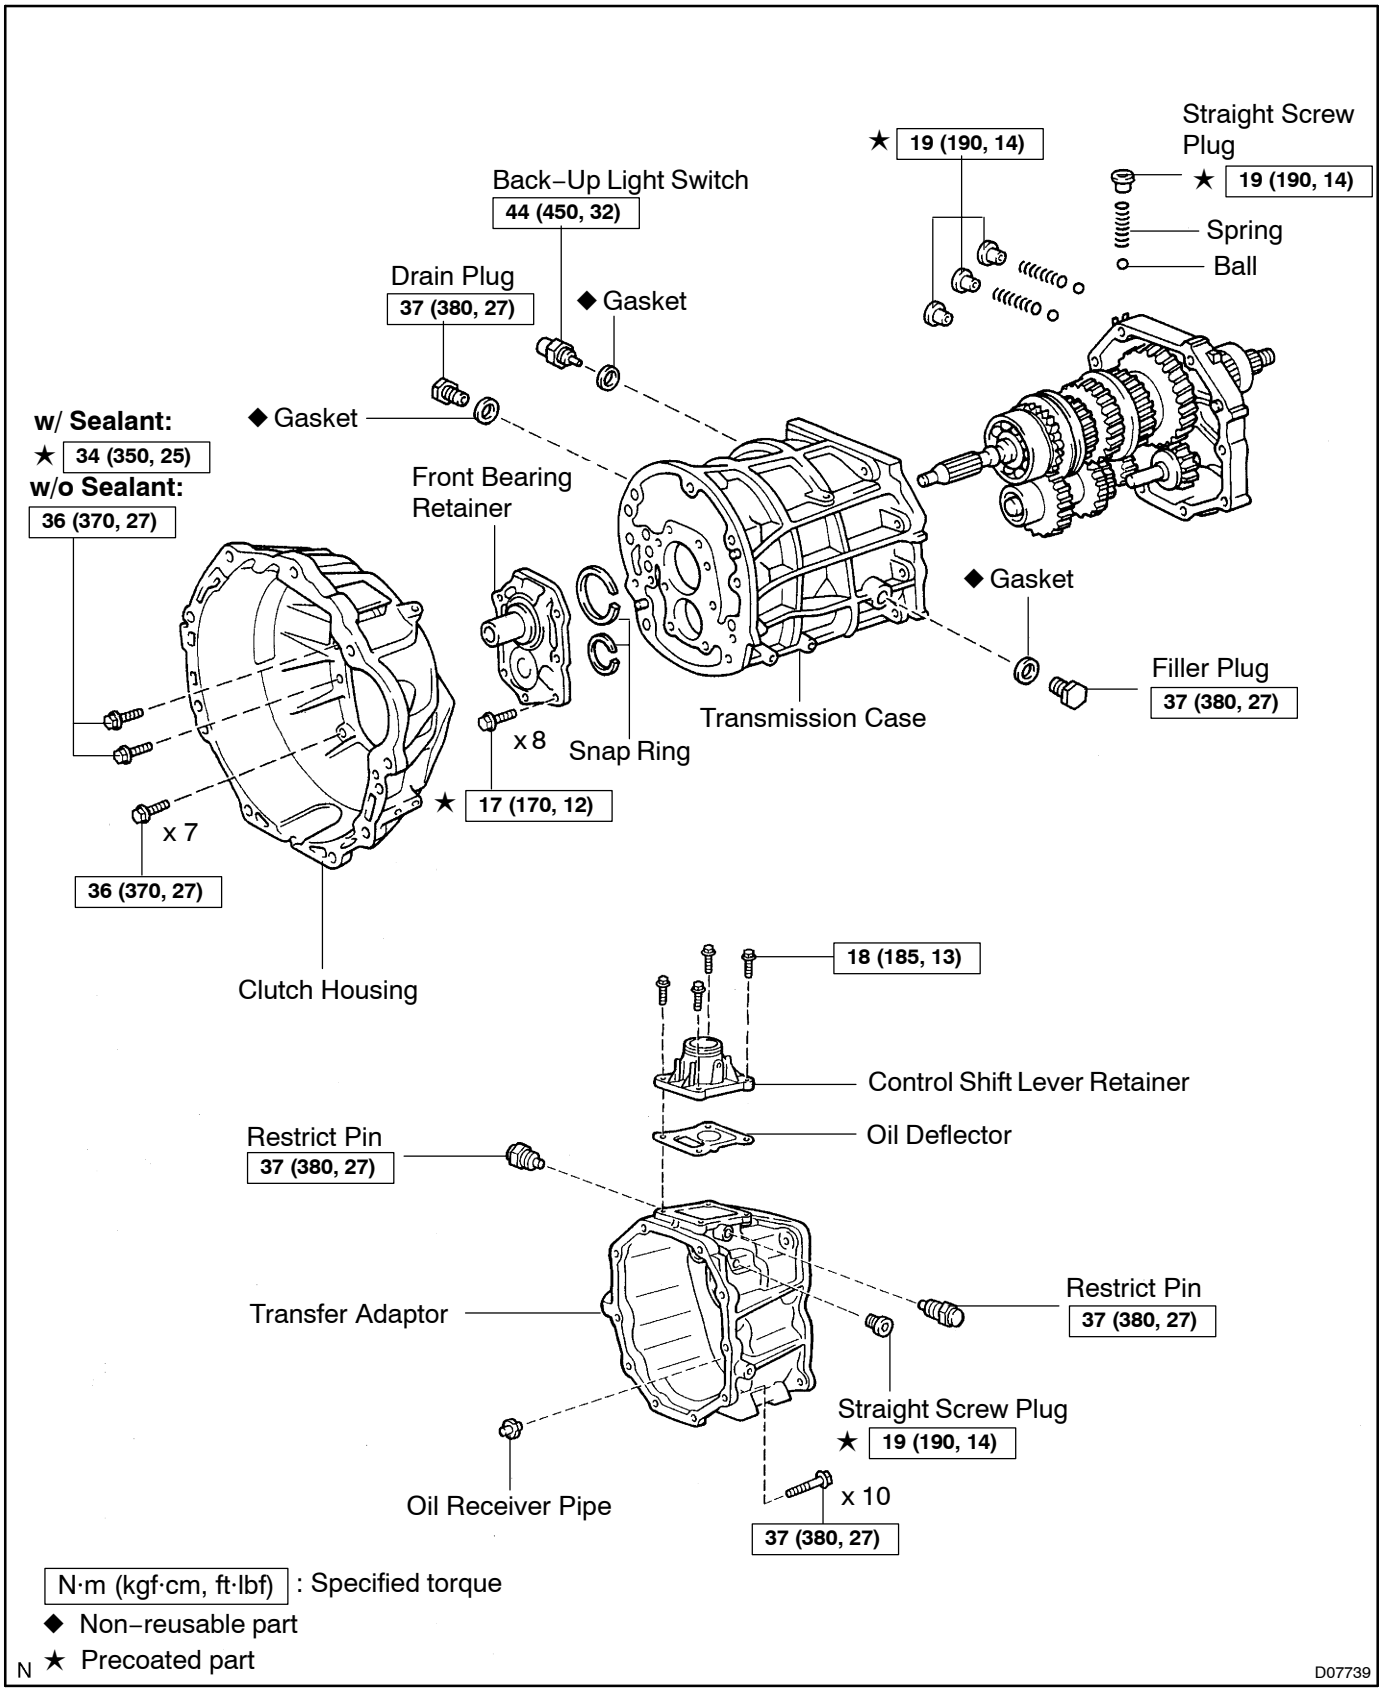

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

D07739

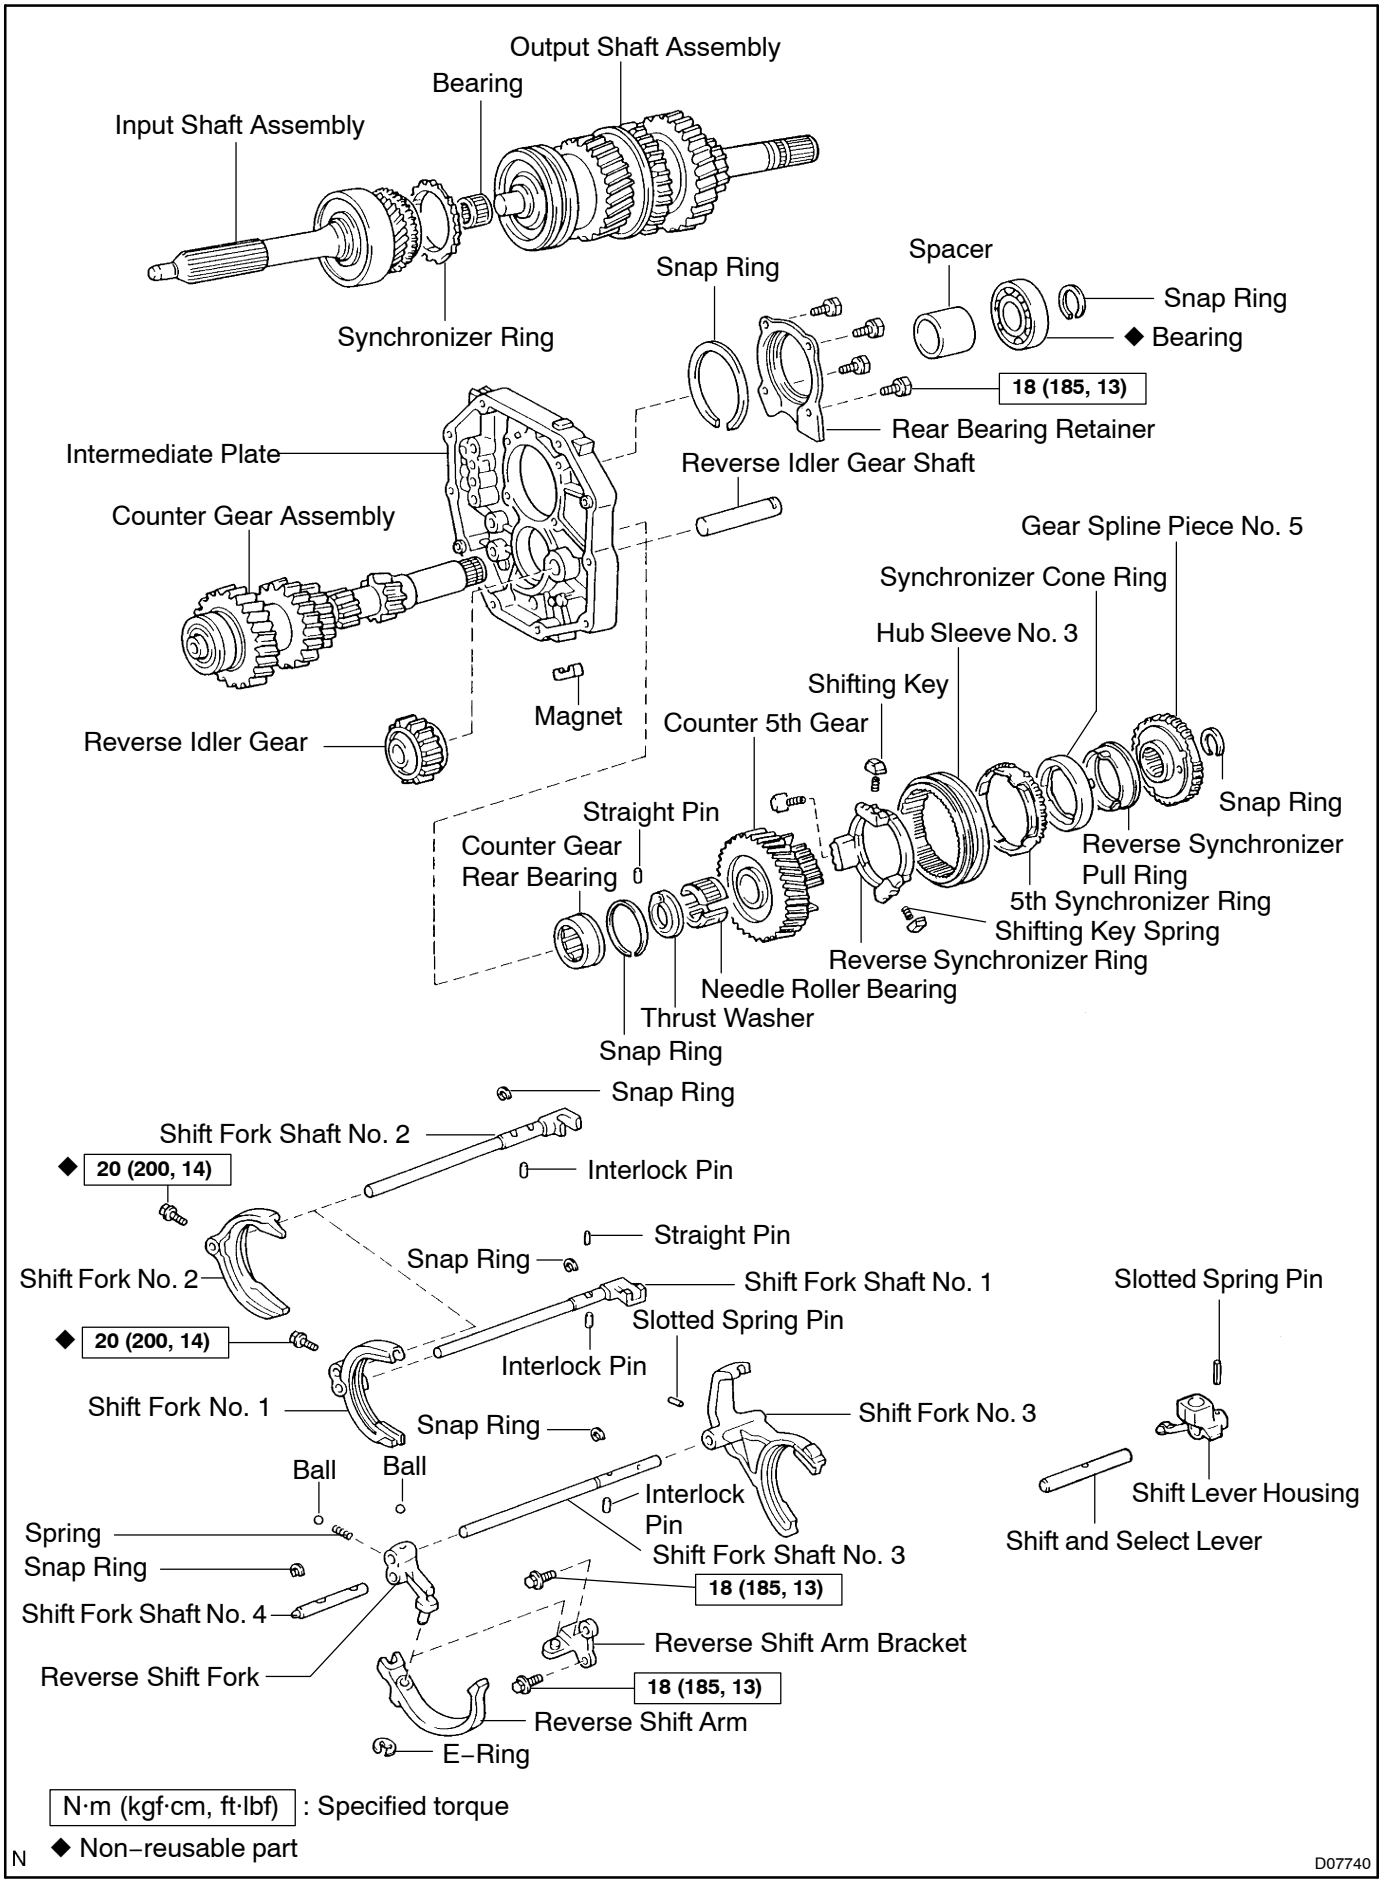
Output Shaft Assembly
Bearing
Input Shaft Assembly
Synchronizer Ring
Snap Ring
Spacer
Snap Ring
◆ Bearing
18 (185, 13)
Rear Bearing Retainer
Intermediate Plate
Reverse Idler Gear Shaft
Counter Gear Assembly
Gear Spline Piece No. 5
Synchronizer Cone Ring
Hub Sleeve No. 3
Shifting Key
Magnet
Counter 5th Gear
Reverse Idler Gear
Straight Pin
Counter Gear Rear Bearing
Snap Ring
Reverse Synchronizer Pull Ring
5th Synchronizer Ring
Shifting Key Spring
Reverse Synchronizer Ring
Needle Roller Bearing
Thrust Washer
Snap Ring
Snap Ring
Shift Fork Shaft No. 2
◆ 20 (200, 14)
Interlock Pin
Straight Pin
Snap Ring
Shift Fork No. 2
Shift Fork Shaft No. 1
Slotted Spring Pin
◆ 20 (200, 14)
Interlock Pin
Shift Fork No. 1
Snap Ring
Shift Fork No. 3
Ball
Ball
Interlock Pin
Spring
Snap Ring
Shift Fork Shaft No. 3
18 (185, 13)
Shift Fork Shaft No. 4
Reverse Shift Arm Bracket
Reverse Shift Fork
18 (185, 13)
Reverse Shift Arm
E–Ring
Slotted Spring Pin
Shift Lever Housing
Shift and Select Lever
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
N
D07740