















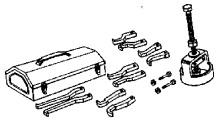
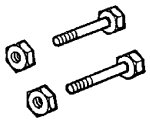

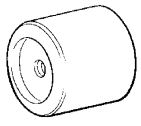










SUSPENSION AND AXLE












PP2H4–01













SST (Special Service Tools)


	09214–76011	Crankshaft Pulley Replacer	Rear differential
	09226–10010	Crankshaft Front & Rear Bearing Replacer	Rear leaf spring
	09308–00010	Oil Seal Puller	Front axle Rear differential
	09308–10010	Oil Seal Puller	Rear differential
	09316–60011	Transmission & Transfer Bearing Replacer	Rear differential
	(09316–00011)	Replacer Pipe	
	(09316–00021)	Replacer "A"	
	09330–00021	Companion Flange Holding Tool	Rear differential
	09504–00011	Differential Side Bearing Adjusting Nut Wrench	Rear differential
	09504–22011	Differential Side Bearing Replacer	Rear differential
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	Rear differential
	09550–60010	Differential Side Bearing Replacer	Rear differential

	09556–22010	Drive Pinion Front Bearing Remover	Rear differential
	09605–60010	Steering Knuckle Bearing Cup Replacer–	Front axle
	09606–60020	Steering Knuckle Bearing Remover	Front axle
	09607–60020	Front Wheel Adjusting Nut Wrench	Front axle
	09611–22012	Tie Rod End Puller	Front axle
	09612–65014	Steering Worm Bearing Puller	Front axle
	(09612–01010)	Claw "A"	
	(09612–01050)	Hanger Pin with Nut	
	09618–60010	Front Axle & Drive Shaft Bearing Replacer	Front axle
	09636–20010	Upper Ball Joint Dust Cover Replacer	Rear leaf spring
	09649–17010	Steering Knuckle Tool	Rear differential
	09710–22042	Rear Suspension Bushing Tool Set	Front suspension
	(09710–02051)	Base	

	(09710–02061)	Replacer	
	(09710–02071)	Bushing Remover & Replacer	
	09710–30050	Suspension Arm Bushing Replacer	Front suspension Rear differential
	09726–40010	Lower Control Shaft Bearing Replacer	Rear differential
	09727–30021	Coil Spring Compressor	Front suspension
	(09727–00010)	Bolt Set	
	(09727–00021)	Arm Set	
	(09727–00031)	Compressor	
	09950–00020	Bearing Remover	Rear differential Rear leaf spring
	09950–00030	Bearing Remover Attachment	Rear differential
	09950–30011	Puller A Set	Rear differential
	(09951–03010)	Upper Plate	
	(09953–03010)	Center Bolt	

	(09954–03010) Arm	
	(09955–03030) Lower Plate 130	
	(09956–03040) Adapter 22	
	09950–40011 Puller B Set	
	(09951–04010) Hanger 150	Rear differential
	(09951–04020) Hanger 200	Rear leaf spring
	(09953–04020) Center Bolt 150	Rear differential
	(09953–04030) Center Bolt 200	Rear leaf spring
	(09954–04010) Arm 25	Rear differential
	(09955–04061) Claw No.6	Rear differential
	(09957–04010) Attachment	Rear differential Rear leaf spring
	(09958–04011) Holder	Rear differential
	09950–50012 Puller C Set	Rear leaf spring

	(09952–05010) Slide Arm	
	(09954–05040) Claw No.4	
	(09955–05040) Adapter No.4	
	09950–60010 Replacer Set	
	(09951–00360) Replacer 36	Rear leaf spring
	(09951–00480) Replacer 48	Rear differential
	(09951–00580) Replacer 58	Rear differential
	09950–60020 Replacer Set No.2	
	(09951–00710) Replacer 71	Rear differential
	(09951–00720) Replacer 72	Front axle
	(09951–00810) Replacer 81	Front axle
	(09951–00890) Replacer 89	Rear differential
	(09951–00910) Replacer 91	Front axle

	09950–70010 Handle Set	Front axle Front suspension Rear differential
	(09951–07150) Handle 150	