

SA1IK–02

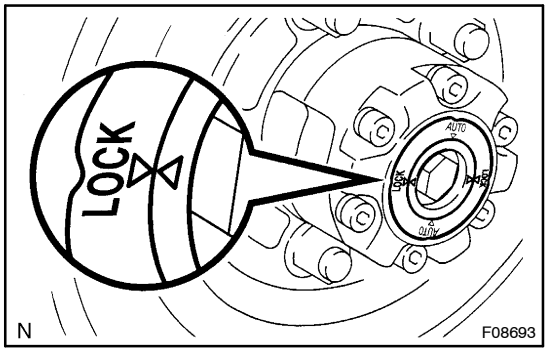

REMOVAL

1. SET KNOB OF DUAL MODE AUTOMATIC LOCKING HUB

Using a hub nut wrench, set the knob of the dual mode automatic locking hub to ”LOCK” position.

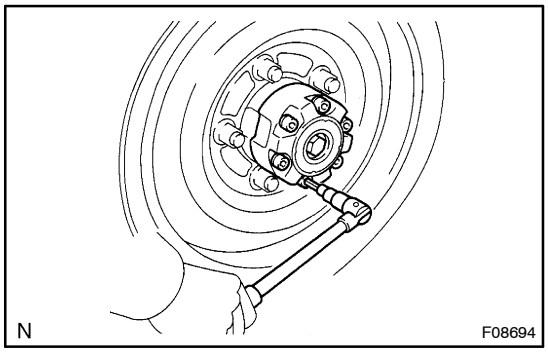

2. REMOVE DUAL MODE AUTOMATIC LOCKING HUB

Using a 8 mm hexagon wrench, remove the 6 hexagon bolts and locking hub.

3. REMOVE SNAP RING, SPINDLE WASHER AND BRAKE SET FROM SPINDLE

(a) Using a snap ring expander, remove the snap ring.
(b) Remove the spindle washer and brake set.

4. REMOVE GASKET