
SA1AI–01

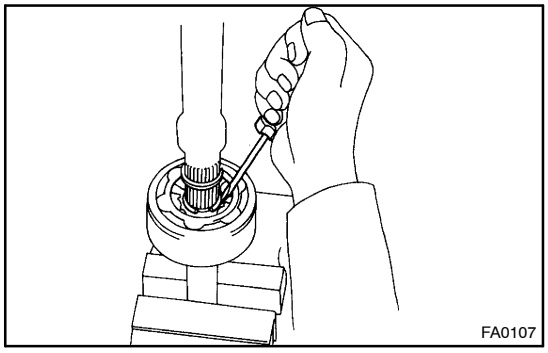

REASSEMBLY

INSTALL OUTER SHAFT

(a) Hold the outer shaft in a vise and while compressing a new snap ring, install the inner shaft to the outer shaft.

(b) Make sure that the inner shaft cannot be pulled out.