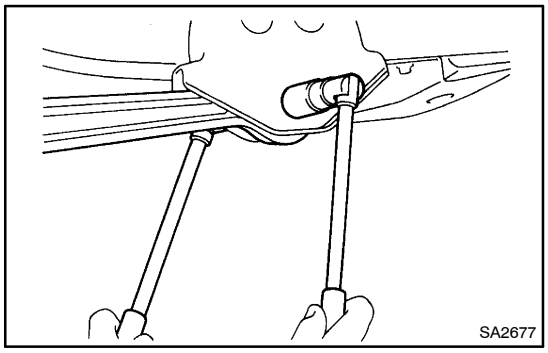
SA1AU–02

REMOVAL

1. REMOVE FRONT WHEEL

Torque:
Steel wheels: 209 N·m (2,131 kgf·cm, 154 ft·lbf)
Aluminum wheels: 131 N·m (1,336 kgf·cm, 97 ft·lbf)

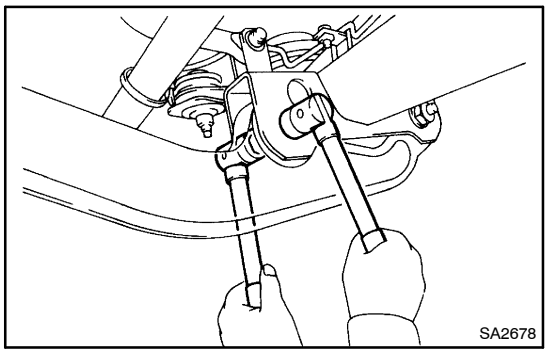

SA2677

2. REMOVE LEADING ARM

(a) Remove the bolt, washer and nut from the leading arm on the frame side.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:
At the time of installation, after stabilizing the suspension, torque the bolt.


SA2678

(b) Remove the 2 bolts and nuts from the leading arm on the axle housing side.

Torque: 172 N·m (1,750 kgf·cm, 127 ft·lbf)

HINT:
At the time of installation, after stabilizing the suspension, torque the bolt.

(c) Remove the leading arm.