
SA1AV–02

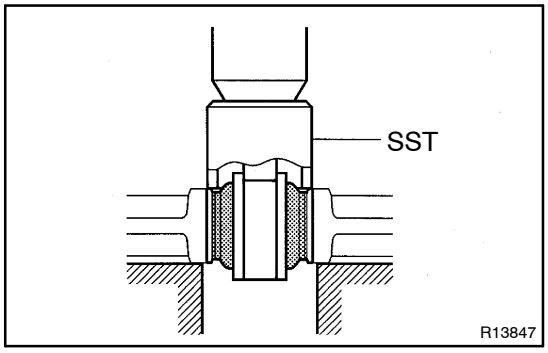


REPLACEMENT

REPLACE BUSHINGS

(a) Front side:
Using SST and a press, replace the bushing from the leading arm.
SST 09710–30050

(b) Rear side:
Using SST and a press, replace the bushing from the leading arm.
SST 09710–22042 (09710–02061)

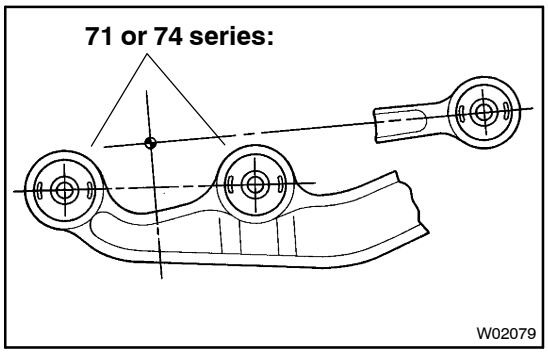

HINT:
Assemble a new bushing, as shown in the illustration.