
SA1QM–01

# REMOVAL

**1. DRAIN HYPOID GEAR OIL**
**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**

**2. REMOVE REAR AXLE SHAFTS**
**(See Pub. No. RM183E on page SA–118)**

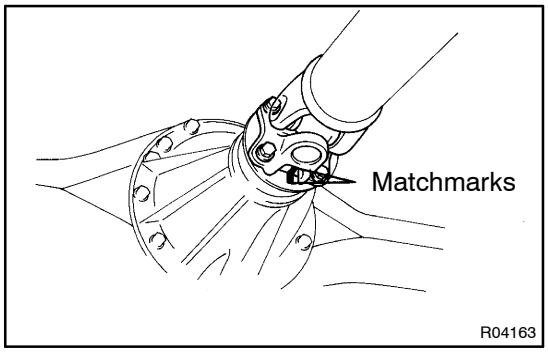



**3. DISCONNECT REAR PROPELLER SHAFT**

(a) Place matchmarks on the propeller shaft and differential flange.

(b) Remove the 4 nuts, washers, bolts and disconnect the propeller shaft.
**Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)**

(c) Support the propeller shaft.

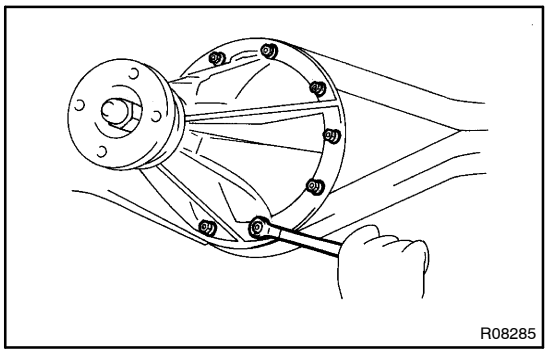


**4. REMOVE DIFFERENTIAL CARRIER ASSEMBLY**

(a) Remove the 10 nuts, washers and differential carrier assembly.
**Torque: 72 N·m (740 kgf·cm, 53 ft·lbf)**

**NOTICE:**
**Be careful not to damage the installation surface.**

(b) Remove the gasket.