
FI0QC–01

REMOVAL

CAUTION:

Do not smoke or work near an open frame when working the fuel pump.

1. REMOVE FUEL TANK FROM VEHICLE
(See Pub. No. RM730E, page BO–43)

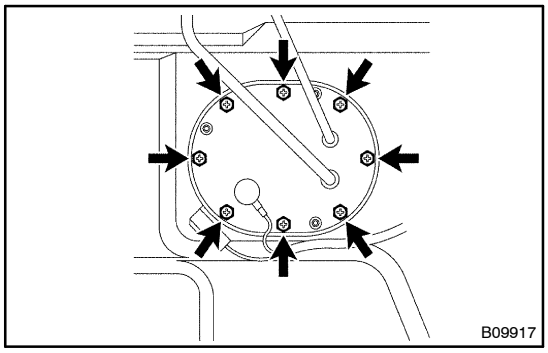

2. REMOVE FUEL PUMP AND BRACKET ASSEMBLY FROM FUEL TANK


(a) Remove the 8 bolts.

(b) Pull out the fuel pump and bracket assembly.

NOTICE:

Do not damage the fuel pump filter.

(c) Remove the gasket from the fuel pump bracket.

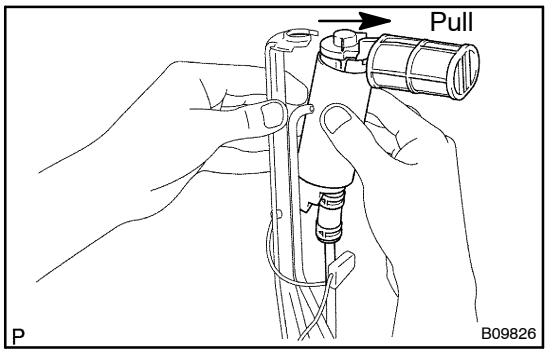


3. REMOVE FUEL PUMP FROM FUEL PUMP BRACKET

(a) Disconnect the lead wire connector from the fuel pump.

(b) Pull out the lower side of the fuel pump from the pump bracket.

(c) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.

(d) Remove the rubber cushion from the fuel pump.

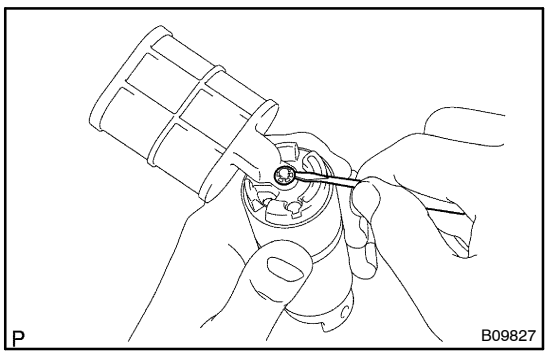

4. REMOVE FUEL PUMP FILTER FROM FUEL PUMP

(a) Using a small screwdriver, pry out the clip.

(b) Pull out the pump filter.