
FI0QG–01

REMOVAL

CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE SUB FUEL TANK FROM VEHICLE
(See Pub. No. RM730E, page BO–43)

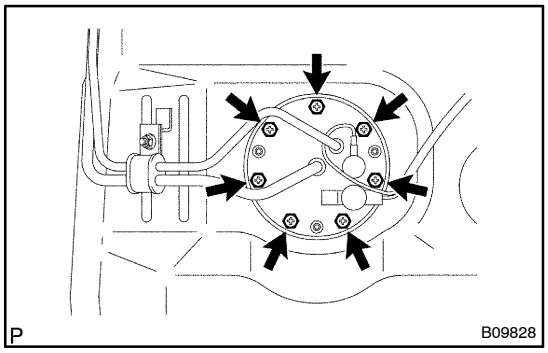

2. REMOVE SUB FUEL PUMP AND BRACKET ASSEMBLY FROM SUB FUEL TANK


(a) Remove the 7 bolts.

(b) Pull out the sub fuel pump and bracket assembly.

NOTICE:

Do not damage the fuel pump filter.

(c) Remove the gasket from the sub fuel pump bracket.

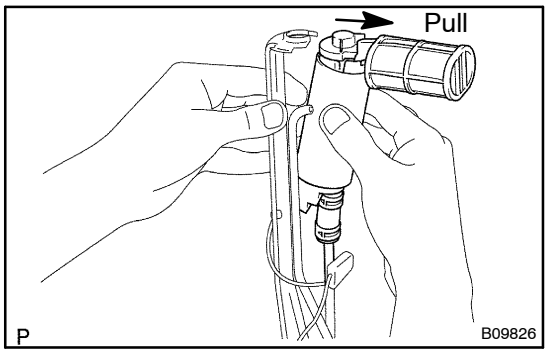


3. REMOVE SUB FUEL PUMP FROM PUMP BRACKET

(a) Disconnect the lead wire connector from the sub fuel pump.

(b) Pull out the lower side of the sub fuel pump from the pump bracket.

(c) Disconnect the fuel hose from the sub fuel pump, and remove the sub fuel pump.

(d) Remove the rubber cushion from the sub fuel pump.

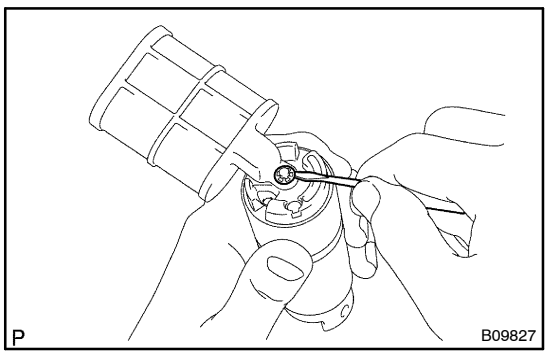

4. REMOVE FUEL PUMP FILTER FROM SUB FUEL PUMP

(a) Using a small screwdriver, pry out the clip.

(b) Pull out the pump filter.