
FI0QH–01

INSTALLATION

1. INSTALL FUEL PUMP FILTER TO SUB FUEL PUMP

Install the pump filter with a new clip.

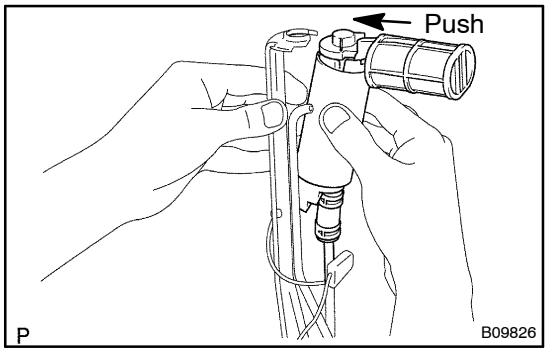


2. INSTALL SUB FUEL PUMP TO FUEL PUMP BRACKET

(a) Connect the fuel hose to the outlet port of the sub fuel pump.

(b) Install the rubber cushion to the sub fuel pump.

(c) Install the sub fuel pump by pushing the lower side of the sub fuel pump.

(d) Connect the lead wire connector to the sub fuel pump.

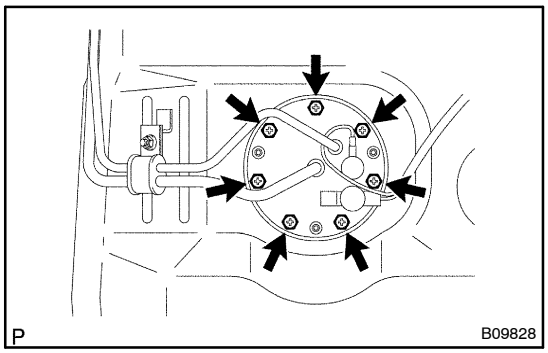

3. INSTALL SUB FUEL PUMP AND BRACKET ASSEMBLY TO FUEL TANK

(a) Install a new gasket to the sub fuel pump bracket.

(b) Install the fuel pump bracket with the 7 bolts.

Torque: 3.0 N·m (30.6 kgf·cm, 27 in.·lbf)

4. INSTALL SUB FUEL TANK TO VEHICLE

(See Pub. No. RM730E, page BO–43)

5. CHECK FOR FUEL LEAKS (See page FI–1)