
FI0QR–01

REMOVAL

1. DRAIN ENGINE COOLANT

2. DISCONNECT ACCELERATOR CABLE FROM THROTTLE BODY

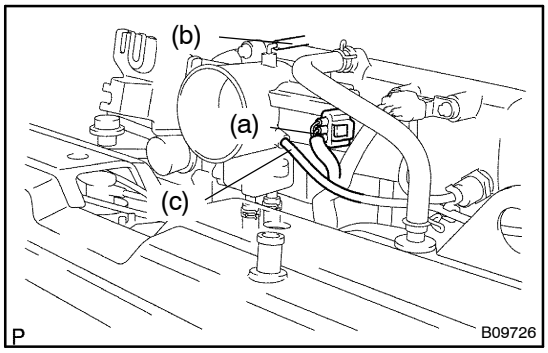


3. REMOVE THROTTLE BODY


(a) Disconnect the throttle position sensor connector.

(b) Disconnect the vacuum hose from the throttle body.

(c) Disconnect the air hose for the fuel pressure regulator from the throttle body.

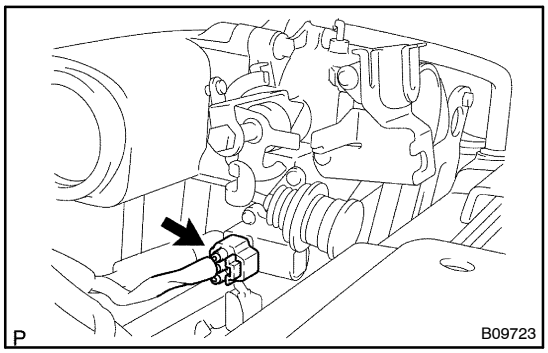

(d) Disconnect the ISC valve connector.

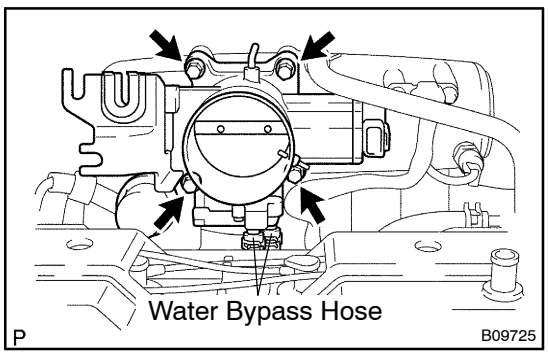

(e) Remove the 4 bolts.

(f) Disconnect the throttle body from the intake air chamber.

(g) Remove the gasket.

(h) Disconnect the 2 water bypass hoses from the throttle body, and remove the throttle body.