
FI0QT–01

INSTALLATION

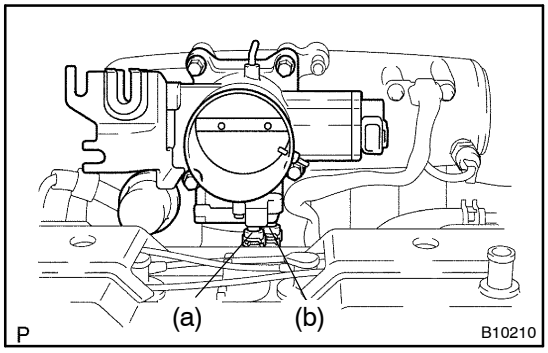


1. INSTALL THROTTLE BODY


(a) Connect the water bypass hose (from the water bypass pipe) to the throttle body.

(b) Connect the water bypass hose (from the cylinder head) to the throttle body.

(c) Install a new gasket and the throttle body with the 4 bolts.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

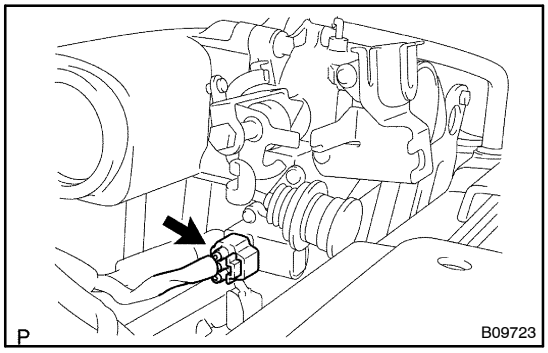

(d) Connect the ISC valve connector.

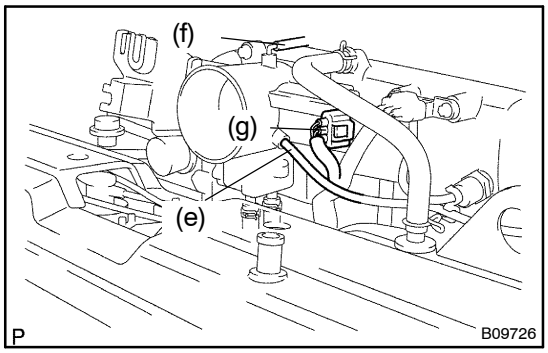

(e) Connect the air hose for the fuel pressure regulator from the throttle body.

(f) Connect the vacuum hose to the throttle body.

(g) Connect the throttle position sensor connector.

2. CONNECT ACCELERATOR CABLE FROM THROTTLE BODY

3. FILL ENGINE COOLANT