
FI0QY–01

REMOVAL

1. REMOVE THROTTLE BODY (See page FI–29)

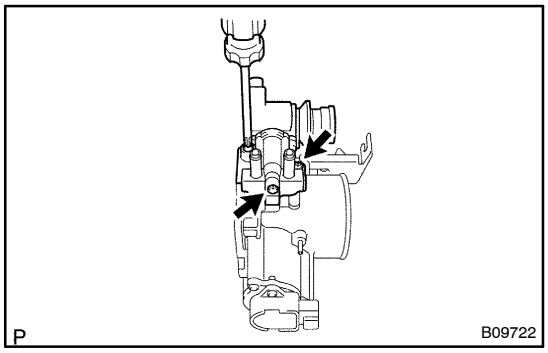

2. REMOVE ISC VALVE

Remove the 3 screws, ISC valve and gasket.