
FI0R0–01

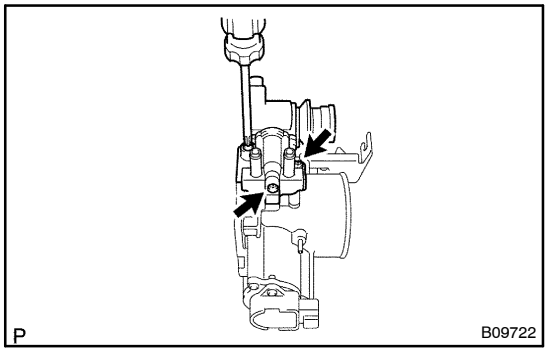


# INSTALLATION

**1. INSTALL ISC VALVE**

Install a new gasket and the ISC valve with the 3 screws.

**2. INSTALL THROTTLE BODY (See page FI–31)**