
FI0R6–01

INSPECTION

1. REMOVE FUEL PUMP RELAY

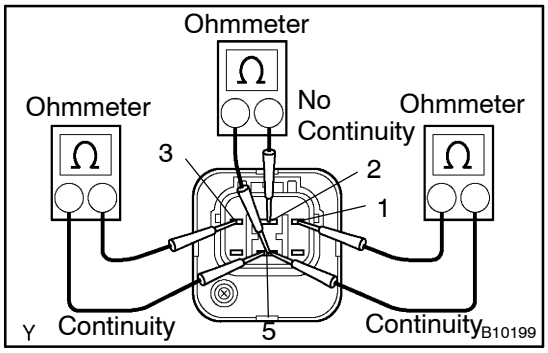

2. INSPECT FUEL PUMP RELAY

(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 5.


If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 2 and 5.

If there is continuity, replace the relay.

(3) Check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

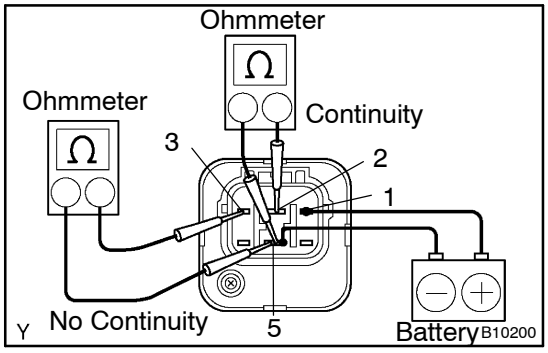

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 1 and 5.

(2) Using an ohmmeter, check that there is continuity between terminals 2 and 5.

If there is no continuity, replace the relay.

(3) Check that there is no continuity between the 3 and 5.

If there is continuity, replace the relay.

3. REINSTALL FUEL PUMP RELAY