
FI0RA–01

INSPECTION

1. REMOVE SUB FUEL TANK FORCING DRIVING RELAY

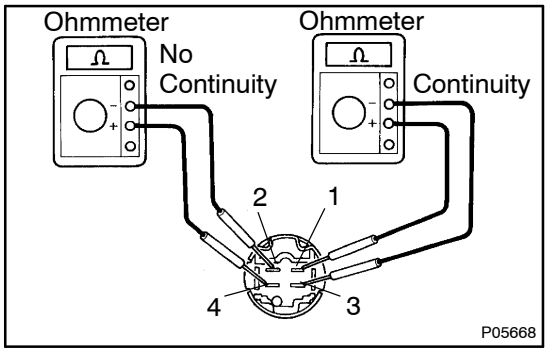

2. INSPECT SUB FUEL TANK FORCING DRIVING RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

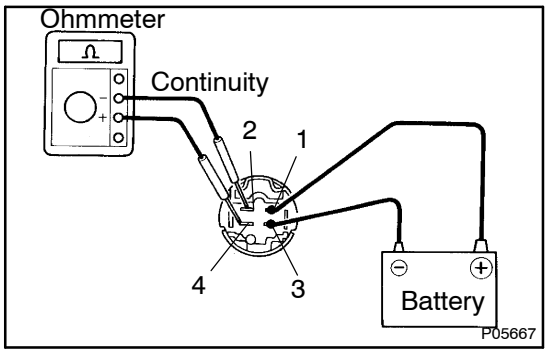

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 1 and 3.

(2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

3. REINSTALL SUB FUEL TANK FORCING DRIVING RELAY