FUEL CUT RPM


SF0YV–02

INSPECTION

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TACHOMETER OR TOYOTA HAND–HELD TESTER (See page EM–3)

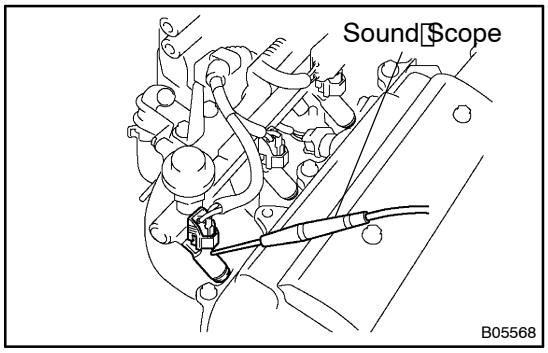

3. INSPECT FUEL CUTOFF RPM OPERATION

(a) Increase the engine speed to at 2,500 rpm or more.

(b) Check for injector operating noise.

(c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

- The vehicle should be stopped.
- Measure with the A/C OFF.

Fuel return speed: 1,400 rpm

4. DISCONNECT TACHOMETER OR TOYOTA HAND–HELD TESTER