
COMBINATION METER


CIRCUIT

BE1H5–02

w/o Tachometer:

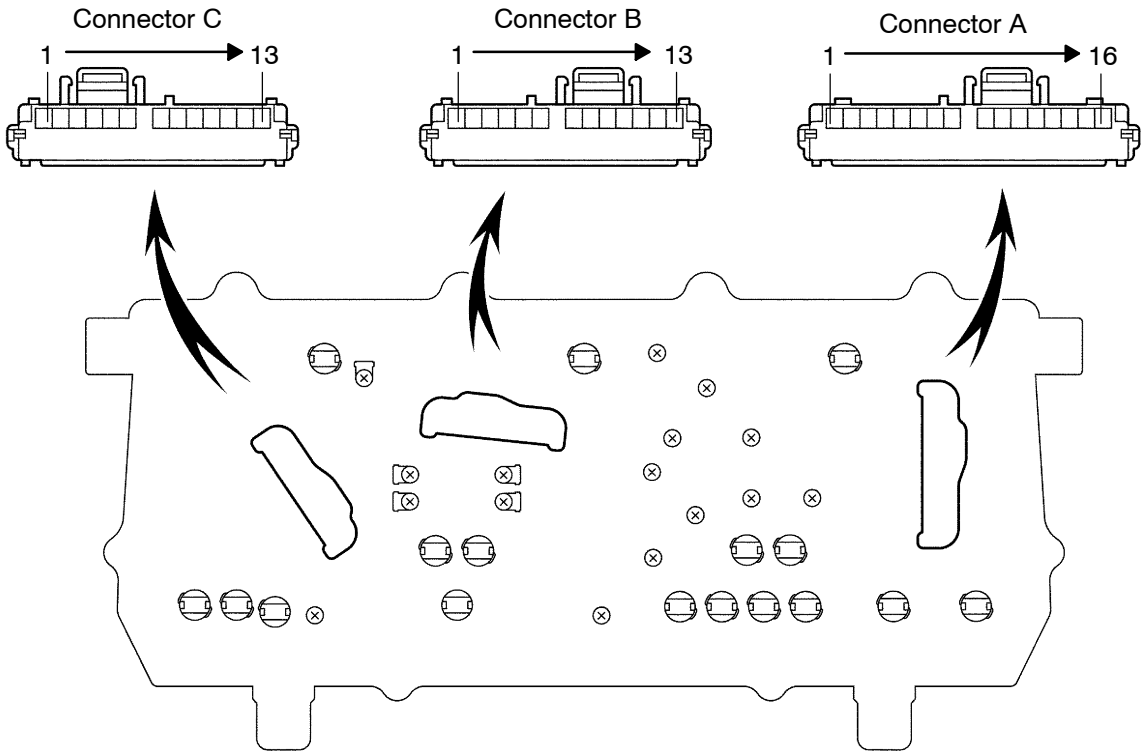


w/ Tachometer:

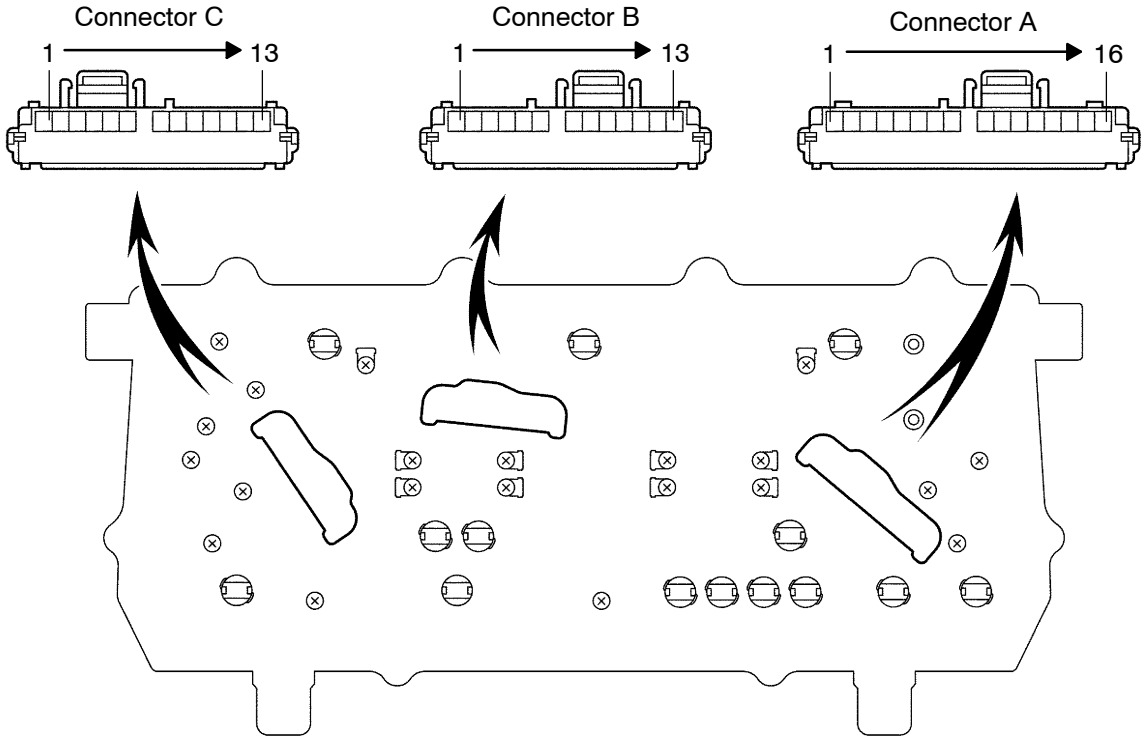

P

I14937

w/o Tachometer:

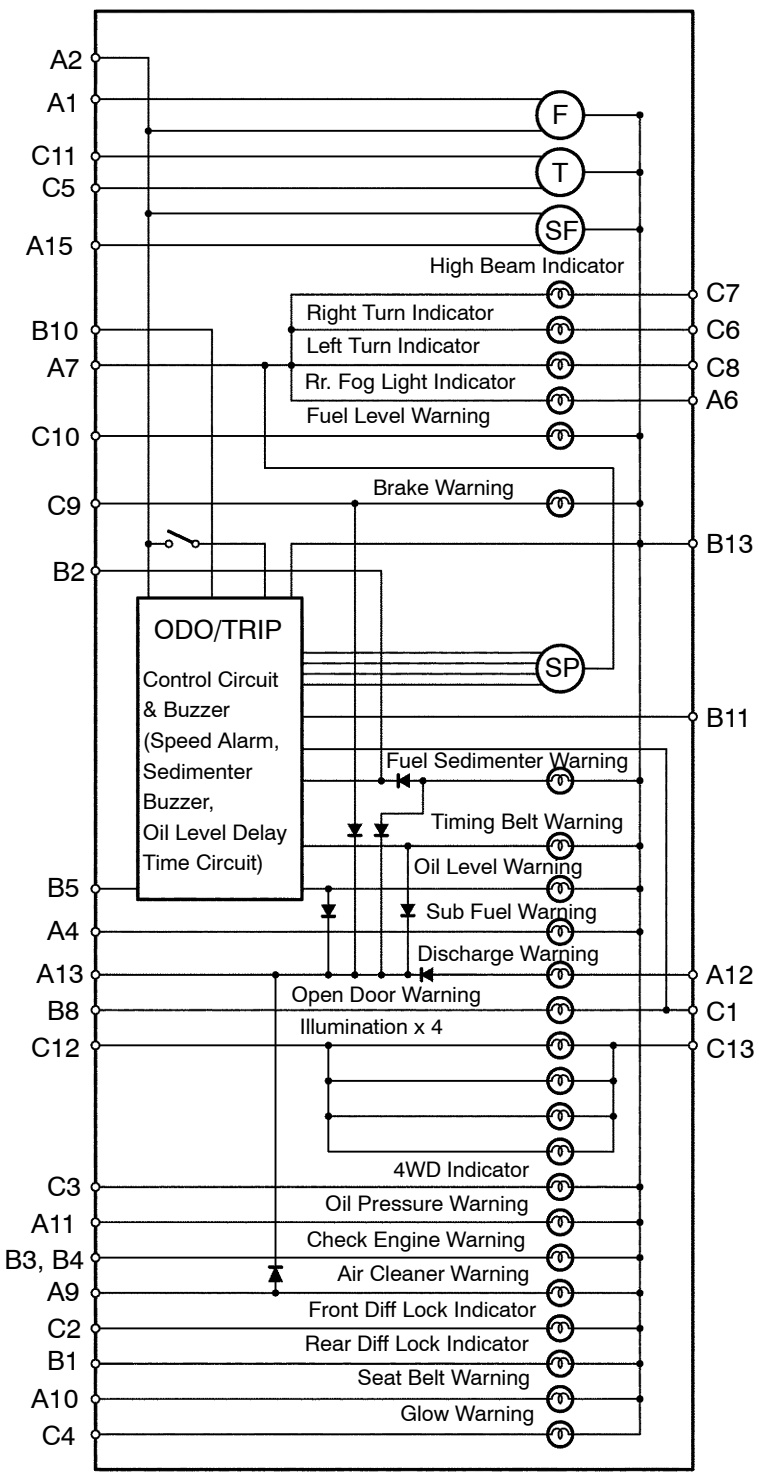


No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Light Ground
	4	Sub Fuel Changeover Switch
	6	Rear Fog Light Switch and Relay
	7	Ground
	9	Air Cleaner Warning Switch
	10	Seat Belt Warning Relay
	11	Oil Pressure Sender Gauge
	12	ENGINE Fuse
	13	Alternator L Terminal
	15	Sub Fuel Sender Gauge
B	1	Rear Diff Lock Position Switch, Diff. Lock ECU
	2	Fuel Sedimenter
	3	Engine ECU (*1)
	4	Engine ECU (*2)
	5	Engine Oil Level Switch
	8	Door Courtesy Switch
	10	Speed Sensor
	11	Engine ECU (*1, *2), Diff. Lock ECU
	13	ENGINE Fuse
C	1	DOME Fuse
	2	Front Diff. Lock Position Switch, Diff. Lock ECU
	3	Center Diff. Lock Indicator Switch Switch, Diff. Lock ECU
	4	Engine ECU (*2), Pre–heating Timer (*3)
	5	Ground (Engine)
	6	Turn Signal Switch (Right)
	7	Headlight Dimmer Switch
	8	Turn Signal Switch (Left)
	9	Brake Fluid Level Warning Switch, Parking Brake Switch, Vacuum Switch
	10	Fuel Level Warning Switch
	11	Water Temperature Sender Gauge
	12	Light Control Rheostat or Illumination Ground
	13	TAIL Fuse

(F) : Fuel Receiver Gauge
(T) : Water Temp. Receiver Gauge
(SF) : Sub Fuel Receiver Gauge
(SP) : Speedometer

(*1): 1FZ–FE
(*2): 1HD–FTE
(*3): 1HZ

I14935

w/ Tachometer:

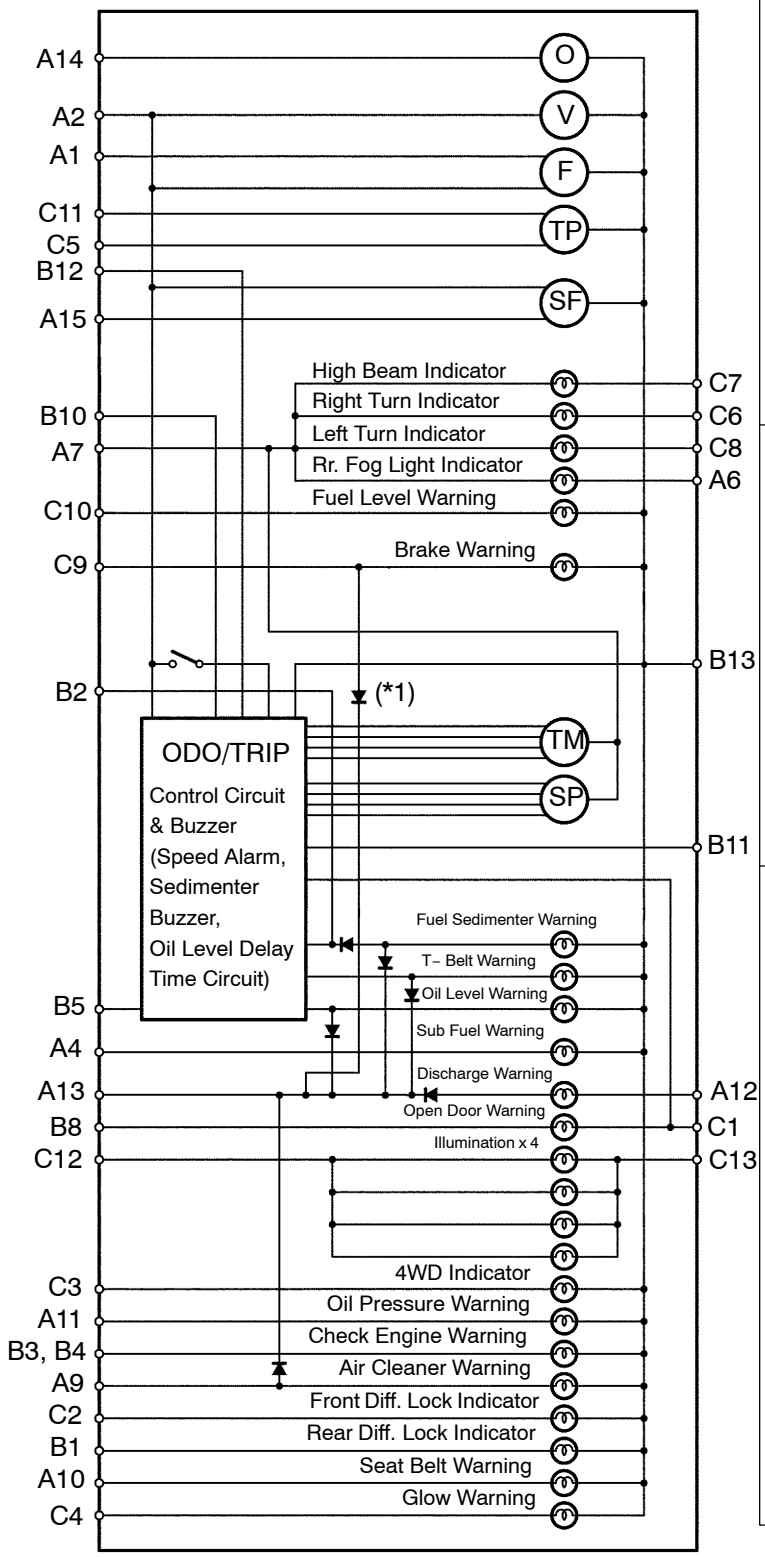

No.		Wiring Connector Side
A	1	Fuel Sender Gauge
	2	Light Ground
	4	Sub Fuel Changeover Switch
	6	Rear Fog Light Switch and Relay
	7	Ground
	9	Air Cleaner Warning Switch
	10	Seat Belt Warning Relay
	11	Oil Pressure Sender Gauge
	12	ENGINE Fuse
	13	Alternator L Terminal
	14	Oil Pressure Snder Gauge
	15	Sub Fuel Sender Gauge
B	1	Rear Diff Lock Position Switch, Diff. Lock ECU
	2	Fuel Sedimenter
	3	Engine ECU (*2)
	4	Engine ECU (*3)
	5	Engine Oil Level Switch
	8	Door Courtesy Switch
	10	Speed Sensor
	11	Engine ECU (*2, *3), Diff. Lock ECU
	12	Pick–up Sensor (*4), Engine ECU (*2, *3)
	13	ENGINE Fuse
C	1	DOME Fuse
	2	Front Diff. Lock Position Switch, Diff. Lock ECU
	3	Center Diff. Lock Indicator Switch Switch, Diff. Lock ECU
	4	Engine ECU (*3), Pre–heating Timer (*4)
	5	Ground (Engine)
	6	Turn Signal Switch (Right)
	7	Headlight Dimmer Switch
	8	Turn Signal Switch (Left)
	9	Brake Fluid Level Warning Switch, Parking Brake Switch, Vacuum Switch
	10	Fuel Level Warning Switch
	11	Water Temperature Sender Gauge
	12	Light Control Rheostat or Illumination ground
	13	TAIL Fuse

(O) : Oil Pressure Gauge
(V) : Volt Gauge
(F) : Fuel Receiver Gauge
(TP) : Water Temp. Gauge
(SF) : Sub Fuel Receiver Gauge
(TM) : Tachometer
(SP) : Speedometer

(*1): Australia
(*2): 1FZ–FE
(*3): 1HD–FTE
(*4): 1HZ

I14934