

CL0DR–01

DISASSEMBLY

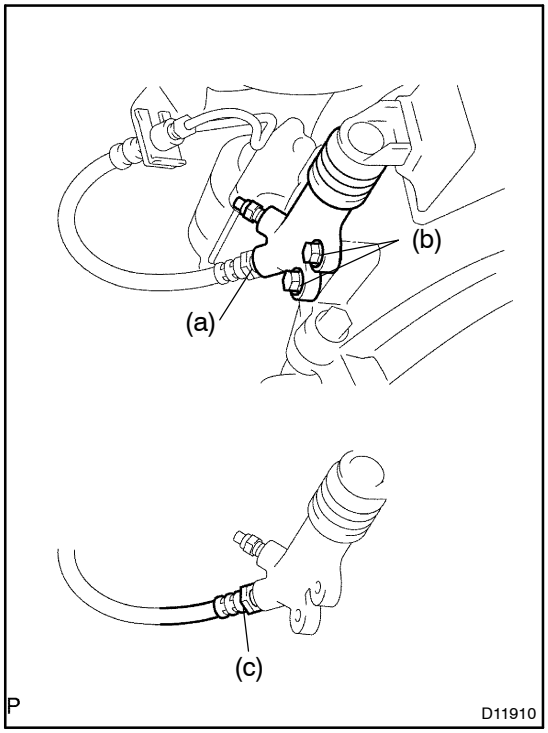

1. REMOVE RELEASE CYLINDER FROM TRANSMISSION

(a) Temporarily Loosen the clutch hose.
(b) Remove the 2 bolts and pull out the release cylinder.
(c) Disconnect the clutch hose.
(d) Use a container to clutch the fluid.

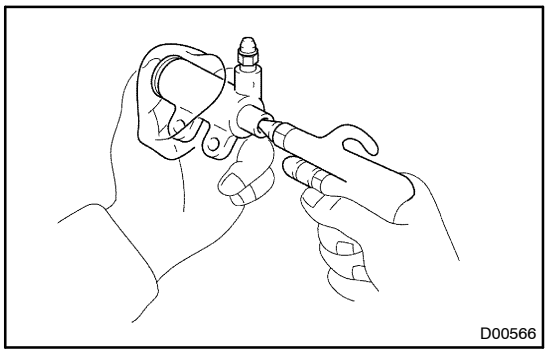

2. PULL OUT BOOT WITH PUSH ROD

3. REMOVE PISTON

Using compressed air, remove the piston with the spring from the cylinder.