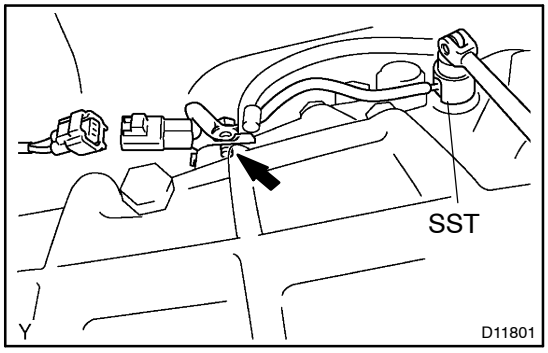


MANUAL TRANSMISSION UNIT (H150F)

MT0G6–01

ON–VEHICLE INSPECTION


1. REMOVE BACK–UP LIGHT SWITCH

(a) Disconnect the back–up light switch connector.

(b) Remove the bolt with bracket and use the SST to remove the back–up light switch.

SST 09817–16011

Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)

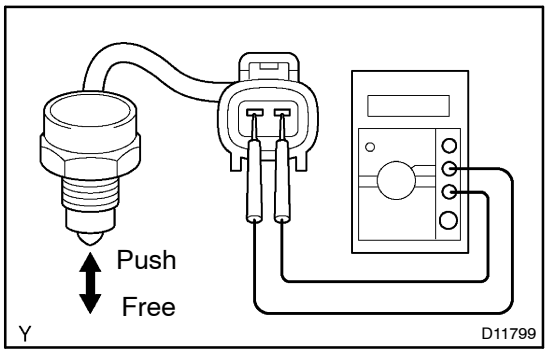


(c) Inspect the back–up light switch

Check that there is continuity between terminals, as shown in the illustration.

Switch Position	Specified
Push	Continuity
Free	No continuity

If the operation is not as specified, replace the switch.

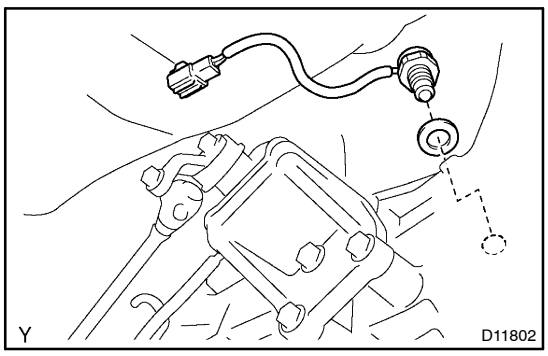


2. REMOVE FAST POSITION SWITCH

(a) Disconnect the fast position switch connector.

(b) Using the SST remove the fast position switch.

SST 09817–16011

Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)

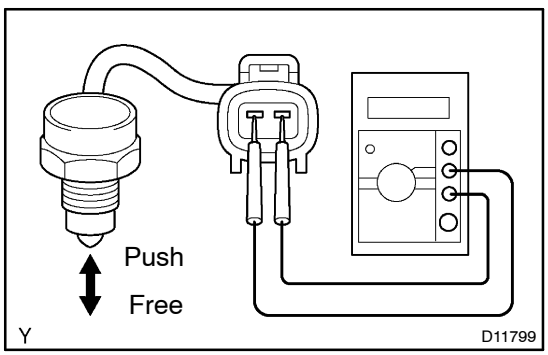

(c) Inspect the fast position switch.

Check that there is continuity between terminals, as shown in the illustration.

Switch Position	Specified
Push	Continuity
Free	No continuity

If the operation is not as specified, replace the switch.