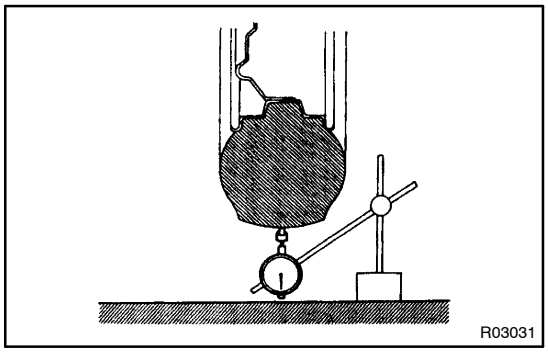
TIRE AND WHEEL

SA1A2–04


INSPECTION

1. INSPECT TIRE

(a) Check the tires for wear and proper inflation pressure.
Cold tire inflation pressure: (See page SS–8)


R03031


(b) Check the tire runout.
Tire runout: 3.0 mm (0.118 in.) or less

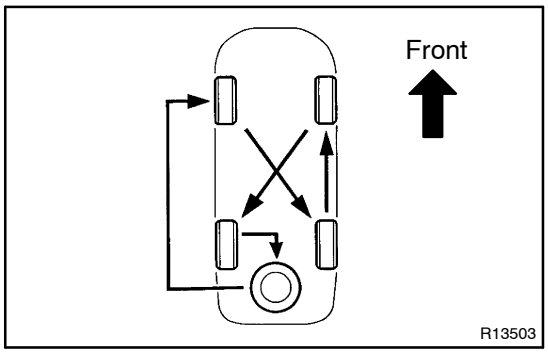

R13503

2. ROTATE TIRE

HINT:
See the illustration for how to rotate the tires when you include the spare tire in rotation.

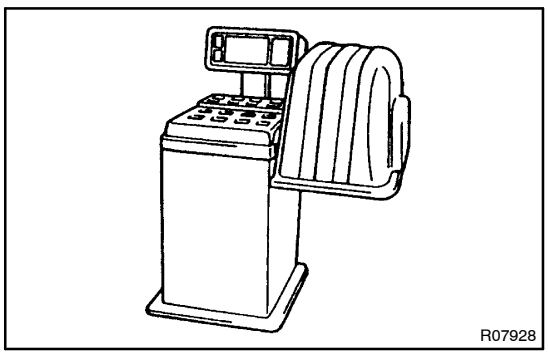
R07928

3. INSPECT WHEEL BALANCE

(a) Check and adjust the Off–the car balance.
(b) If necessary, check and adjust the On–the car balance.
Imbalance after adjustment: 14.0 g (0.031 lb) or less

4. CHECK FRONT SUSPENSION FOR LOOSENESS

5. CHECK STEERING LINKAGE FOR LOOSENESS

6. CHECK BALL JOINT FOR LOOSENESS

7. CHECK SHOCK ABSORBER WORKS PROPERLY

- Check for oil leak
- Check the mounting bushings for wear
- Bounce front and rear of the vehicle