
Position of Parts in Instrument Panel

[LHD]

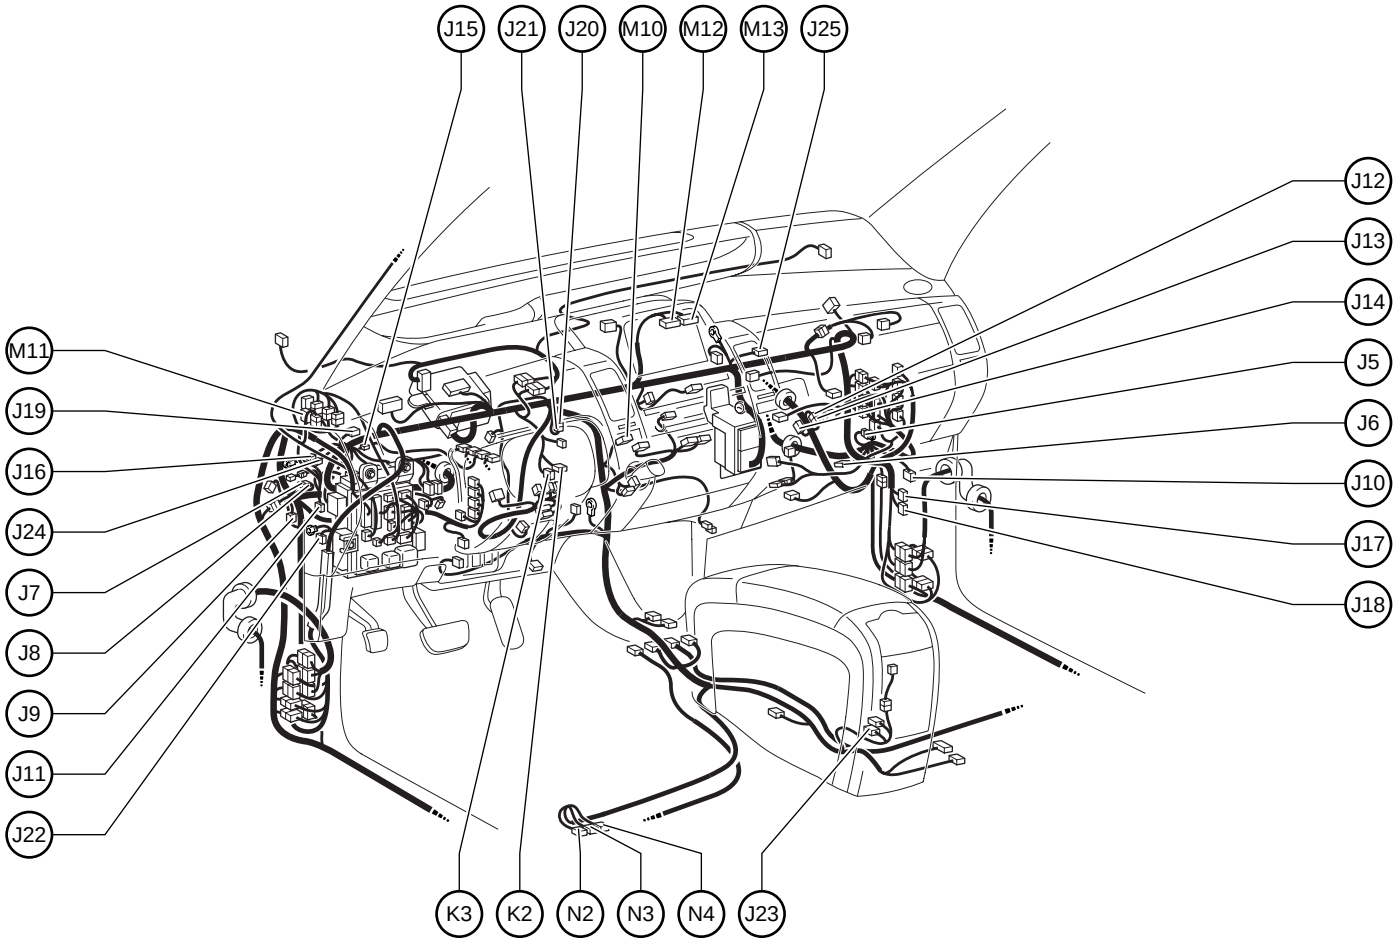

J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector

K 2 Key Slot
K 3 Key Slot

M10 Main SW
M11 Mirror Heater Relay
M12 Multi−Display
M13 Multi−Display

N 2 Navigation ECU
N 3 Navigation ECU
N 4 Navigation ECU