
Position of Parts in Instrument Panel

[LHD]

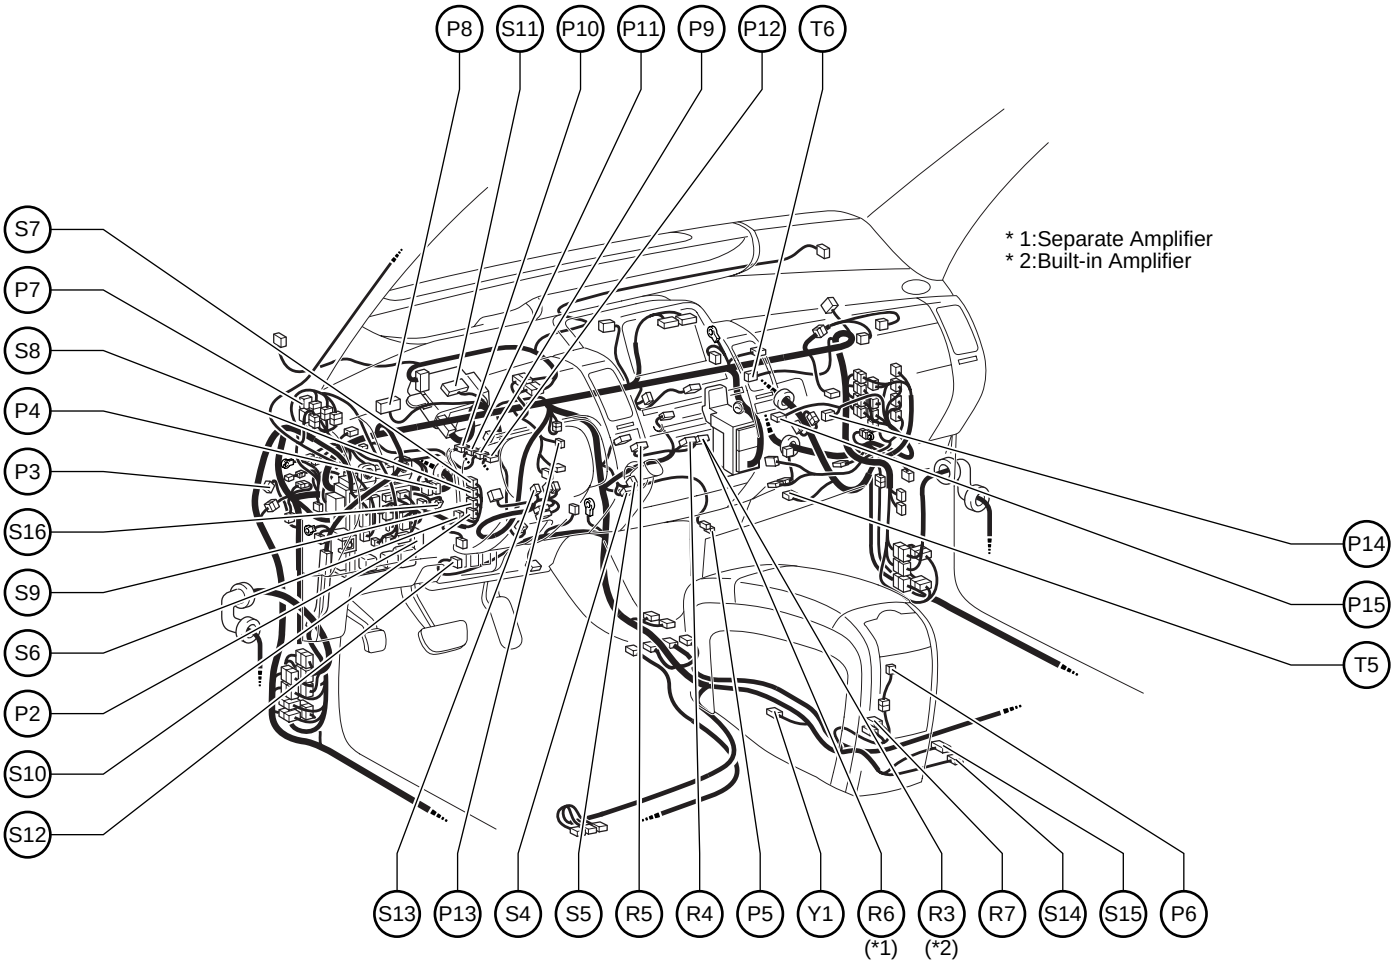

P 2 Panel Relay
P 3 Parking Brake SW
P 4 Pattern Select SW
P 5 Power Outlet No.1
P 6 Power Outlet No.2
P 7 Power Outlet Relay
P 8 Power Source Control ECU
P 9 Power Steering ECU
P10 Power Steering ECU
P11 Power Steering Motor
P12 Power Steering Torque Sensor
P13 Power SW
P14 PTC Heater
P15 PTC Heater

R 3 Radio and Player
R 4 Radio and Player
R 5 Radio and Player
R 6 Radio and Player
R 7 Room Oscillator

S 4 Shift Lever Position Sensor
S 5 Shift Lever Position Sensor
S 6 Skid Control Buzzer
S 7 Skid Control ECU
S 8 Skid Control ECU
S 9 Skid Control ECU
S10 Skid Control ECU
S11 Smart Key ECU
S12 Smart Key System Cancel SW
S13 Steering Sensor
S14 Stereo Component Amplifier
S15 Stereo Component Amplifier
S16 Stop Light SW

T 5 Transmission Control ECU
T 6 Transponder Key Computer

Y 1 Yaw Rate Sensor