
Position of Parts in Body

[LHD]

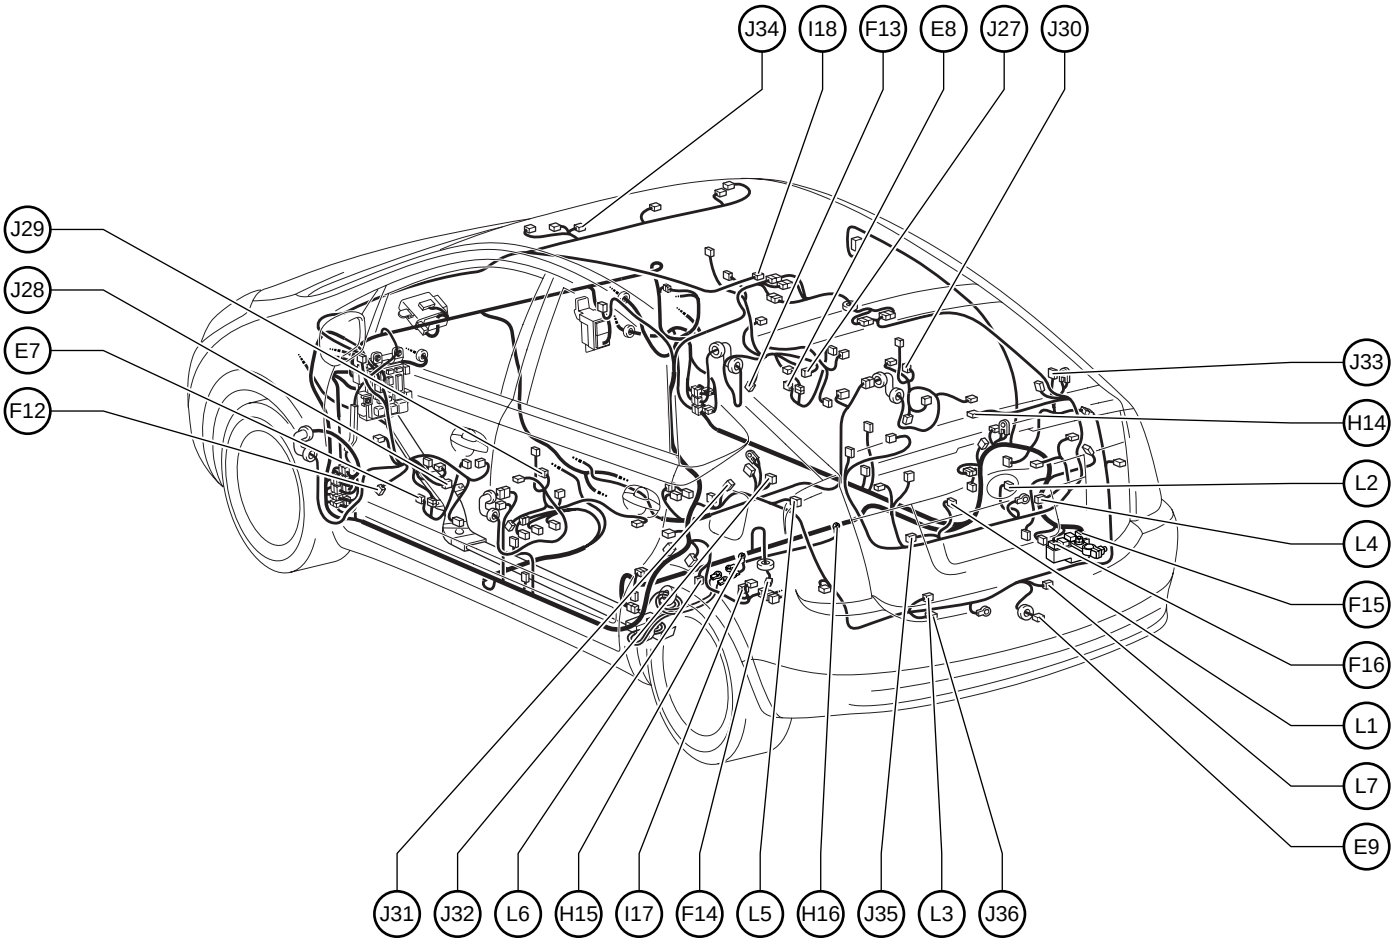

E 7 Electrical Key Antenna (Driver's Side)
E 8 Electrical Key Antenna (Front Passenger's Side)
E 9 Electrical Key Antenna (Luggage Compartment Door)

F 12 Front Door Speaker LH
F 13 Front Door Speaker RH
F 14 Fuel Pump
Fuel Sender
F 15 Fusible Link Block
F 16 Fusible Link Block

H14 High Mounted Stop Light
H15 Hybrid Vehicle Battery
H16 Hybrid Vehicle Battery

I 17 Inter Lock SW
I 18 Interior Light

J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Door Courtesy SW
Luggage Compartment Door Opener Motor
L 4 Luggage Compartment Door Lock SW
Luggage Compartment Door Opener SW
L 5 Luggage Compartment Light
L 6 Luggage Oscillator (Inner)
L 7 Luggage Oscillator (Outer)