
Position of Parts in Engine Compartment

[RHD]

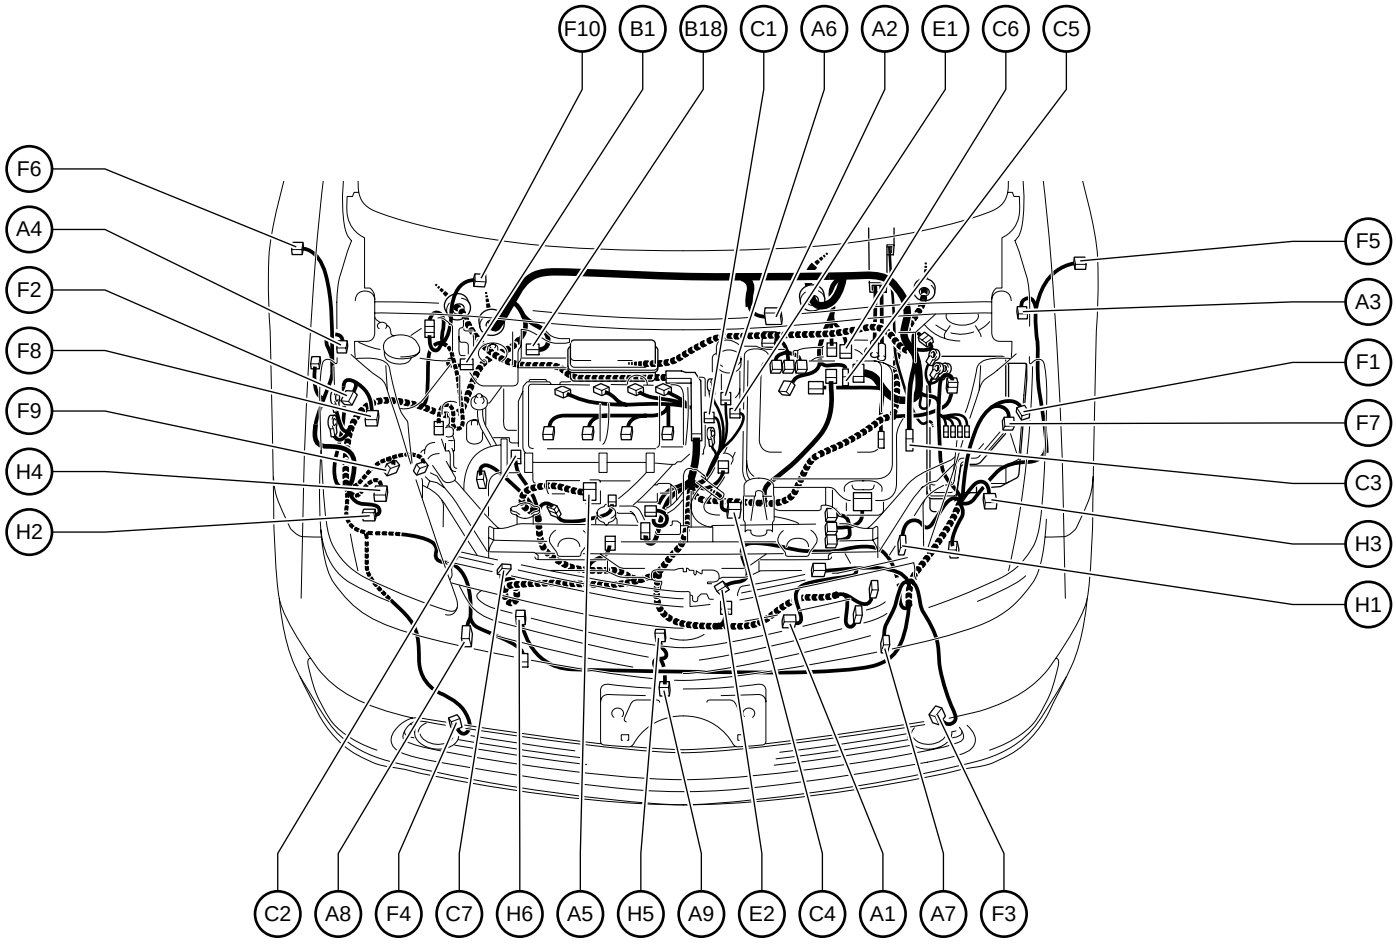

A 1 A/C Condenser Fan Motor
A 2 ABS & BA & TRC & VSC Actuator
A 3 ABS Speed Sensor Front LH
A 4 ABS Speed Sensor Front RH
A 5 Air Flow Meter
A 6 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 7 Airbag Sensor Front LH
A 8 Airbag Sensor Front RH
A 9 Ambient Temp. Sensor

B 1 Brake Fluid Level Warning SW
B18 Brake Master Stroke Simulator Cylinder Assembly

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Circuit Breaker Sensor
C 4 Compressor Assembly (Motor)
C 5 Converter
C 6 Converter
C 7 Crankshaft Position Sensor

E 1 EFI Water Temp. Sensor
E 2 Engine Hood Courtesy SW

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Washer Motor
F10 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight LH
H 4 Headlight RH
H 5 Horn (High)
H 6 Horn (Low)