
Position of Parts in Engine Compartment

[RHD]

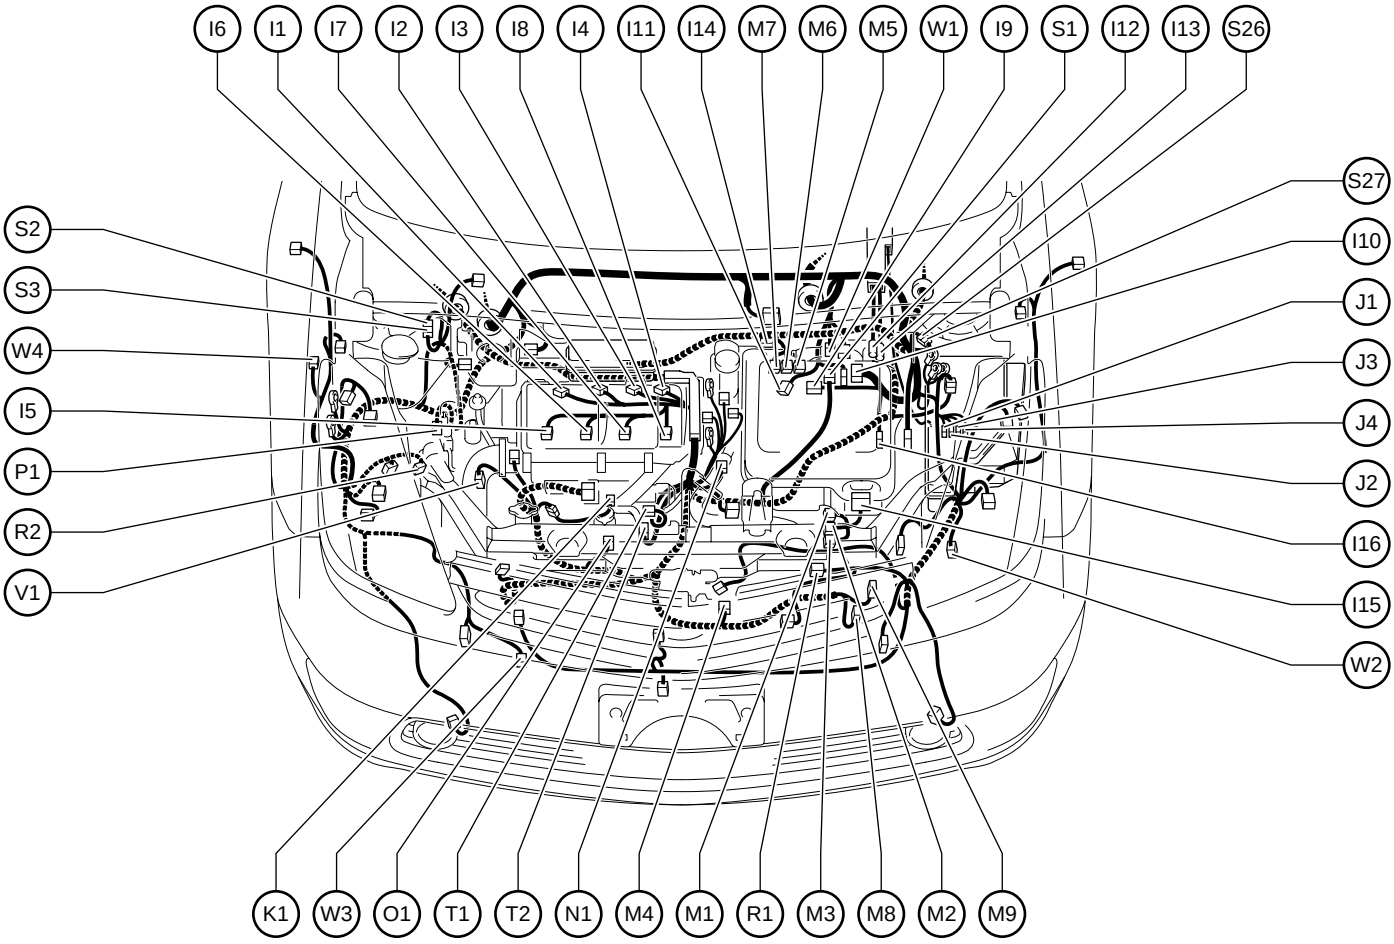

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Injector No.1
I 6 Injector No.2
I 7 Injector No.3
I 8 Injector No.4
I 9 Inverter
I 10 Inverter
I 11 Inverter
I 12 Inverter
I 13 Inverter
I 14 Inverter
I 15 Inverter
I 16 Inverter

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector

K 1 Knock Sensor

M 1 Motor Generator No.1
M 2 Motor Generator No.1
M 3 Motor Generator No.1
M 4 Motor Generator No.1
M 5 Motor Generator No.2
M 6 Motor Generator No.2
M 7 Motor Generator No.2
M 8 Motor Generator No.2
M 9 Motor Generator No.2

N 1 Noise Filter (Ignition)

O 1 Oil Pressure SW

P 1 Pressure SW

R 1 Radiator Fan Motor
R 2 Rear Washer Motor

S 1 Shift Control Actuator
S 2 Short Connector
S 3 Short Connector
S26 Short Connector (Water Pump)
S27 Short Connector (Water Pump)

T 1 Throttle Control Motor
T 2 Throttle Position Sensor

V 1 VSV (EVAP)

W 1 Water Pump Motor (A/C)
W 2 Water Pump Motor (Inverter)
W 3 Water Temp. SW
W 4 Wireless Door Lock Buzzer