
Position of Parts in Instrument Panel

[RHD]

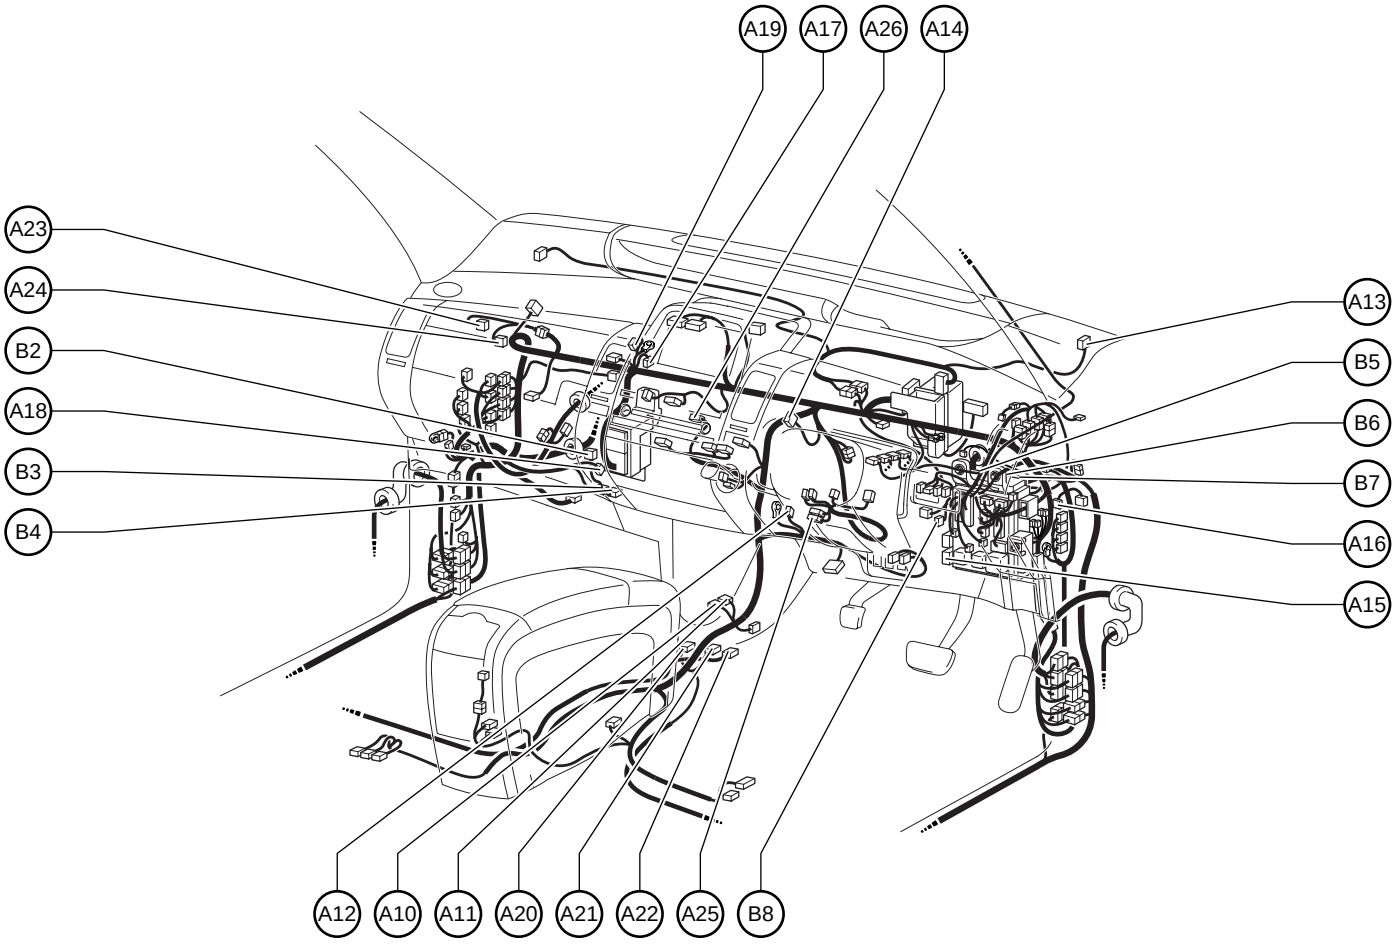

A10 A/C Control Assembly
A11 A/C Control Assembly
A12 A/C Room Temp. Sensor
A13 A/C Solar Sensor
A14 A/C Thermistor
A15 ACC Relay
A16 Accel Position Sensor
A17 Air Inlet Control Servo Motor
A18 Air Mix Control Servo Motor
A19 Air Vent Mode Control Servo Motor
A20 Airbag Sensor Assembly
A21 Airbag Sensor Assembly
A22 Airbag Sensor Assembly
A23 Airbag Squib (Front Passenger Airbag Assembly No.1)
A24 Airbag Squib (Front Passenger Airbag Assembly No.2)
A25 Airbag Squib (Steering Wheel Pad)
A26 Antenna Amplifier

B 2 Blower Motor
B 3 Blower Motor Controller
B 4 Blower Motor Controller
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU
B 8 Brake Pedal Stroke Sensor