
Position of Parts in Body

[RHD]

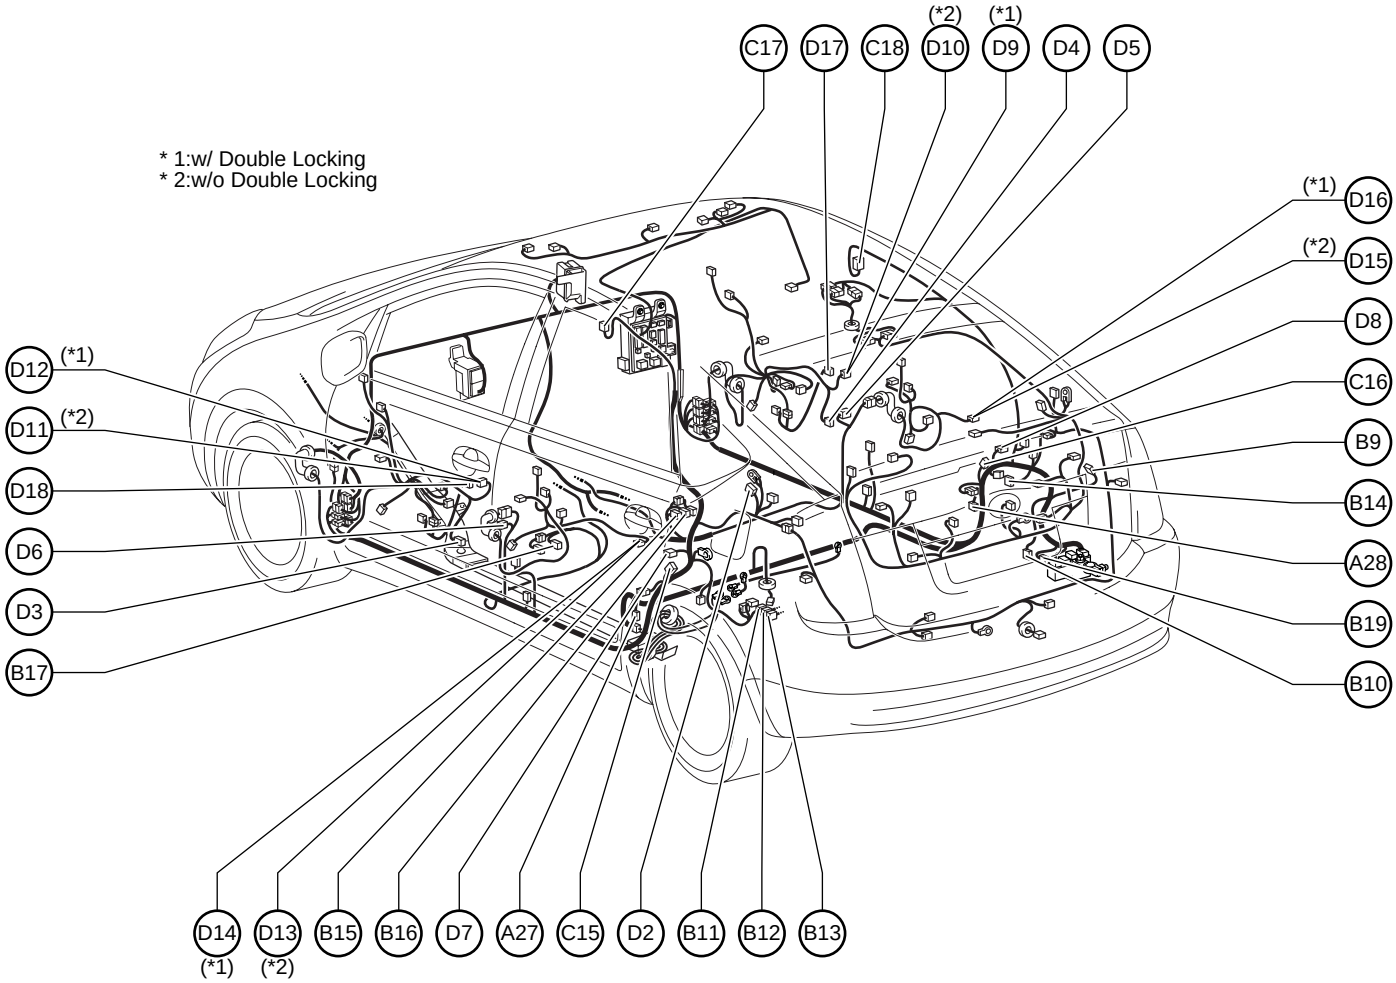

A27 ABS Speed Sensor Rear LH
A28 ABS Speed Sensor Rear RH

B 9 Battery Blower Motor
B10 Battery Blower Motor Controller
B11 Battery ECU
B12 Battery ECU
B13 Battery ECU
B14 Battery Fan Relay
B15 Buckle SW (Driver's Side)
B16 Buckle SW (Driver's Side)
Seat Position Airbag Sensor
B17 Buckle SW (Front Passenger's Side)
B19 Brake Control Power Supply

C15 Curtain Shield Airbag Sensor LH
C16 Curtain Shield Airbag Sensor RH
C17 Curtain Shield Airbag Squib LH
C18 Curtain Shield Airbag Squib RH

D 2 Door Control Receiver
D 3 Door Courtesy Light (Driver's Side)
D 4 Door Courtesy Light (Front Passenger's Side)
D 5 Door Courtesy SW (Driver's Side)
D 6 Door Courtesy SW (Front Passenger's Side)
D 7 Door Courtesy SW Rear LH
D 8 Door Courtesy SW Rear RH
D 9 Door Key Lock and Unlock SW (Driver's Side)
Door Lock Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
Double Lock Motor (Driver's Side)
Double Lock Position SW (Driver's Side)
D10 Door Lock Motor (Driver's Side)
Door Unlock Detection SW (Driver's Side)
D11 Door Lock Motor (Front Passenger's Side)
Door Unlock Detection SW (Front Passenger's Side)
D12 Door Lock Motor (Front Passenger's Side)
Door Unlock Detection SW (Front Passenger's Side)
Double Lock Motor (Front Passenger's Side)
Double Lock Position SW (Front Passenger's Side)
D13 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D14 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D15 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
D16 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Lock Motor Rear RH
Double Lock Position SW Rear RH
D17 Door Oscillator (Driver's Side w/ Sensor)
D18 Door Oscillator (Front Passenger's Side w/ Sensor)